

重点校对项

1. 物料编码

2. 版面尺寸

3. 材质标注

4. 颜色标注

5. 客户型号

6. 产品名称

7. 产品参数

8. 电压功率

9. 单位符号

10. 认证标志

11. 回型标志

12. ROHS标志

13. 警语警语及字高


14. 控制面板及功能

15. 目录及页码

16. 商标LOGO

标准元素核对表 (此表仅用于印刷品制作过程核对标准内容, 非印刷内容)

认证图标	
单位表述	直流电: V= 交流电: V- 频率: Hz 功率: W 容量: mL/L 电流: A 压强: Pa/kPa/MPa 长度: mm/cm/m 时间: s/min/h 重量: kg
产地表述	MADE IN CHINA Made in China Made in P.R.C
变更要求	图纸变更需要核实变更内容点以及涉及的物料和MO单, 尤其关注92的在途MO单

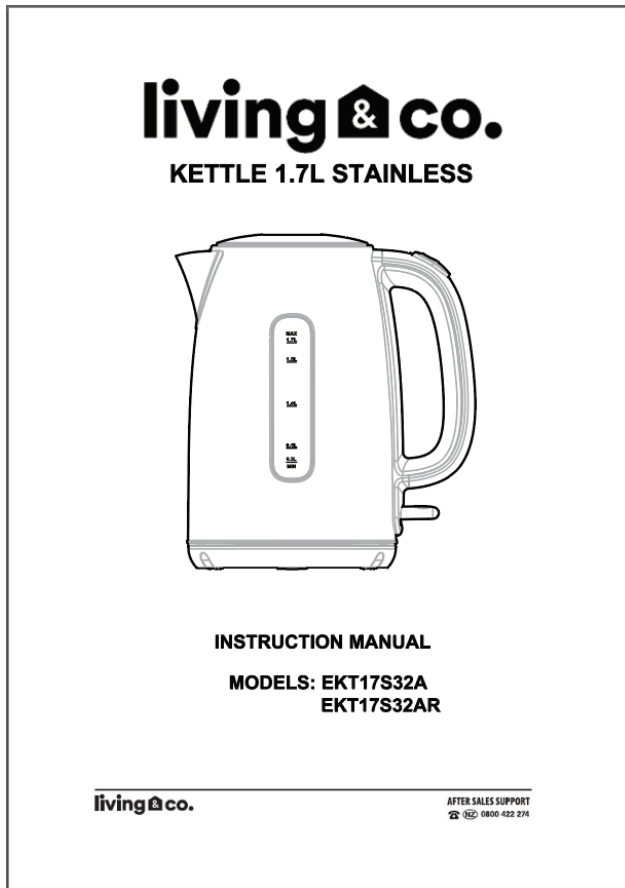

技术要求 (版本号: B, 2023-06)

- 文字图案印刷颜色为: 黑色, 印刷字体需清晰可见, 文字不能粘到一起;
- 该说明书的幅面大小为: A5, 未注直线尺寸公差应符合GB/T1804-v;
- 该说明书的装订方式为: 钉装; [70P以下为钉装, 70P以上为胶装 (特殊要求除外)]
- 说明书警语及认证标志应满足CE/UL标准, CE: 警语部分大写字母高度不低于3mm, CE标志不低于5mm, WEEE标志不低于7mm; UL: 大写字母字高不小于1/12" (2.11mm), 小写字母字高不小于1/16" (1.6mm), "IMPORTANT SAFEGUARDS", "SAVE THESE INSTRUCTIONS" 等词, 其字高不小于3/16" (4.8mm), IMPORTANT SAFEGUARDS 必须在最前面。
- 产品应符合QMG-J53.021《产品说明书技术条件》的有关要求。
- 有ROHS指令要求的物料应符合美的的企业标准QML-J11.006《产品中限制使用有害物质的技术标准》。

				电水壶		16161000A27779	
				说明书		Living&Co-MK-17S30A2 (EKT17S32AR) -0501	
标记	处数	更改文件号	签字	日期	材料: 100g双胶纸		
制图	田龙飞	审核	李艳	图样标记	重量	比例	广东美的生活电器制造有限公司
设计	-----	标准化	古广君	K	/	1:1	
校对	-----	审定	古广君	共 1 页		第 1 页	
会签	-----	日期	2024-10-25	共 1 页		第 1 页	

living & co.

KETTLE 1.7L STAINLESS



INSTRUCTION MANUAL

MODELS: EKT17S32A
EKT17S32AR

Contents


Important Safeguards	2-3
Product Overview	4
Operation	5
Cleaning and Maintenance	6
Removal Of Mineral Deposits	6
Responsible Disposal	7
Warranty	7

Important Safeguards

- Read all instructions before using.
- We recommend the use of a power outlet with a rated current of 10A. which is appropriately protected by an RCD. To avoid circuit overload, do not operate another high wattage appliance on the same circuit.
- Do not fill the kettle when positioned on the base, dry any excess or spilt water from the bottom of the body before placing it onto power base.
- Never leave the appliance unattended when in use.
- The attached base cannot be used for other than intended use.
- Do not operate the appliance without water to avoid damaging the heating element.
- Unplug from the outlet when not in use.
- Do not let the cord hang over edge of table counter or touch hot surface.
- Do not place on or near a hot gas or electric burner or in a heated oven.
- Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch it off. If this should occur, allow the kettle to cool before filling with cold water and re-boiling.
- Ensure that kettle is used on a firm, flat and level surface to prevent from overturning the kettle.
- To protect against a fire, electric shock or personal injury, do not immerse the cord, electric plugs, the base or the kettle in water or other liquids.
- Always take care to pour boiling water slowly and carefully without tipping the kettle too fast.
- Be careful when opening the lid for refilling when the kettle is hot.
- close supervision is necessary when any appliance is used by or near children, ensure kettle is positioned where children can't touch.
- Do not touch the hot surface. use the handle or the button.
- Extreme caution must be used when moving an appliance containing hot water.
- The use of attachments that are not recommended by the appliance manufacturer may result in fire, electric shock or personal injury.
- While boiling water, avoid to contacting steam from the spout when water is boiling or just after it has switched off.
- Unplug from socket outlet when not in use and before cleaning; Allow it to cool before putting on or taking off parts and before cleaning the appliance.
- Always ensure the lid is closed and do not lift it while the water is boiling,
- Scalding may occur if the lid is removed during the brewing cycles.
- The kettle lid must be closed when in operation.
- Do not use the appliance for other than its intended purpose.
- The kettle can only be used with the base stand provided.
- If the kettle is overfilled, boiling water may be ejected.
- Do not use the kettle outdoors.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- The kettle is not a Toy. Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by a qualified and registered service person in order to avoid a hazard
- This appliance is intended to be used in household and similar applications such
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments;
- Save these instructions.
- The appliance must not be immersed.
- Warning: Avoid spillage on the connector / base stand.
- CAUTION: Do not operate the kettle on an inclined plane, Do not operate the kettle unless the element is fully immersed. Do not move while the kettle is switched on.
- CAUTION: To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.

Product Overview

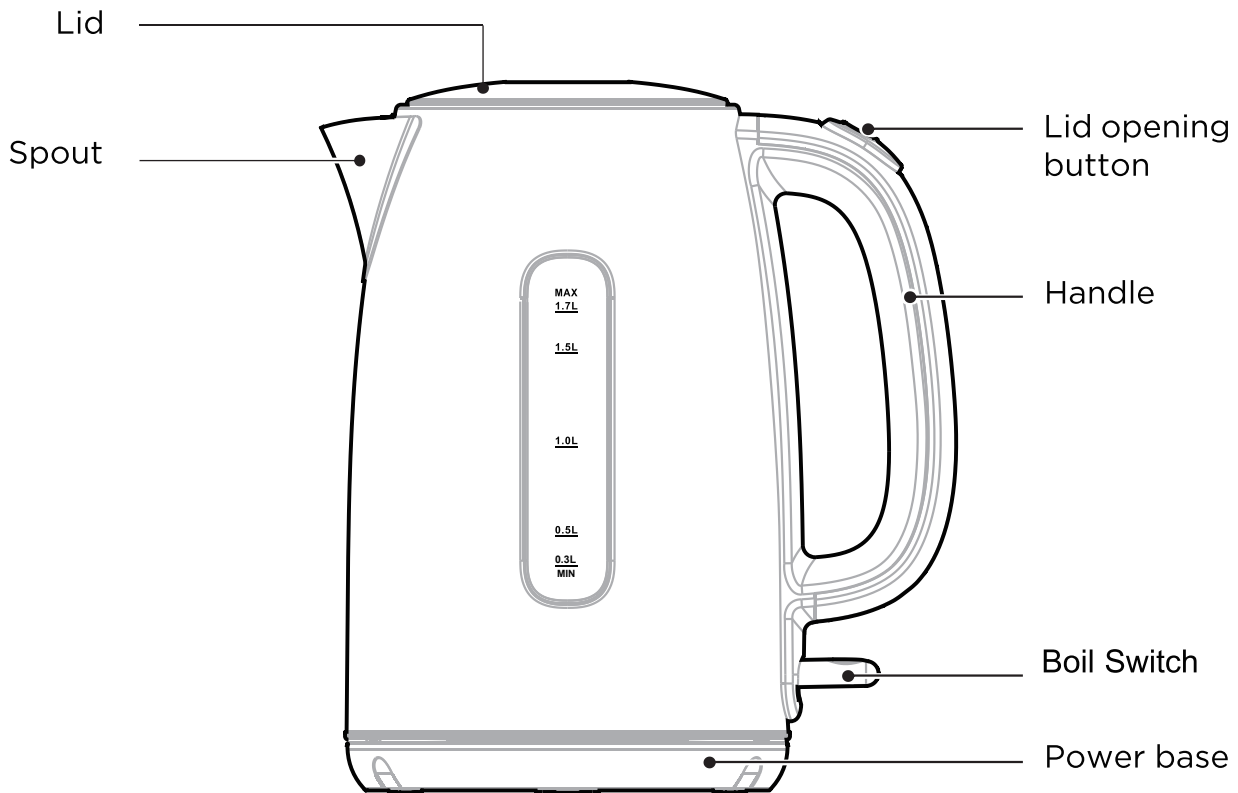

Before Using Your Kettle

If you are using the kettle for the first time, it is recommended that you fill to the maximum level with fresh water, boil and empty (discard kettle contents), repeat twice, discarding the water. This process will remove any impurities that were within the kettle as a result of manufacturing.

NOTE: The maximum capacity of the kettle is 1.7L, never overfill beyond the maximum level mark.

Operation

1). Position the power base on a level and solid support table or bench and near a suitable socket outlet. [Ensure you have read and applied the Important Safeguards earlier in this manual].

2). Only fill the kettle with water when removed from the power base. Press the lid-release button to open the kettle lid and fill the kettle with the desired amount of water and then close the lid. Alternatively, the kettle may be filled through the spout. The water level should not exceed the MAX mark or sit below MIN level. Too little water may result in failure of the automatic boil switch to operate.

CAUTION: Do not fill the water over the maximum level, as water may spill out of the spout when boiling. Ensure that the Kettle lid is firmly in place before connecting the power cord to the outlet.

3). Position the kettle on the power base, ensuring it is correctly aligned. Check the Kettle lid is firmly closed.

4). Plug the power cord plug into the socket outlet and switch on.

5). Press the boil switch down to switch on, the switch indicator light will illuminate, and heating will commence.

NOTE: Ensure the switch is free of obstructions and any external objects which could result in jamming of the lever.

6). The kettle will switch off automatically once the water has boiled. You may switch off at any time by manually lifting the boil switch up or directly lifting the kettle from the power base at any time, to stop boiling process.

7). Lift the kettle from the power base and pour the water.

CAUTION: Take care when pouring the water from your kettle as boiling water may result in scalding. Take extra care if opening the lid when the kettle is still hot.

Boil-Dry Protection

Should you accidentally allow the kettle to operate without water, the boil-dry protection will automatically switch the element off. If this should occur, allow the kettle to cool before filling with cold water and re-boiling.

Cleaning and Maintenance

Always disconnect the appliance from the power outlet and let it cool down before cleaning.

- Never immerse the kettle, power cord or power base in water, or allow moisture to contact with these parts.
- Wipe the external surfaces of the kettle body with a damp cloth with mild detergent only.
- **CAUTION: Do not use chemical, steel, wooden or abrasive cleaners to clean the outside of the kettle as this may damage the surface.**
- The spout filter should be regularly cleaned using a damp cloth and rinsing under fresh water.

Storage

When not in use or storage, the power cord may be wound around the cord storage under the base of kettle.

Removal Of Mineral Deposits

Mineral deposits in tap water may cause the kettle interior to discolor and allow the formation of limescale deposits. This can affect operation efficiency and will affect the taste of the water. To remove this build-up, use non-toxic Liquid Descaler.

Alternatively:

1. Fill the kettle with 1 Cup Of white vinegar and the remainder of water and be allowed to stand overnight. Do not boil.
2. Empty the solution from the kettle. Any stains remaining inside the spout can be removed by rubbing with a damp cloth, fill the kettle with clean water, bring to the boil and then discard the water. Repeat and the kettle will then be ready to use.

Responsible Disposal

At the end of its working life, do not throw this product out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area. Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.



Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features, and completely reliable. We are so confident in our products, we pack them up with a 2 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This product is covered by a 2 year warranty when

Accompanied by proof of purchase.

IM Version 1.0 - September, 2024