





4 SLICE TOASTER PINK



INSTRUCTION MANUAL MODEL TA5740-SA

AFTER SALES SUPPORT


  0800 422 274

Contents


| | |
|-------------------------------|---|
| IMPORTANT SAFETY INSTRUCTIONS | 3 |
| PRODUCT OVERVIEW | 4 |
| OPERATION | 5 |
| TOASTING TIPS | 5 |
| CAUTION / CARE AND CLEANING | 6 |

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliance. Basic safety precautions should always be followed including the following:

- Read all instructions before use.
- Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
- Do not touch hot surfaces. Use handles or press knobs / control buttons only.
- To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Unplug unit from the socket outlet when not in use and before cleaning.
- Allow the unit to cool completely before cleaning or storing.
- Do not operate an appliance with a damaged cord or plug, or in abnormal state. If its supply cord is damaged, it must be replaced by a qualified person.
- Do not let the cord hang over edge of table or counter, or touch hot surface.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Do not use the appliance for other than its intended use.
- Oversize food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock.
- Bread may burn, therefore toasters must not be used near or below curtains and other combustible materials, and they must be watched.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Use the appliance on a level and stable work surface.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- To avoid electrocution, don't attempt to dislodge food when in operation.
- Take care to remove the bread carefully after toasting, so as avoid contact to avoid contact with hot surfaces.
- Do not use the appliance outdoors.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
-  The Hot surface warning symbol marked on the appliance means that the appliance may be hot during use.
- Save these instructions.

PRODUCT OVERVIEW

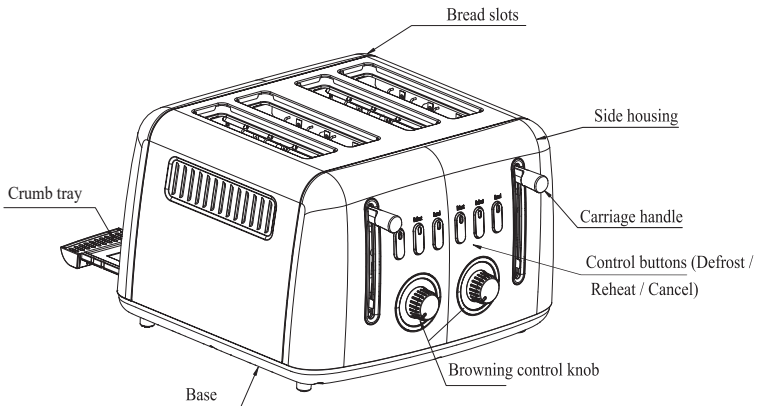

REMOVAL FROM PACKAGING

The toaster has been packaged using sustainable materials where possible, including the use of tissue paper to protect the external enclosure surface from scratches during transit.

Please take extra care to ensure all packaging materials including tissue paper has been removed from the sides and from the bread slots. If the paper is quickly pulled away from the bread slots, this may result in small pieces catching on the element guards and tearing off. Before first use, please check no tissue paper remains.

FOR THE FIRST USE

During manufacturing, residual oils may impinge on the heating element, this will often cause a brief emission of odour and a very small amount of smoke during first use. This is normal and will not occur after several operations. For the first use it is suggested to operate according to the below steps, except without bread. Then let the toaster cool down before toasting the first slice.

OPERATION


1. Insert bread slices into the bread slot, use one piece of bread per slot. Never attempt to force oversized bread. This appliance has two independent control units (2 slots controlled by each), each pair can operate independently or together.
2. Plug the power cord into the socket outlet and switch the outlet on.
3. Turn the browning control knob to the desired setting. This controls the on time of the heating cycle, with the lower settings resulting in minimal toasting, the higher settings resulting in increased toasting (darker). The middle positions will typically toast bread to a golden colour.
4. Press carriage handle down vertically until it locks in place and the indicator light of the Cancel button will illuminate, toasting will begin.
5. Once the bread has been toasted to the preset time, the carriage handle will automatically spring up.
CAUTION: This is considered as an attended appliance never operate the toaster and leave the room.

Control panel configuration:



Browning control positions 1-7

REHEAT DEFROST CANCEL

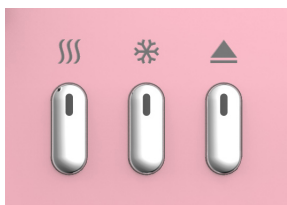

TOASTING TIPS:

- Make sure the crumb tray is correctly positioned in place before using.
- Toasting colour for one slice may be darker than that when toasting bread with both slots at the same time.
- If toasting continuously, toasting colour for the latter bread is darker than that for the initial bread at the same level.
- During the toasting process, you may observe the toasting colour, you can press the Cancel button to abort the operation at any time.
- If the bread has just been taken out from freezer, press “Defrost” button, after pressing the carriage handle down. This setting will compensate for the frozen state of the bread, to extend the cooking time.
- If you want to reheat cold toasted bread, press the “Reheat” button. In this mode toasting time is fixed, the carriage handle will automatically spring up and end up the reheating process.

CAUTION

- If the toaster starts to smoke, press Cancel to stop toasting immediately.
- Remove all protective wrapping prior to placing in toaster.
- Avoid toasting the food with extremely runny ingredients such as butter.
- Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Take care not to damage the internal mechanism or heating elements when removing bread.
- The bread slot is only intended for toasting regular bread slice. Irregular bread or round bread cannot be toasted in the bread slot.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Keep the appliance and its cord out of reach of child less than 8 years.
- The outer surface may get hot when the appliance is operating.

CARE AND CLEANING

- Disconnect the supply plug from the socket outlet before cleaning.
- Wipe the outside with soft dry cloth after toaster cools down, never use metal polish. A lightly dampened cloth may be used on the outer body if necessary, but take care not to allow moisture into the bread slots.
- Pull out crumb trays on bottom of toaster and empty them. If toaster is used frequently, accumulated breadcrumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
- When not in use or during storage, the power cord may be wound under the bottom of toaster.
- Store in a location that will prevent entry of dust or foreign objects into the toast slots.
- Never expose the toaster body to liquids, never store or place near a sink / tub of water.



Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features, and completely reliable. We are so confident in our products, we pack them up with a 3 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This product is covered by a 3 year warranty when Accompanied by proof of purchase.

IM Version 3.0 – October, 2024

