




Cordless Steam Iron

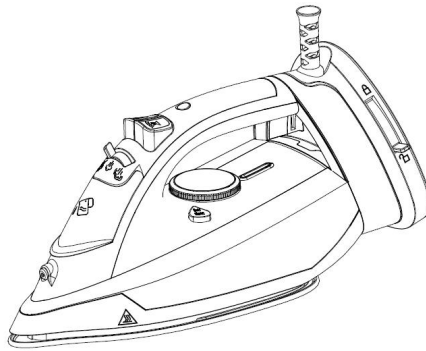

INSTRUCTION MANUAL

Model no.: YPF-6525

CONTENTS	Page
IMPORTANT SAFEGUARDS	2-3
PRODUCT OVERVIEW	4
BEFORE FIRST USE	4
HOW TO USE YOUR CORDELSS IRON	5-8
CLEANING AND STORAGE	8

IMPORTANT SAFEGUARDS

INTRODUCTION

Before use, please read these instructions carefully and keep them in a safe place for future reference. When passing on the appliance to another person, make sure to include these instructions for use.

This appliance is intended for ironing textiles for private use only. It is not suitable for commercial use.

Only use this appliance for its intended use as described in this instruction manual. In order to avoid any risks or hazards possibly involved in the use of electric appliances, closely follow the safety instructions given in this manual.

SAFETY INSTRUCTIONS

When using any electrical product, always follow these basic safety precautions :

- Read this user manual carefully before first use and save it for future reference.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- This product has been designed for domestic use only. In case of any commercial use, inappropriate use or failure to comply with the instructions, the warranty will not apply.
- Before connecting your appliance, check if the mains voltage is the same as the voltage indicated on your appliance and that the power outlet has an earth connection. If unsure check with an electrician.
- Before each use ensure that the electric cord or any other parts on the iron are not damaged. If any damage is evident, do not use .
- If the supply cord is damaged, it must be replaced by qualified electrical person only.
- Keep the iron and its cord out of reach of children when it is connected to mains power when cooling down.
- Never direct the steam towards persons or animals. Never direct the steam jet towards any other electrical or/and electronic appliances.
- DO NOT use the iron if it has been dropped, if there are visible signs of damage, malfunction or if it is leaking after being filled with water.
- High temperatures develop at the soleplate of the steam iron which can cause serious burns. Therefore, always hold the appliance by its handle and warn others (especially children) against possible hazards (e.g. scalding from steam or hot water).


IMPORTANT SAFEGUARDS (CONT.)

- Always make sure the appliance is switched OFF, unplugged and cooled down before cleaning.
- **IMPORTANT!** The iron must not be left unattended whilst connected to mains power and before it has cooled down. The soleplate of the iron can become extremely hot and may cause burns if touched.
- Do not unplug the appliance by pulling on the cord or on the appliance. Always disconnect from mains power by pulling on the plug.
- Never immerse the iron, the stand, the power cord or the plug in water or other
- Never wash these parts under a water tap.
- Do not use the appliance with wet hands.
- Do not use the appliance outdoors
- The plug must be removed from the socket-outlet before filling the water reservoir water.
- The iron must be used and rested on a flat, stable surface.
- When placing the iron on its stand, ensure that the surface on the stand is placed is stable.
- To avoid an overloaded on the electrical circuit, do not operate another high power appliance on the same circuit.
- Only fill with water, no other liquids or additives!
- **WARNING!** Never attempt to iron clothes on the body!

FIRST TIME USE:

- Due to processes, some of the metal parts of the iron may have been in contact with lubricants, as a result the iron may emit a slight smoke or odour when switched on for the first time. Operate in a well ventilated area for first use. Any odour should clear after subsequent uses.
- Before using for the first time remove any protective films or stickers from the soleplate and the cabinet. Clean the soleplate with a soft damp cloth
- When using the iron for the first time, test it on an old piece of fabric to ensure that the soleplate and water tank are completely clean.

PRODUCT OVERVIEW

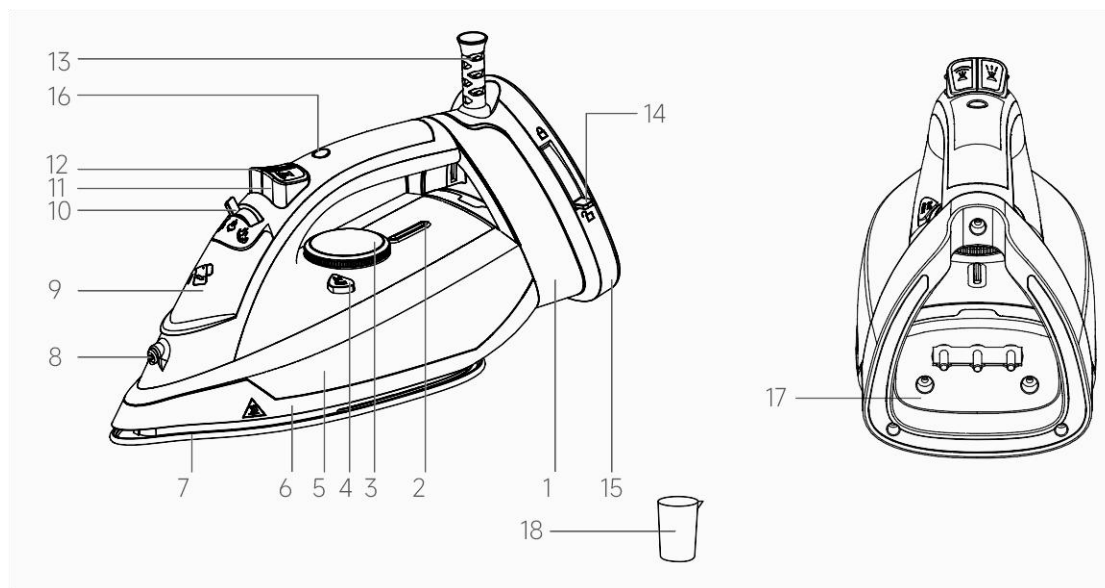

- | | |
|--------------------------|--|
| 1. Decorative circle | 2. Heating indicator light |
| 3. Temperature knob | 4. Self clean button  |
| 5. Water tank | 6. Skirt |
| 7. Soleplate | 8. Spray nozzle |
| 9. Water inlet cover | 10. Steam dial |
| 11. Burst button | 12. Spray button |
| 13. Cord guard | 14. Release switch |
| 15. Adapter (detachable) | 16. Auto-shut off indicator light |
| 17. Rear cover | 18. Water cup |

Technical Specifications

Model	YPF-6525
Power Consumption	2200W
Rated Voltage	220-240VC 50/60Hz

BEFORE FIRST USE

Notes:

Some parts of the iron have been slightly greased and as a result, the iron may smoke slightly when switched on for the first time. It will not happen again after a few uses.

When using the iron for the first time, test it on an old piece of fabric to ensure that the sole plate and water tank are completely clean.

HOW TO USE YOUR CORDLESS IRON

IRONING WITH AND WITHOUT MAINS CABLE

This iron can be used both with and without a mains cable.

For cordless ironing, move the release switch (14) on the adapter (15) to the position 

--the iron is released from the adapter (15).

For ironing with the mains cable, place the iron back on the adapter and move the release switch (14) on the adapter (15) to the position  in order to fix the adapter (15) on the iron.

If the mains cable is connected to the iron during ironing, the set temperature is maintained constantly and at all times. The device works like a conventional iron,

In the case of cordless ironing, the temperature drops after a little while. The iron needs to be set temperature is maintained. The intervals are slightly longer with dry-ironing than they are with steam-ironing.

IRONING

Important: Have you read the section "Important Safeguards"?

CHOICE OF WATER

- This iron can be used with normal tap water.
- If the water in your area is particularly hard, it is advisable to use distilled or deionized water.
- Do not use chemically descaled water or any other liquids for refilling.

HOW TO FILL IN WATER

- Set the Steam Control knob to  and the Temperature Control Dial to OFF.
- Unplug the iron from the wall outlet, and wait for the iron to cool down.
- Pour water into the water inlet (9).
 - Fill up to the maximum level "MAX" of the water tank.

HEATING UP THE IRON

1. Check the label in the garment for the required ironing temperature (see the "Ironing Recommendations" chapter) and set this temperature using the temperature control (3).
2. Move the Steam dial (10) to position  (steam off).
3. Connect the adapter (15) to the rear cover (17) of the iron. The three contacts in the rear cover must be plugged into the three openings in the adapter (15). Move the release switch(14) on the adapter to the position  in order to fix the adapter(15) on the iron.
4. Place the iron with the adapter (15) on the ironing board or on a stable, flat, heat resistant and moisture-resistant surface.
5. The device starts to heat up. As this happens, the heating indicator light(2) and auto-shut off indicator light(16)lights up. When the heating indicator light(2) went out, the soleplate (7) has reached the set temperature. The iron is ready for use.



6.

HOW TO USE YOUR CORDLESS IRON(CONT.)

TEMPERATURE CONTROL SETTING

- Always check garment label for ironing instructions before ironing garment.
- If the ironing instructions are missing, then the table below may help you.
- First you should sort the laundry: Wool with wool, Cotton with cotton etc. Start ironing the fabrics requiring the lowest temperature and progress to the higher ones because the iron heats up quicker than it cools down.
- If the fabric consist of various kinds of fibre (e.g. cotton with polyester) you must always select the ironing temperature for the material with the lowest advised temperature.



<i>Temperature Dial (10) Position</i>	<i>Garment Type</i>
● Position (Low temperature)	Nylon, Silk or Synthetics
●● Position (Medium temperature)	Wool or Mixtures
●●● Position (High temperature)	Cotton or Linen

SETTING THE TEMPERATURE

- Insert the plug in the wall socket and stand the iron upright.
- Turn the temperature control knob (3) to the desired temperature setting.
- The desired temperature has been reached when the heating indicator light has turned off. The heating indicator light will turn on and off from time to time, indicating that the selected temperature is being maintained.

SPRAYING

This function can be used any time and it does not affect the ironing temperature.

- Fill water into the iron as described on page 4.
- Aim the nozzle towards the garment.
- Press the Spray Button (12).

HOW TO USE YOUR IRON(CONT.)

STEAM IRONING

This function can be used only at higher ironing temperature.

	Low steam
	High steam

- Fill water into the iron as described on page 4.
- Stand the iron upright.
- Connect the iron to a suitable mains supply outlet
- Turn the temperature control (3) to “●●” (wool) , “●●●” (cotton) or linen
- The heating indicator light (2) turns off when the required temperature is reached. The iron is ready for use.
- Turn the steam knob(10) to the required position, steam starts coming out from the holes in the sole plate.
- When auto-shut off indicator light(16) flashes, it indicates that the iron has turned on the auto off function and is ready for use again. Just shake the iron to resume its operation.

Notice: With conventional steam ironing ,water may leak from the sole plate if too low a temperature has been select. If this happens, turn the temperature control(3) to the advised position. Steam will recommence as soon as the appropriate temperature has been reached.

BURST OF STEAM

This function provides an extra amount of steam to remove stubborn wrinkles.

- Fill the iron with water as described on page 4.
- Turn the temperature control to the position “MAX”
- The pilot light turns off when the required temperature is reached
- The iron is ready for use
- Press the Burst of Steam button (11) once
- Steam will penetrate into the garment removing the wrinkles
- Wait a few seconds before pressing the steam control knob again when there are stubborn wrinkles

Usually all wrinkles can be removed within three pressings

DRY IRONING

- Connect the iron to a suitable mains supply outlet.
- Ensure that the steam control knob(10) is in position”  ”
- Select the setting on the temperature control (3).
- When the pilot light turns off, the required temperature is reached. The iron is ready for use.
- When the auto-shut off indicator light(16) flashes, it indicates that the iron has turned on the auto off function and is ready for use again. Just shake the iron to resume its operation.

HOW TO USE YOUR IRON(CONT.)

SELF-CLEAN FUNCTION

- Unplug the iron, set the steam control lever to position " NO STEAM  and fill the water tank to **MAX**.
- Set the temperature dial to **MAX**, plug in the iron and wait for the temperature indicator light to go out.
- Unplug the iron and place it horizontally over a sink.
- Press and hold the self-clean button for 1 minute, steam will now begin to build up. After a few seconds, boiling water will come out of the soleplate. Impurities and flakes (if any) will be flushed out.
- Carefully shake the iron forwards and backwards to allow any scale and other deposits to expel with boiling water and steam.
- Release the self-clean button when the water tank is empty.
- Plug in the iron and allow the iron to heat up again. Wait until the remaining water has evaporated.
- Unplug from the mains and allow the iron to fully cool down. When cool, the soleplate can be wiped with a damp cloth.

Anti-drip

When iron break power supply, no closed steam, prevent floor water leakage.

Auto-off

1. Place the iron flatly. The auto off lamp cover (16) flashes after 30 ± 5 seconds. The auto off function is activated. Shake the iron, and the auto off function ends. Then it can be used again.
2. Place the iron vertically. The auto off lamp cover (16) flashes after 8 ± 1 minutes. The auto off function is activated. Shake the iron, and the auto off function ends. Then it can be used again.

CLEANING AND STORGE

1. Turn the Temperature Control Dial to OFF, then disconnect the iron from the wall outlet and let it cool down completely.
 2. Deposits and other residues on the sole plate can be removed with a cloth soaked in a vinegar/water solution.
 3. The casing may be wiped with a damp cloth and then polished with a dry one.
 4. Never use any abrasives to clean the sole plate.
 5. Keep the sole plate smooth; avoid contact with metal objects.
- Turn the temperature control (3) to "•" and set the steam control knob (10) to position "  "(=no steam).
 - Disconnect the iron from the wall outlet.
 - Pour any remaining water out of the water tank.
 - Stand the iron upright and let it cool down completely.
 - The power cord can then be wound around the iron.
 - Always store the iron in an upright position.

SAFETY PROTECTIVE CUT-OUT

In the unlikely event of the thermostat failing, the protection cut-out will operate to prevent the iron overheating. Then the iron should be taken to the nearest authorized service facility.



living & co.

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with 1 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This Product is covered by 1 year warranty when accompanied by proof of purchase