

living & co.

VACUUM CLEANER



Instruction Manual
Model V20C01B-180

AFTER SALES SUPPORT

  0800 422 274

- If the power cord or plug is damaged, it should be replaced by a professional repair shop in order to avoid hazard.
- This appliance is not intended for use by persons (including children) with physical, mental or sensory handicaps, or by persons inexperienced or unfamiliar with the appliance, unless under supervision or in accordance with the instructions as communicated to them by persons responsible for their safety. Children shall not play with the appliance.
- This appliance can be used by children aged 8 years and older or by persons with physical, mental or sensory handicaps, or by those who are inexperienced or unfamiliar with the appliance, provided they are supervised or have been instructed how to safely use the appliance and are familiar with risks associated with the use of the appliance. Ensure that children do not play with the appliance. Do not allow children to clean and maintain the appliance unless they are 8 years or older and are supervised by a competent person.
- Do not use the appliance if it shows any signs of damage to the power cord, or if the appliance has been dropped on the floor.
- Do not expose the appliance to rain or humidity, and do not

use it outdoors. Do not operate the appliance with wet hands.

- This appliance is not intended for use at altitude greater than 2000 metres above sea level
- If you want to turn off the appliance completely, pull the plug out of the wall outlet.

Responsible Disposal

At the end of its working life, do not throw this product out with your household rubbish.

Electrical products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately.

Observe any local regulations regarding the disposal of electrical consumer goods and batteries, then dispose of it appropriately for recycling.

Contact your local authorities for advice on recycling facilities in your area.

In the event it is to be disposed of, please recycle all packaging material where possible.

Carefully read this instruction before using the appliance.

This appliance is for household use only.

Note! Packaging materials (bags, polyethylene, polystyrene, etc.) should be kept away from children during unpacking.

Children do not realize the dangers that can arise when using electrical appliances; therefore keep the appliance out of reach of children.

Do not immerse the body of the appliance in water or other liquids. Immersing in water may cause an electric shock.

If water spills on the external components of the appliance, dry it thoroughly before switching back on. Do not touch wet surfaces in contact with the appliance connected to power supply, immediately disconnect it from the mains.

When pulling out the plug from the wall outlet, never pull by the cord, only the plug, holding the socket with your other hand.

Do not attempt to remove any parts of the housing.

Using attachments that were not supplied with the product may cause damage to the appliance.

Never place the appliance on hot surfaces.

Do not place the cord over sharp edges or near hot surfaces.

Before you put the plug into the wall outlet, make sure your hands are dry.

Do not put any objects inside the appliance.

Make sure that the voltage indicated on the nameplate corresponds to that of your home electrical mains. Alternating current must be used, typically marked ~.

This appliance is intended for use at home or in facilities, such as kitchen for employees; in shops, offices and other working environments, use by the customers of hotels, motels and other residential facilities, in rural residential buildings, in the accommodation facilities.

Pull the plug from the wall outlet before replacing accessories.

Do not pull the vacuum cleaner or move it by the cord, do not use the cord as a handle, do not close the door squeezing the cord, do not place the cord over sharp edges or near hot surfaces. Be careful not to move the vacuum cleaner on the cord.

Do not insert any objects into the openings in the vacuum cleaner. Do not use the vacuum cleaner when any opening is blocked, dispose of dust, lint, hair and anything that may restrict air flow.

Keep hair, loose clothing parts, fingers and other body parts away from the openings and moving parts.

Do not use the vacuum cleaner to collect flammable substances such as petrol, and do not use it in places where similar substances may be present.

If the appliance has a winder, hold the plug while winding up the cord. Do not let the plug was left loose during retracting.

Do not collect any items that burn or smoke, such as cigarettes, matches or hot ashes.

Do not use the vacuum cleaner without a dust bin and/or filters.
If the opening, which sucks air, hose or telescopic tube are clogged, you should immediately turn off the vacuum cleaner. Before restarting the vacuum cleaner, first remove the blocking item.
Do not use the vacuum cleaner too close to heaters, radiators, cigarette butts, etc.

Before using the vacuum cleaner, remove sharp objects from the floor to avoid damaging the dust bag.

Do not collect fine particles such as: flour, gypsum, printer toners, etc., as this may clog filters and damage the vacuum cleaner.

Make sure that extension tube is fully withdrawn before you put away your vacuum cleaner either in vertical or horizontal position.

SPECIFICATION:

Power specification:	AC 220-240V~ 50-60Hz
Nominal power:	1600W
Maximum power:	1800W
Weight (without accessories)	5.3 kg

YOUR APPLIANCE:

1. Floor head 2-in-1 brush
2. Metal tube
3. Dust bin
4. Hose connection
5. Two in one brush (crevice tool)
6. Rear wheel
7. Hose
8. Dust bin release button
9. Handle
10. On / off button
11. Power cord retract button
12. Variable power control dial



Assemble the appliance

Always unplug the appliance before attaching or removing attachments!

- Insert the end of the hose into the inlet opening. Push until the end falls into place with an audible click.



- Remove the hose - press buttons on the hose end, unlatch and remove the hose from the inlet port



- Connect the telescopic tube with the hose and the brush.
- Extend the telescopic tube to the desired length.
- Before you start vacuuming, extend power cord cable to sufficient length and insert the plug into the wall socket. The yellow mark on the power cord indicates it is extended almost all the way. When you see the red mark do not pull the power cord any further.
- Use the on/off button to turn on the appliance. When you have finished using the appliance, press the on/off button to turn off the vacuum cleaner.
- Unplug the cord from the wall outlet.
- Wind up the connecting cord by pressing the power cord retract button. To do this hold the cord to prevent it from tangling or bumping the plug on the vacuum cleaner housing.
- Disconnect the suction attachment — cleaning head from the tube and disconnect the telescopic tube from the hose.
- Close the telescopic tube.

The vacuum cleaner may be stored in a vertical position. The hose can remain attached to the vacuum cleaner, but please be careful not to bend it too much during storage.

Note! Figures are for illustrative purposes only. Individual models may vary.

CLEANING AND CARE:

Empty the dust bin

Unplug the power cord from the power wall outlet before cleaning. Empty the dust container, when the vacuum cleaner becomes louder or when the suction power has decreased. Check if dust container is full after each use. If necessary, empty the container.

- Hold the dust container and the handle and press the release button.



- Remove the dust container from the appliance.
- Open the top cover of the dust container, then empty the dust into the waste bin.

If the vacuum cleaner loses power, check how full the container is. If the dust container is not full, check whether the suction brush or the hose or tube is blocked with large items stopping the air flow. After removing any obstruction, start the appliance again.


Clean and replace the inlet filter

- Before cleaning the filter, remove the power cord plug from the wall outlet.
- The filter shall be cleaned when there are visible stains on it, wash the filter in warm water with no detergent. Use it only when completely dry.
- Always use the vacuum cleaner with a filter in place.
- Failure to install the filter may result in motor damage.

CLEAN AND REPLACE THE HEPA EXHAUST FILTER

- Before cleaning the filter, remove the power cord plug from the wall outlet.
- Clean the filter when it is clearly soiled. Shake dirt off the filter and then brush it with a soft bristle brush. Then rinse the filter in lukewarm water and do not use any detergent. Do not direct strong jet of water onto the filter. Use it only when completely dry. If the filter is too dirty or damaged replace the filter with a new one.
- Depending on the intensity of use, it is recommended that you clean the filter once a month
- Always use the vacuum cleaner with a filter in place.


1. Open the air exhaust cover.

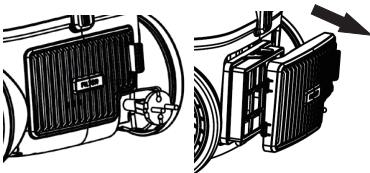

2. Remove the filter, clean it or replace it with a new one.
3. Close the air exhaust cover.

Cleaning filters.

Rinse the filter with warm water and let dry completely.

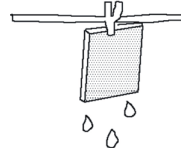

In the event of any fault:

- Turn off the appliance:
- Unplug the appliance from power.
- By following the instructions given in the table below, you can correct some minor issues. Please check all points in the table before you refer the repair to customer service.

Problem	Reason	Remedy
1. The appliance does not work	No power	Check the circuit breaker, reset if tripped, replace a blown fuse
2. Reduced suction power of the vacuum cleaner	Vacuum cleaner hose clogged	Remove dust, hair, and other obstructions that may reduce airflow.

If the problem is not solved, unplug the appliance from power and report the fault to the nearest service centre. Note! All repairs must be performed by qualified service technicians.

Note! Figures are for illustrative purposes only. Individual models may vary.



Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with a 1 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This Product is covered by 1 year warranty when accompanied by proof of purchase.

IM Version 1.0 - May 2025