

living & co.

COFFEE & SPICE GRINDER



INSTRUCTION MANUAL

Model: CG9701-CB

Contents

Important Safeguards	1
Product Overview	2
Before The First Use	2
Using Your Coffee & Spice Grinder	3
Cleaning And Maintenance	4
Grinding Tips	4
Warranty	5


IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed including the following:

1. Read all instructions.
2. Before using, check that the voltage of wall outlet corresponds to the one shown on the rating plate.
3. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorised service facility for examination, repair or electrical or mechanical adjustment.
4. If the supply cord is damaged it must be replaced by the manufacturer or an authorised service agent or a qualified technician in order to avoid a hazard.
5. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning.
6. Do not let cord hang over edge of table or hot surface.
7. Do not immerse the motorised base in liquid, or place in dishwasher. Damage to the unit will occur if submerged in liquid or filling the liquid into the container. Only the transparent top cover may be immersed.
8. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction by a person who is responsible for their safety concerning the use of the appliance.
9. Children should be supervised to ensure that they do not play with the appliance.
10. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
11. Ensure fingers are kept well away from moving parts.
12. Do not remove cover until blade has completely stopped.
13. Do not attempt to operate without the cover being in place.
14. The use of accessories not recommended by the manufacturer may cause injuries to persons.
15. Check grinding bowl for presence of foreign objects before using.
16. Do not operate the appliance for other than its intended use.
17. Do not use outdoors.

**SAVE THESE INSTRUCTIONS
HOUSEHOLD USE ONLY**

PRODUCT OVERVIEW

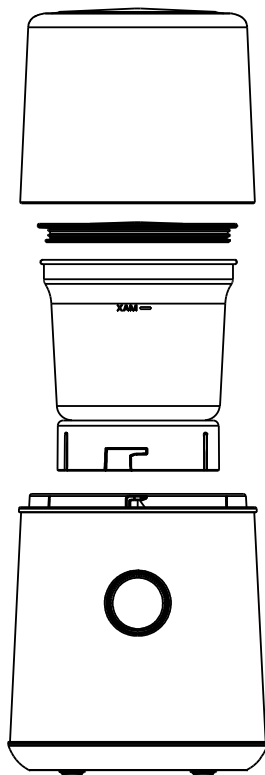

BEFORE THE FIRST USE

Carefully unpack your coffee and spice grinder and remove all packing materials. To remove any dust that may have accumulated during packaging, wipe the grinding bowl, blades with a damp lint-free cloth or sponge. Use extreme care as the blades are sharp. The transparent cover can be immersed in water for cleaning, dry thoroughly.

Caution: Never immerse the motor base in water for cleaning and do not fill the grinding bowl with water for cleaning.

USING YOUR COFFEE & SPICE GRINDER

1. Place the appliance on a flat / stable and dry surface.
2. Assemble the grinding bowl into the motor base, then turn the bowl clockwise until a click sound is heard. When disassembling, turn the bowl anti-clockwise to detach it.
3. Pour coffee beans or dried spice into the grinding bowl, it must be noted the quantity of coffee beans or spice mixture shall not exceed 85 grams. Do not exceed the Max mark on the grinding bowl.
4. Attach the transparent cover and plug into the power outlet.
5. Press and hold the power switch, the appliance will start operating, once the switch is released, the appliance will stop operating.

NOTE: Do not operate this appliance continuously for more than 1 minute, allow the appliance to cool down for 3 minutes between two continuous cycles.

6. View the consistency of coffee grounds from the transparent cover.
IMPORTANT: If you want to remove the cover to check the consistency of the mixture care should be taken to never remove the cover until blades come to a complete stop.
7. Once the desired grind has obtained, release power switch and unplug the power cord from the outlet.
8. Remove the transparent cover, disassemble the grinding bowl and pour out the mixture.

CLEANING AND MAINTENANCE

1. **CAUTION:** Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or motor base in water or liquid. After each use, always make sure plug is first removed from wall outlet.
2. Wash cover with water and mild detergent. The cup and lid can also be cleaned in the dishwasher. Rinse thoroughly and dry. Never immerse motor base or filling water into the grinding bowl.
3. Wipe the grinding bowl, blades with a lint-free cloth. Extreme care should be taken as the blade is sharp.

GRINDING TIPS

1. **COARSE** grinding is generally used for percolators and coffee urns (short run time). **MEDIUM** grind is used for drip coffee makers and steam-type espresso machines. A **FINE** grind is used for espresso machines with an electric pump.
2. Vary the grinding times to suit your taste and type of beans you grind.
3. For the freshest, most flavorful coffee, grind only enough for the batch you are making. Coffee beans keep up to 2 months in the freezer in an airtight container and can be ground while still frozen. Coffee grounds left in your grinder can become stale and affect the flavor of freshly ground coffee. Be sure to clean grinding chamber, blades and cover after each use.
4. Example operation times:

Ingredient type	Grinding time	Operation
Coffee beans 85g	60second	Press and hold the switch button
Sichuan pepper 30g	60second	Press and hold the switch button
Star anise 30g	60second	Run 10 seconds, stop 2 seconds for a cycle, run for 5 cycles.
Dried peanuts 30g	60second	

WARNING! The maximum amount of mixture should not exceed the MAX line!



living & co.

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features, and completely reliable. We are so confident in our products, we pack them up with a 2 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This product is covered by a 2 year warranty when

Accompanied by proof of purchase.

IM Version 1.0 –June, 2025

