



living & co.

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with 1 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This Product is covered by 1 year warranty when accompanied by proof of purchase

living & co.

USB HAND MIXER



INSTRUCTION MANUAL

Model no.: YDHM-049CP

CONTENTS	
	Page
IMPORTANT SAFEGUARDS	2-3
PARTS DESCRIPTION	4
BEFORE USE YOUR USB HAND MIXER	4
HOW TO CHARGE	4
HOW TO USE YOUR USB HAND MIXER	5
BATTERY STATUS	5
CLEANING AND STORGE	6

If battery capacity is within 66%-99%, Lights 1 and 2 will illuminate solid and only Light 3 will flash.

If battery capacity is greater than 99%, Lights 1, 2 and 3 will illuminate solid.

CLEANING AND STORAGE

1. Ensure the Hand Mixer is in the (0) position.
2. To disassemble the Hand Mixer, press the eject button to release the beaters or whisk.
3. Wipe over the housing with a soft damp cloth and dry thoroughly.
CAUTION: Unplug the USB from the Hand Mixer before attaching or removing the beaters or whisk.
4. Wash the beaters or whisk in warm soapy water and dry thoroughly.
WARNING: Do not immerse the Hand Mixer body, USB cable into water or other liquids.
5. Be sure all parts are clean and dry before storing. Never store it while it is wet.
6. Store in a dry area in an ambient temperature of 5°C - 35°C.
7. Do not expose a battery pack or appliance to fire or excessive heat. Exposure to fire or temperatures above 130°C may cause an explosion.

NOTE:

The unit can be stored for up to 3 months with a fully charged state. If storing for longer than 3 months the unit should be charged before next use.

Responsible Disposal

At the end of its working life, do not throw this product out with your household rubbish.

Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area. Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible

HOW TO USE YOUR **USB** HAND MIXER

1. Make sure the speed knob is set to 0 before attaching the beaters or whisk to the motor body, push into the two holes on the underside of the motor housing until they lock fully in place and do not fall out.

2. Place the beaters into the bowl or container with your mixture in it. Turn the switch to adjust the speed from level 1-3 (where 1 is slowest and 3 is fastest), starting slowly and increasing as necessary, to avoid splattering your mixture

IMPORTANT! OPERATING TIMES

- To prevent damage to the electric motor, it is recommended that the product should not be used for longer than **3** minutes continuously.
- After **3** minutes of operation, allow it to rest for at least 5 minutes before next using.
- After 5 cycles of operation, allow the unit to rest for approx. 30 minutes before using it again.

NOTE: Failing to follow the above instructions may cause damage to the product.

NOTE: The indicator lights will extinguish as the battery life reduces. A fully charged battery will show all three lights. As the batteries discharge, the **Power Indicator Lights** will extinguish indicating the Hand Mixer needs to be charged.

4. Once you have finished using this device, turn the speed switch to 0, then carefully press the eject button to detach the beaters.

NOTE: The beaters can only be ejected when the speed selector has been set to 0. To prevent damage, do not attempt to eject or forcibly remove the beaters when the speed is not set to 0.

NOTE: The Hand Mixer has an **automatic overload function** should any food get stuck in the beaters or whisk, or the current exceeds the maximum range for the motor. The unit will turn off automatically when any overload is detected.

When the Hand Mixer detects an overload usage, the three indicator lights (low, medium and high) will flash in unison **four** times and then power off. Slide the power switch to (0) and allow the Hand Mixer to rest for 10 minutes and then resume mixing.

BATTERY STATUS

Battery Life During Use:

As the motor housing is used and the battery begins to drain during performance, the indicator lights will extinguish in sequence from the top to the bottom to indicate how much battery capacity is left.

66% to 100% of capacity: Lights 1, 2 and 3 will all be illuminated

33% to 65% of capacity: Light 1 & 2 will be illuminated

20% to 30% of capacity: Light 1 will be illuminated

If <20% of capacity: Light 1 flashes and the unit needs to be charged

Charging Indication:

Indicator lights will also provide feedback during the charging process:

If battery capacity is less than 33%, Lights 1, 2 and 3 will flash while charging.

If battery capacity is within 33%-65%, Light 1 will illuminate solid and Lights 2 and 3 will flash.

IMPORTANT SAFEGUARDS

When using electrical appliances, safety precautions should always be followed.

- Only use the product and accessories as described in this user manual. Any other use is considered improper and may result in damage to property or persons.
- Close supervision is required when using this appliance near children.
- Never leave this appliance within reach of children.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not leave the appliance unattended during use.
- Do not leave the appliance unattended whilst connected to the mains supply.
- Always use this appliance on a solid, level, non-flammable surface.
- Protect the unit from moisture whilst using this appliance outdoors.
- It is imperative to unplug the mains cable after the appliance has been used, before it is cleaned and whilst being repaired.
- Regular, periodic checks should be carried out on the mains cable to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
- If the mains cable is damaged, it should only be replaced by the manufacturer or a suitable qualified after sales-service in order to avoid a hazard.
- Do not operate if the appliance is damaged.
- Do not allow the USB cable to hang over sharp edges or come in contact with hot surfaces.
- Do not use this appliance for anything other than its intended use.
- **DO NOT** operate the appliance whilst it is empty.
- **DO NOT** use any accessories or attachments with this appliance other than those supplied or recommended by the supplier.
- **DO NOT** use this appliance for anything other than its **Intended use**.

IMPORTANT SAFEGUARDS (CONT.)

- This appliance is intended for household use only and should not be used for industrial or commercial purposes.
- Switch off the appliance and disconnect from the supply before changing accessories or approaching parts that move in use.
- The appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, office and other working environments,
 - farmhouses,
 - by clients in hotels, motels and other residential type environments,
 - bed and breakfast type environments.
- Do not use the unit to crush or chop bones or frozen foods (with the exception of ice cubes and frozen berries), coffee beans, grains or nutmeg.
- Non-food substances should also not be processed.
- This product is intended for household use only. Do not use this appliance for anything other than its intended use.
- This appliance is intended for processing small quantities of food for immediate consumption. Please do not prepare food over maximum quantities.

CAUTION: Always remove the USB cable from the unit before use.

WARNING: Exercise caution when attaching or removing attachments from the mixer and ensure the appliance is turned off and unplugged whilst fitting attachments.

WARNING: Do not immerse the motor base in any water or any liquid.

PARTS DESCRIPTION

1. Whisk (x 1)
2. Beaters(x2)
3. Eject Button
4. Speed control Switch
5. Power Indicator Light
6. USB Charging Port
7. USB Charging Cable



BEFORE USE YOUR **USB** HAND MIXER

1. Carefully unpack the motor housing unit and all parts. Remove packaging materials.
2. Wash Whisk and beater with warm, soapy water. Rinse and dry thoroughly.
3. Wipe exterior surfaces of the motor housing with a soft, moist cloth to remove dust particles collected during packing and handling.
NEVER IMMERSE THE MOTOR HOUSING, CHARGING CORD IN WATER OR ANY OTHER LIQUID.
4. Ensure all parts are properly assembled and in place before use.

HOW TO CHARGE

We recommend fully charging the unit before first use.

1. Open the charging port cover on the motor housing. Insert the small end of the USB Cable to the charging port.
2. Connect the USB-A connector into a suitable USB charger rated to at Least 5V dc 2A. The battery will begin to charge.
3. Note: Only use USB Cable provided with the unit.
4. Indicator lights will flash while charging. The lights will stop flashing once the unit is fully charged.

Note: The unit is shipped with approximately 30% charge in the batteries. One or two lights will be illuminated during use. The unit will operate properly without charging. It is recommended to fully charge before first use for best performance.

5. It will approximately 2 hours to fully charge the unit, and the charging time will be slightly different due to the influence of the season.

CAUTION: When the product is not used for a long time, the battery must be charged every 3 months to prevent the battery from aging.

Do NOT use the unit while it is plugged in and/or charging.