


poppi

Mini Hair Straightener

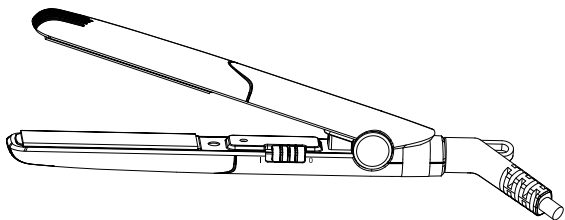

Instruction Manual Model: HS-006B

Before operating this hair styler, please read these instructions completely and save this manual for future use.

AFTER SALES SUPPORT

☎ (NZ) 0800 422 274

CONTENTS

Important Safety Instructions	2
Product Overview	5
How To Use	5
Care & Maintenance	6
Technical Data	7
Disposal	7
Fault Finding	8
Warranty	9

Important Safety Instructions

The following safety precautions should always be followed, to reduce the risk of electric shock, personal injury or fire. It is important to read all of these instructions carefully before using the product, and to save them for future reference or new users.

Read all the safety instructions before first use of your hair straightener.

WARNING:

THIS APPLIANCE IS LIVE UNTIL THE POWER IS DISCONNECTED AT THE MAINS.

TO AVOID RISK OF ELECTRIC SHOCK:



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.


- Always unplug this appliance immediately after using.
- Do not place or store appliance where it can fall or be pulled into a tub or sink.
- Do not place in or drop into water or other liquid.
- Do not reach for an appliance that has fallen into water. Unplug immediately.
- **WARNING: DO NOT IMMERSE IN WATER.**
- This appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not operate this appliance if the cable or plug

becomes damaged. A qualified electrician must always carry out any repairs that are necessary.

- If the appliance stops unexpectedly or appears to malfunction, switch off the power supply, unplug from the mains and stop using immediately. Seek professional advice to rectify the fault or make repairs.
- Keep the appliance and cable away from sources of heat, sharp objects or anything that may cause damage.
- Ensure the appliance is switched OFF before connecting to the mains power supply.
- The unit is VERY HOT when in use. Take care to avoid contact between the hot surface of the heating plate and bare skin, particularly around the ears, face and neck when in use.
- Care should be taken not to touch the heated tong of the appliance when it is switched on or just after it has been turned off. ALLOW TO COOL DOWN BEFORE PUTTING AWAY
- Electrical appliances must always be stored in a secure place, out of reach of children.
- Children should be supervised to ensure that they do not play with the appliance.
- Close supervision is necessary when the appliance is being used near children.
- To protect against electric shock, never allow the appliance, the mains cable or plug to come into contact with water or any other liquid.
- Never reach for any appliance that has fallen into water. Switch off the power supply at the mains immediately and unplug. Do not re-use until the product has been inspected and approved by a qualified electrician.

- Keep the appliance away from non-heat-resistance surfaces and never cover the appliance with anything (e.g. clothing or towels) when it is hot.
- Always ensure that hands are dry before operating or adjusting any switch on the product or touching the plug and mains supply connections.
- Keep the appliance away from water. Do not use it near or over water contained in bath, washbasins, shower etc.
- Never leave the appliance unattended when connected to the mains power supply. To disconnect, first ensure that all controls are in the OFF position, then remove the plug from the electricity supply.
- Never wrap the mains cord around the appliance. Do not hang up by the power cord.
- Regularly check the mains cord for wear and damage, particularly where it enters the product and the plug.
- Cleaning and user maintenance shall not be made by children without supervision.
- When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the hairdryer is switched off.
- For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.
- This appliance is for household use only.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Only use the appliance on dry hair. Do not use the hair straightener on artificial hair.

Product Overview

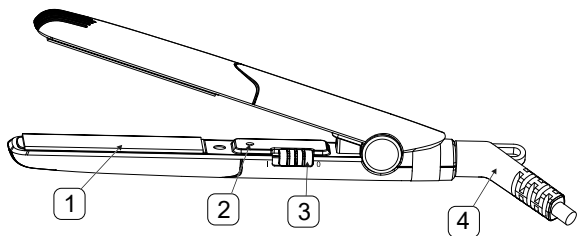

1. Heating plate
2. LED power indicator
3. Switch (O: off, I: on)
4. Swivel power cord

How To Use

1. Fully unwind the mains cable.
2. Only connect the device to a correctly installed socket outlet.
3. Slide the on/off switch from off to on position, the LED power indicator illuminates. After approximately 5 minutes, the device is ready to use.
Note: The device must be used only with dry hair.
4. Comb your hair and hold a section that is not wider than 5cm for straightening.
5. Place it between the hair straightener plates and press the handles firmly together.
6. Slide the hair straightener down the length of the hair in a single motion (Not more than 5 seconds) from root (scalp) to end tip, without stopping to prevent overheating.

7. To create flicks, turn the straightener 180 degrees (half-circle) inwards or outwards, when it reaches the end of the hair. Hold the straightener in that position for 2 to 3 seconds, and then release it
8. Repeat above steps until you achieve the desired effect.
9. To ensure that the waves are retained for a prolonged period we recommend that you use only a coarse comb or your fingers. Do not brush it before it has cooled down as this will ruin the hairstyle you have just created.
10. Please remove the mains plug after use. Leave it cool for a few minutes before putting it away.

Care & Maintenance

- This appliance is intended for household use. Unplug product before cleaning. The product must be cleaned only when cool.
- Use a soft non-abrasive cloth that is slightly dampened with water to wipe hair straightener surface. Do not allow water or any other liquid to get into the handle. Any other servicing should be performed by a qualified service center.
- Dry the product thoroughly after cleaning.
- The product should not be stored while hot or plugged in. When not in use, allow hair straightener to cool, then simply put back in the box and store out of reach of children in safe, dry location. Never wrap the cord around the hair straightener. This could cause the cord to wear prematurely and break.
- Do not attempt to repair the appliance yourself. Return to supplier. No other maintenance or lubrication is required.

Technical Data

Model name	Rated Voltage	Frequency (Hz)	Rated power input (W)
HS-006B	100-240V	50-60	25W

Disposal

At the end of its working life, do not throw this product out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local council regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local council for advice on recycling facilities in your area.

Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.

Fault Finding

Problem	Possible Cause	Solution/Hint
The appliance does not operate	This appliance is not switched on	Slide the on/off switch to the on position (power indicator should illuminate).
	The plug is not fitted correctly into wall socket.	Fit the plug correctly into the wall socket.
	The wall socket is damaged	Connect the appliance to a working wall socket.
	The supply cord may be damaged.	The supply cord must be replaced by an authorized technical service technician in order to avoid hazard
Smoke comes out of the hair or from the heating plates of the appliance during use.	You have styling products in your hair (for example mousse, spray or gel)	This is normal if you use products to style. Never put any product in your hair that is not suitable for use with high temperature appliances. Do not use gel or wax. Use only styling products specifically designed for this purpose.
The results are not as expected.	You have too much hair on the plates during styling.	Make sure that the section of hair being straightened does not exceed 50 mm in width or 5 mm of thickness.

poppi



Read the manual.

It will help you get the best out of your product.

Still have questions?
Call After Sales Support
0800 422 274

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features, and completely reliable. We are so confident in our products, we back them up with a one year warranty when accompanied by proof of purchase.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

IM Version 1.0 – April, 2025