 


living & co.

CORDLESS HAIR STRAIGHTENER

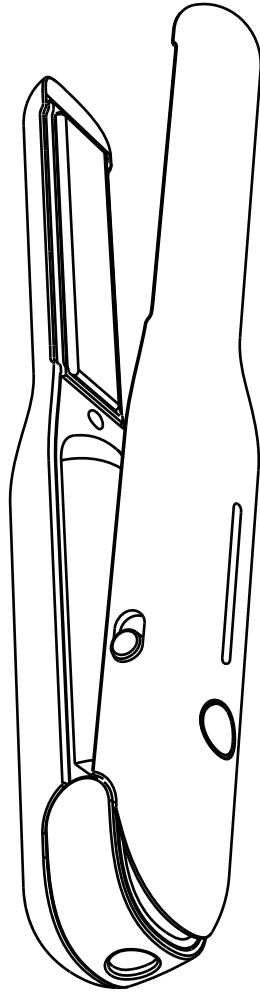

INSTRUCTION MANUAL

Model no.:NV530

AFTER SALES SUPPORT

☎ (NZ) 0800 422 274

CONTENTS	Page
IMPORTANT SAFEGUARDS	2
PRODUCT OVERVIEW	3
HOW TO USE YOUR HAIR STRAIGHTENER	4-5
CARE AND MAINTENANCE	5
RESPONSIBLE DISPOSAL	5

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USING KEEP AWAY FROM WATER

WARNING: The polyethylene bags over the product or its packaging may be dangerous.

Keep these bags out of the reach of babies and children. Never use them in cribs, children's beds, pushchairs or playpens.

The thin film may cling to the nose and mouth and prevent breathing.



A bag is not a toy.

WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.





Use this appliance to straighten human hair only. Do not use this appliance on artificial hair or animals.

IMPORTANT! The appliance may have different results depending on the hair type. Therefore, we recommend to do a trial at a hidden spot before first use. The hair straightener is not recommended for damaged or bleached hair.

- Never immerse the unit in water or any other liquid.
- Do not use the unit if it has been dropped or if it appears to be damaged.
- Do not leave the unit unattended when it is plugged in or switched on.
- Unplug the unit immediately if you have problems when using it.
- Do not use any accessories other than those recommended by manufacturer.
- Unplug the unit after each use and before cleaning it.
- Avoid any contact between the unit's hot surfaces and your skin, in particular, your ears, eyes, face and neck.
- This unit is not intended for use by people (including children) with reduced physical, sensory or mental capabilities, or by persons who lack experience or knowledge, unless they are supervised or have been given instructions before hand on the use of the unit by a person responsible for their safety.
- Children should be supervised to ensure they do not play with this appliance.
- Allow the unit to cool before storing.
- NEVER grasp the appliance, charging cable or USB plug with wet hands.
- Do not use or leave the USB charging cable in a position where it can become wet or there is a danger of it falling into a basin or other vessels containing water.
- Please do not attempt to dismantle the appliance. This appliance has no user serviceable parts inside.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not place the appliance on any heat sensitive Surfaces.
- Avoid the addition of heat from other sources, e.g., from direct sunlight, heating appliances, other devices, etc
- This product is intended for household use only, not designed for commercial industrial purposes. Do not use it outdoors.
- If the product is not used for an extended period (3 months), please charge periodically to prevent the battery from going completely flat and reducing its life span.

PRODUCT OVERVIEW

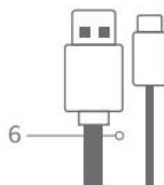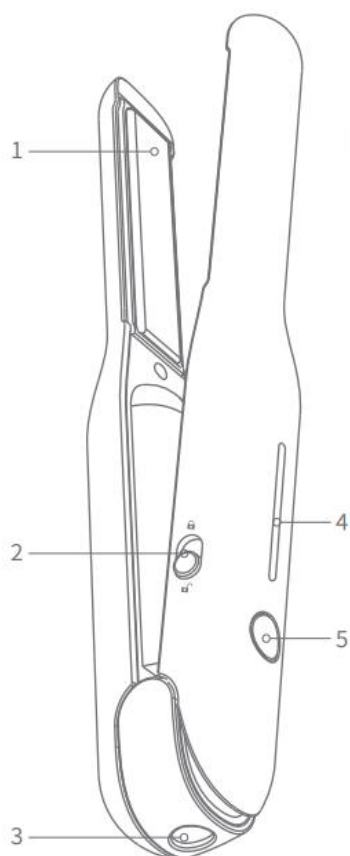

1. Heating Plate
2. Power Switch Lock
3. Charging Socket
4. Status Indicator Lights
5. Power Button
6. USB Charging Cable

Product model: NV530

Rated power: 40W

Charging voltage: DC 5V

Charging time: 210 minutes with adaptor (5V 2A)

Standby time: 30mins

Temperature control with 3 heat settings (160°C-180°C-200°C).

HOW TO USE YOUR HAIR STRAIGHTENER

1. **Power switch lock (2):** Slide the Power switch lock to **unlock**. If this is not actioned, the Power switch will remain inactive.
2. **Power button (5):** press and hold the power button for 3 seconds to turn on the straightener. Three temperature setting are available. Low(160°C) -Medium(180°C) - High (200°C) . The temperature indicator for the selected temperature(160°C or 180°C or 200°C) will flash to indicate on heating has commenced. When the indicator light stops flashing and remains on, the plate temperature has reached the set temperature.
3. After use, press the Power Button (5) to shut down, and store the product after it has completely cooled. After cooling down, slide the power switch lock (2) to the locking position to prevent from inadvertent operation.
4. **Status Indicator Lights (4)** includes 3 states:
Blue light - Fully charged battery
Purple light - Battery capacity less than half
Red light - Low battery

5. Charging:

Connect the USB-C end of the charging cable (smaller plug) to the charging socket, then connect the USB-A plug (other end) to a suitable USB socket outlet (power adapter / computer outlet etc having a rating of 5V DC 2A).

Charging time will vary depending on battery status, but will typically take around 3 hours to fully charge. Under the charging state, the blue indicator will flash on the display, it will stop flashing when the straightener is fully charged.

Do not leave connected to the charger for longer than necessary and no greater than 5 hours. Disconnect the cable at both ends.

Safety Lock function:

1. Without operating for 10 seconds, the safety lock function will activate, at which point, the temperature and power button cannot be operated.
2. Press the power button (5) **twice** to de-activate the safety lock function.

TIPS

- Use lower temperatures for fine, bleached or damaged hair, medium temperatures for normal, wavy hair, and higher temperatures for thick or coarse hair. Minimise operating time on the Max temperature to prevent hair damage.
- The straightener should be used with dry or only lightly damp hair, never use with wet hair. Ensure the hair is dry enough and combed through.
- The appliance may provide different results depending on the hair type. Therefore, we recommend to do a trial on a hidden area of your hair before first use.

Hair straightening

- When the appliance is ready, you may start hair styling (takes several minutes to reach set temperatures).
- Holding a section of hair taught (not wider than 5cm), clasp the straightener tongs over the section of hair and glide down the entire length of the hair slowly to maximise results.
- **CAUTION!** Do not hold the hair between the bristles for more than a couple of seconds as this may damage your hair. Take care to avoid direct contact of the heated plates with the scalp
- When you have finished one section, move to another area of hair and repeat the process. It may be necessary to repeat process on certain areas, depending on the texture of your hair. Some practice is necessary when learning to use the appliance.
- Allow the hair to cool before combing through.
- After use, press the Power Button (5) to shut down, and store the product after it has completely cooled. After cooling down, slide the power switch lock (2) to the locking position to prevent from inadvertent operation.

CARE AND MAINTENANCE

- Unplug the charge cable and allow to cool completely before cleaning.
- Clean the surfaces with a soft, slightly damp soft cloth without soap to avoid damage to the plates.
- DO NOT use any abrasive chemical detergents, hard sponges, steel wool or similar for cleaning.
- Always allow the straightener to cool down completely before storing away. Store it out of reach of children in a safe and dry place out of direct sunlight.
- If the product is not used for an extended period (3 months), please charge periodically to prevent the battery from going completely flat and reducing its life span.

Responsible Disposal

At the end of its working life, do not throw this product out with your household rubbish.

Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately.

Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling.

Contact your local council for advice on recycling facilities in your area. Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.



living & co.

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with 1 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This Product is covered by 1 year warranty when accompanied by proof of purchase