

living & co.

DRIP COFFEE MACHINE



INSTRUCTION MANUAL

MODEL: CM9405T-SA

AFTER SALES SUPPORT

  0800 422 274

Contents

Important Safety Instructions	1-2
Product Overview	3
Before The First Use	4
Using Your Coffee Maker	4-5
Delay Function	5-6
Cleaning And Maintenance	6
Removing Mineral Deposits	7
Hints For Great-Tasting Coffee	8
Warranty	9

IMPORTANT SAFETY INSTRUCTIONS


When using electrical appliance. Basic safety precautions should always be followed including the following:

- Read all instructions before use. Retain this guide for future reference.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- When the appliance is not in use and before cleaning, unplug the appliance from the outlet.
- To protect against fire, electric shock and injury to persons do not immerse main parts of the product, cord, plug, in water or other liquid.
- The appliance must not be immersed in liquid.
- Remove plug from wall outlet before cleaning and when not in use. Allow appliance to cool down completely before removing/attaching components, or before cleaning.
- The use of accessory attachments not included with the appliance may result in fire, electric shock or injury to persons.
- Place the appliance on a flat surface or table. Do not allow power cords to hang over the edge of table or counter.
- Ensure that the power cord does not touch any hot surface of the appliance.
- Do not place the coffee maker on any hot surface or near heat sources to avoid damage to the appliance.
- To disconnect, remove the plug from the wall outlet. Always hold the plug and never pull the cord.
- Do not use the appliance for any purpose other than intended use. Place the unit in a dry environment.


IMPORTANT SAFETY INSTRUCTIONS CONTINUED

- Do not touch the hot surface of the appliance. Be careful not to get burned by the steam emitted from the appliance or the hot liquids.
- Connect the plug to a wall outlet before use, and turn any switches off before the plug is removed from wall outlet.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments.
 - farm houses.
 - by clients in hotels, motels and other residential type environments.
 - bed and breakfast type environments.
- Do not use the appliance outdoors.
- **WARNING:** The filling aperture must not be opened during use.
- Warning: Potential injury from misuse. The warming plate heating element surface is subject to residual heat after use.
- Cleaning and user maintenance shall not be made by children without supervision.
- Scalding may occur if the top cover is opened during the brewing cycles. Be careful not to get burned by the steam.
- Never leave an empty coffee jug on the warming plate otherwise the carafe is liable to crack.
- Do not set the coffee jug on a hot or cold surface.
- Do not attempt to operate the coffee maker without water.
- Never use the appliance if the glass jug shows any signs of cracks or having a loose or weakened handle. Only use the glass jug provided with this appliance. Use carefully as the glass jug is very fragile.
- The glass jug is designed for use with this appliance. It must never be used on a range top.
- To reduce the risk of fire or electrical shock, do not remove the cover. No user serviceable parts inside. Repair should be done by authorized service personnel only.
- Save these instructions for future reference.

PRODUCT OVERVIEW

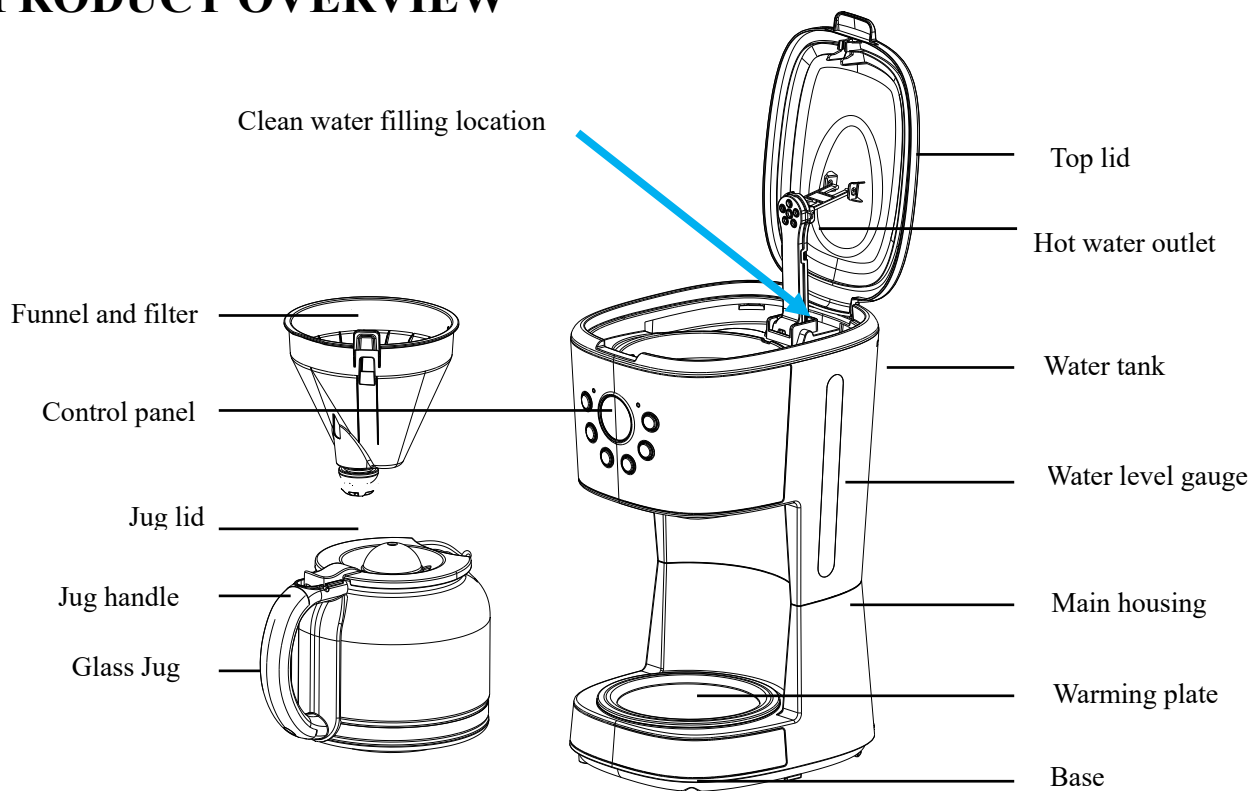

CONTROL PANEL

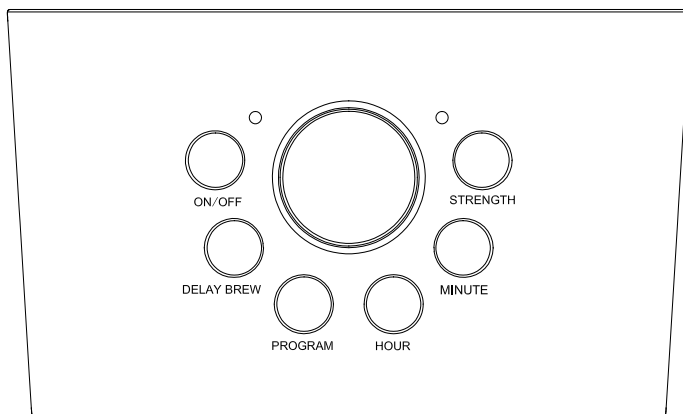

CAUTION: It is recommended to use filtered or distilled water, avoid using Hard water.

NOTE: Hard water comes from groundwater sources and can contain high levels of calcium and magnesium salts. When such water is heated in your coffee maker, calcium and magnesium break down and precipitate to form solid limescale. This will not only affect the taste of your coffee but will also lead to reduced performance and possible premature product failure. If Hard Water is used, please refer to the cleaning instructions (and removal of mineral deposits) within this manual.

BEFORE THE FIRST USE

Check that all accessories are complete, and the unit is not damaged. Fill the water tank to the MAX level and brew water for several times without coffee powder, then discard the water. Clean and dry all detachable parts thoroughly according to the section “CLEANING AND MAINTENANCE”.

USING YOUR COFFEE MAKER

1. Open the top lid and fill the water tank with drinking water. The water level should not exceed MAX level as indicated on the water gauge.
2. Place the funnel filter into the funnel support, make sure it is assembled correctly, otherwise the top lid will not close properly. Place permanent filter in the funnel.
3. Add (medium or fine) ground coffee into the filter recess. Usually, a cup of coffee needs a level spoon of coffee powder, so coffee measure is dependent on water fill volume, but you may adjust according to personal taste. Close the top lid ensuring completely shut.
4. Insert the glass jug with lid closed onto warming plate horizontally.
5. Plug the power cord into the outlet. If you want to adjust the coffee strength, you can press “STRENGTH” button once, and then its corresponding indicator will illuminate in orange and the appliance will brew stronger coffee. If you do not want to adjust the coffee strength, just follow the follow operation to brew normal coffee.
6. Press the ON/OFF button, its indicator illuminates red, the LCD display indicates “12:00”, and operation commences.

Note: The brewing process can be interrupted by pressing the ON/OFF button at any time, and the indicator of ON/OFF button will go off, indicating your coffee maker is off.

Note: During brewing process, the buttons of “PROGRAM”, “DELAY BREW”, “HOUR” and “MINUTE” are cannot be operated.

7. The brewing process can be interrupted by pressing the ON/OFF button at any time, the red indicator will switch off. The appliance will continue brewing once the ON/OFF button is pressed again.
8. Remove the glass jug to serve when finished brewing (about one minute later after the coffee stops dripping out).

USING YOUR COFFEE MAKER (CONTINUED)

Note: The coffee you get will be less than the water you have added, as some water is absorbed by coffee grounds and due to evaporation.

9. When the process is finished, if you do not want to serve immediately, keep the coffee maker energised, the coffee can be kept warm in the warming plate. The appliance will shut off automatically after 40 minutes from the ON/OFF button being activated if it has not been manually disconnected from the supply at the completion of brewing. For an optimum coffee taste, serve it just after brewing.

10. Always turn the coffee maker off and disconnect the power supply when not use.

NOTE: Take care when handling the glass jug and pouring the hot coffee to avoid hazard.

DELAY FUNCTION

If you do not want the coffee maker to start operation immediately, for example, now it is 8:10, you prefer that the coffee maker will automatically start working at 13:00, first follow steps 1 to 5 of above section, and then set the automatic start function as follows:

1. Press PROGRAM button once, set the current time by pressing HOUR and MINUTE button repetitively, that is 8:10.

Note: The time cycle is 24 hour format.

2. Press PROGRAM button once time, the indicator of ON/OFF button will illuminate in green and flash. (Means it has entered the presetting time state.)

3. Set the delayed starting time by pressing HOUR and MINUTE button repetitively that is 13:00.

4. Press the DELAY BREW button, the indicator of ON/OFF button is illuminated in green. The LCD will display the current clock. You may see the automatic start time by pressing PROGRAM.

Note: You may cancel the automatic start function by pressing ON/OFF. If you want to change the automatic start time, only following the above 2-4 steps again.

5. When the time is due, the indicator of ON/OFF button will illuminate in red and the appliance starts brewing.

DELAY FUNCTION (CONTINUED)

6. When the process is finished, if you do not want to serve immediately, keep the coffee maker energized, the coffee can be kept warm in the warming plate. And the appliance will shut off automatically after 40 minutes from when the delayed program commenced.

Note: During brewing process, the buttons of “PROGRAM”, “DELAY BREW” ,“HOUR” and “MINUTE” are not available.

CLEANING AND MAINTENANCE

CAUTION: Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or liquid. After each use, always make sure plug is first removed from wall outlet.

1. Clean all detachable parts after each use in hot sudsy water.
2. Wipe the exterior surface of unit with a soft, damp cloth to remove stains.
3. Water droplets may buildup in the above area of the funnel and drip onto the product base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use.
4. Use a damp cloth to gently wipe the warming plate. Never use abrasive cleaner.
5. Replace all parts and keep for next use.

REMOVING MINERAL DEPOSITS

To ensure your coffee maker operates efficiently, the internal piping should be cleaned every month to ensure optimal performance and coffee flavor.

CAUTION: We recommend using filtered or distilled water in your coffee maker. If possible, avoid the use of Hard water. Hard water comes from groundwater sources and can contain high levels of calcium and magnesium salts. When such water is heated in your coffee maker, calcium and magnesium break down and precipitate to form solid limescale. This will not only affect the taste of your coffee but can also lead to reduced performance and premature failure of the product. To ensure internal piping is clean, please follow the following process regularly.

1. Fill the tank with water and descaler to the max level as indicated on water gauge (the scale of water and descaler is 4:1, the detail refers to the instruction of descaler. Please use “household descaler”, you may also use the citric acid instead of the descaler (the one hundred parts of water and three parts of citric acid).
2. place the glass jug under the brew basket.
3. Ensure funnel filter is assembled in place.
4. Switch on the appliance and allow it to “brew” de-scaling solution.
5. After “brewing” one-cup solution, switch off the appliance.
6. Leave the solution stay for 15 minutes and repeat step 3-5.
7. Switch on the appliance and run off the solution until the water tank is completely empty.
8. Rinse by operating the appliance with clean water at least 3 times.

HINTS FOR GREAT-TASTING COFFEE

1. A clean coffee maker is essential for making great-tasting coffee. Regularly clean the coffee maker as specified in the “CLEANING AND MAINTENANCE” section.
Always use fresh, cold water in the coffee maker.
2. Store unused coffee powder in a cool, dry place. After opening a package of coffee powder, reseal it tightly and store it in a refrigerator to maintain its freshness.
3. For an optimum coffee taste, buy whole coffee beans and finely grind them just before brewing.
4. Do not reuse coffee powder since this will greatly reduce the coffee’ flavor. Reheating coffee is not recommended as coffee is at its peak flavor immediately after brewing.
5. Clean the coffee maker when over-extraction causes oiliness. Small oil droplets on the surface of brewed, black coffee are due to the extraction of oil from the coffee powder.
6. Oiliness may occur more frequently if heavily roasted coffees are used.

ENVIRONMENTALLY FRIENDLY DISPOSAL

You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipment to an appropriate waste disposal center. Check with your local council for guidance.



living & co.

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features, and completely reliable. We are so confident in our products, we pack them up with a 2 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This product is covered by a 2 year warranty when Accompanied by proof of purchase.

IM Version 1.0 –June, 2025