


poppi

FACIAL CLEANSING BRUSH

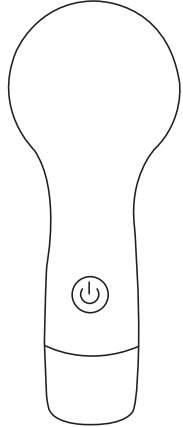

INSTRUCTION MANUAL
MODEL : EA180014

Before operating this facial cleansing brush, please read these instructions completely and save this manual for future use.

AFTER SALES SUPPORT
☎ 0800 422 274



WARNINGS


- Do not use the vibration mode for more than 3 minutes at a time.
- Always clean the device after use with water and mild soap (free of alcohol, petrol or acetone) and rinse clean. Pat dry with a lint-free cloth /towel.
- Avoid using facial cleansers that are silicone based or grainy as they may cause damage to the silicone pad.
- Avoid leaving in direct sunlight. Do not expose to extreme heat or boiling water.
- Do not submerge in water.
- Do not use on eyelids.
- Discontinue use if discomfort or irritation occurs. If you have a skin condition, please consult with dermatologist before using.
- Cleansing with the device should be comfortable - if you experience dis-comfort, discontinue use immediately and consult a physician.
- Exercise particular care when cleansing the under-eye regions and do not bring the device into contact with the eyelids or eyes themselves.
- Keep out of reach of children. Children should be supervised to ensure that they do not play with this device.
- This device should not be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, without supervision or instruction concerning the use of the device in a safe way and understanding the hazards involved, from a person responsible for their safety

AFTER SALES SUPPORT
☎ 0800 422 274 **poppi 1**

HOW TO USE

The cleansing brush is designed for deep cleansing, gentle exfoliation, and facial massage. These actions may help improve the appearance of your skin, leaving it feeling refreshed and revitalised.

1. After removing makeup, rinse face with warm water.
2. Run the brush bristles under warm water and apply your favorite facial cleanser to the silicone pads.
3. Turn unit ON by pressing the power button . Subsequent presses will vary the vibration mode (3 levels plus two cyclic programs). Begin with the brush at your chin and use gentle upward strokes as you slowly move the brush along your jawline to your ear and out onto your cheek. Repeat on other side of face and along forehead and nose.
4. To turn unit OFF, press and hold the power button. 
5. Always clean the device thoroughly after use. Wash the brush surfaces with warm soapy water but do not rinse the battery compartment in water.

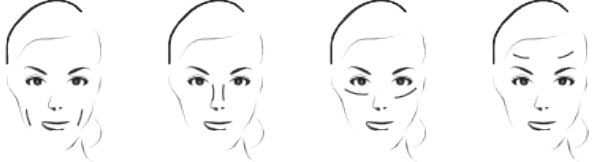

AFTER SALES SUPPORT
☎ 0800 422 274 **2 poppi**


90mm

131.2mm

INSTALLATION OF BATTERIES

- Requires 2 AAA 1.5V batteries.
- To insert them, turn the battery cover anti-clockwise from the bottom of the unit, remove and insert 2 AAA batteries, taking care to ensure the polarity of the batteries is correct with respect to the markings.
- Reattach the battery cover and turn clockwise to lock in position.
- Make sure your hands and the appliance are dry when replacing the batteries.
- When the batteries are flat, immediately remove from the product, do not leave flat batteries in the product as this may result in leaking and damage.

AFTER SALES SUPPORT
☎ 0800 422 274 **poppi 3**



poppi

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features, and completely reliable. We are so confident in our products, we back them up with a one year warranty when accompanied by proof of purchase. Now you too can relax knowing that you are covered.
Customer Helpline NZ: 0800 422 274
IM Version 1.0 – April, 2025

AFTER SALES SUPPORT
☎ 0800 422 274 **4 poppi**