



# Flat Fold Highchair

## INSTRUCTION MANUAL



**Designed and manufactured to BS EN 14988: 2012**

**IMPORTANT:**

Thank you for choosing our product. Please read and understand these instructions before using this flat fold highchair. If in doubt, please seek help from our Customer Service Team.

**Please retain the instructions for future reference.**

*Images in this manual are representative only. Actual product may vary. The manufacturer reserves the right to change specifications without prior notice.*

# SAFETY

---

THANK YOU FOR CHOOSING OUR PRODUCT. PLEASE TAKE TIME TO READ THE IMPORTANT SAFETY NOTES BELOW. THIS WILL ENSURE MANY YEARS OF HAPPY AND SAFE USE.



## **WARNING:**

**WARNING!** Do not use the highchair until your child can sit up unaided (6-36 months).

**WARNING!** Do not leave the child unattended.

**WARNING!** Ensure your child wears a correctly fitted and adjusted harness at all times.

**WARNING!** Do not use the highchair unless all components are correctly fitted and adjusted.

**WARNING!** Be aware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires etc. or where a child could gain access to any other kind of hazard, in the vicinity of the highchair.

**WARNING!** Do not use if any part is broken, torn or missing.

**WARNING!** Do not move or carry the highchair with your child inside.

- Adult assembly is required.
- Use only on a level and stable surface.
- Never move or carry the highchair whilst the baby is in it.
- Ensure children are clear of all moving parts before making any adjustments.
- Do not use near stairs or steps.
- When not in use, store away from children.
- Designed and manufactured to BS EN 14988: 2012.
- Use the highchair on a flat, even and horizontal floor and do not elevate the highchair on any structure or table.
- To reduce the risk of injury, position the highchair away from furniture, walls, hot surfaces and liquids, window covering cords, electrical cords. Position the highchair away from furniture unless the chair is being used at a table, with the tray removed.
- When using the highchair at a table, ensure your child cannot push against the table or another surface as this could result in the chair tipping.
- The highchair should only be used in an upright position once the child is capable of reliably and consistently sitting upright.
- Do not use the highchair if it is not working correctly, the owner should seek repairs.

**WARNING!** Follow the manufacturer's instructions.

**WARNING!** Do not leave the child unattended.

**WARNING!** The harness must always be used and correctly fitted. Most injuries from highchairs are caused by falls.

**WARNING!** Position the highchair away from solid structures and benches to avoid injuries caused by falls and by access to dangerous items.


**WARNING!** Not to be used by children over 15kg due to its construction, strength and design.

- Ensure all users are familiar with the product's operation.
- Ensure your highchair is fully erected before placing your child inside.
- Do not allow your child to climb unassisted into, play with, or hang onto the highchair. This is not a toy.
- All additional hazards such as electrical flex should be kept out of the reach of children in the highchair.

# PARTS

Please retain all packaging until you are certain that no parts are missing.


After assembly, please dispose of all packaging carefully, including the protective foam on the ends of the leg tubes.

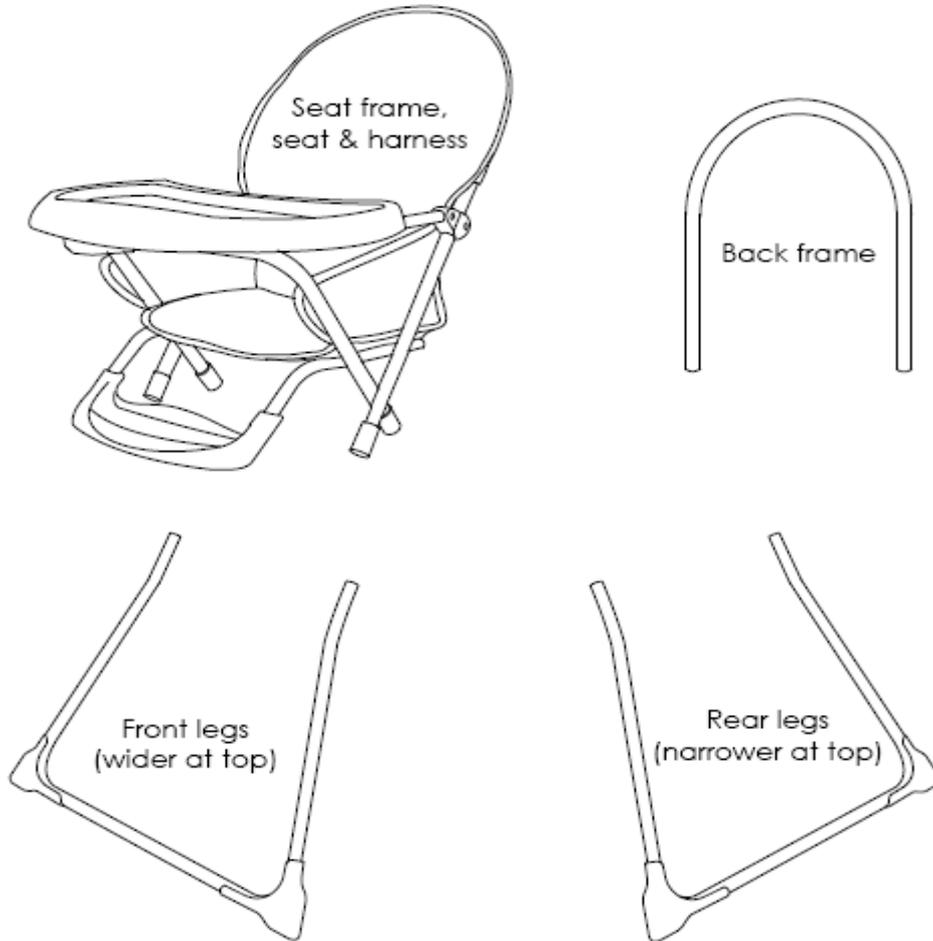

## Tube Connections:

The Legs and the Seat Frame connect using the system shown.

Push in button **A**, insert the end of the seat tube into the leg tube and slide down until the button appears in the corresponding hole **B** in the leg tube and clicks into place.

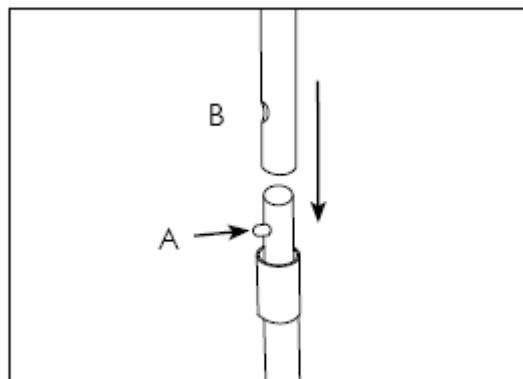

## FIT THE SEAT


Fit the semi-circular back tube to the seat frame, clicking the legs into place as shown in the previous drawing.

Open the seat frame.

Slide the pocket on the back of the seat cover down over the tube back frame.

Fasten the press stud on each side of the seat to the inside of the tray pivot - **A**.

Pull the front of each side of the seat cover around the front of the frame and fasten the two press studs on each side of the seat to the tube - **B**.

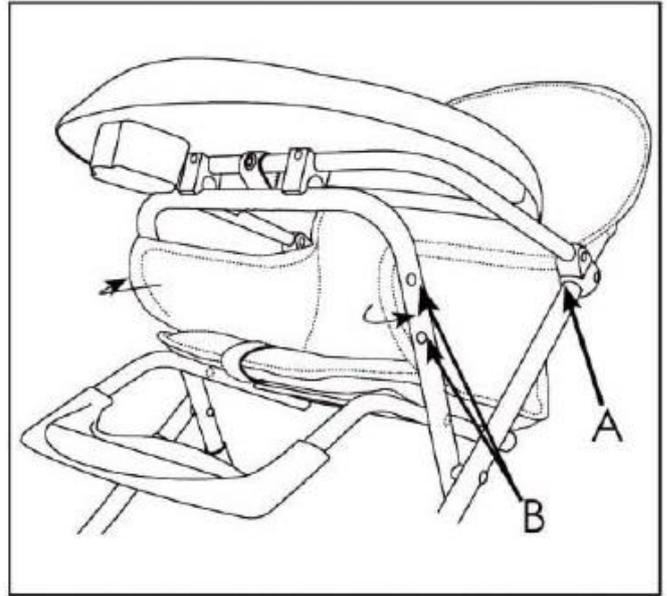


## OPEN AND FASTEN THE TRAY

Open the seat frame fully and press the tray down firmly to fasten the clips on the underside to the tube underneath.

Wrap the strap around both tubes under the tray and snap the press stud closed.

Ensure seat cover press studs are firmly attached to the leg tube under the tray.

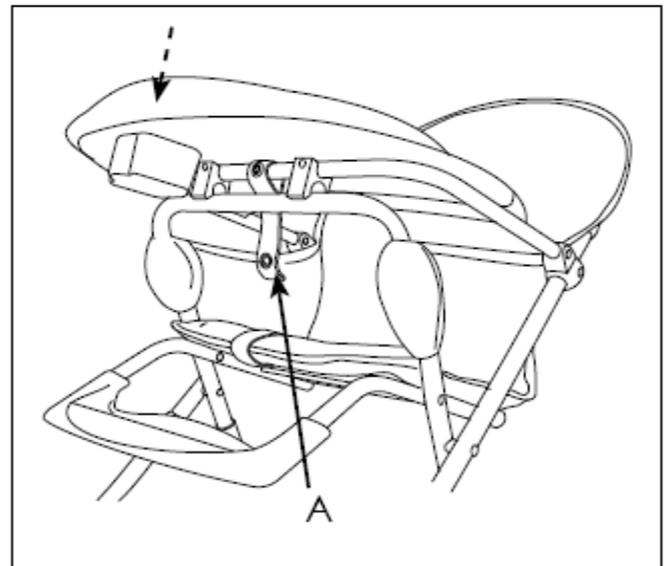


## FITTING THE LEGS

*(Note that the front legs are wider at the top than the rear legs.)*

**CAUTION: TAKE CARE, AS FINGER PINCHING CAN OCCUR WHEN LOCKING THE LEGS IN PLACE.**

Press in the pushbuttons on the front legs and insert the legs into the frame tubes and push in until the buttons click into place in the holes in the legs.


Repeat for the rear legs.

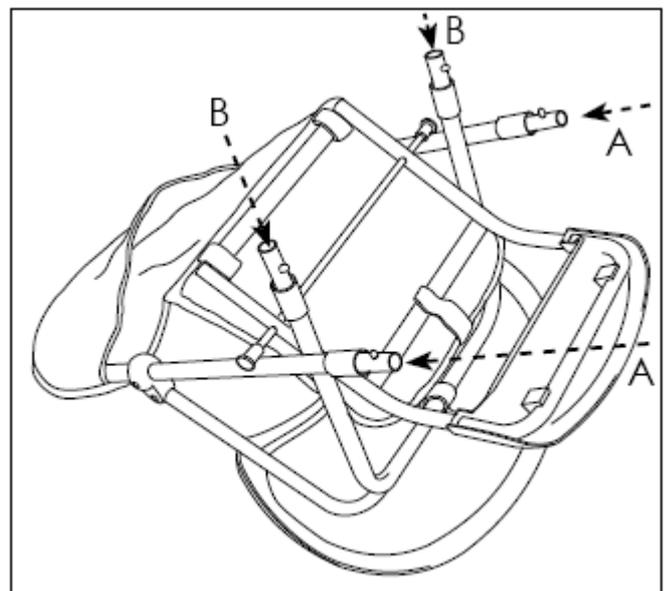

# ATTACHING AND CHECKING THE HARNESS

The harness comes fitted to the seat, but needs to be checked and adjusted before use.

The shoulder straps are pre-fitted to the seat back tubes. Pull them fully out through the slots in the seat cover after the cover is fitted. They can be adjusted only for tightness, using the slide adjusters.

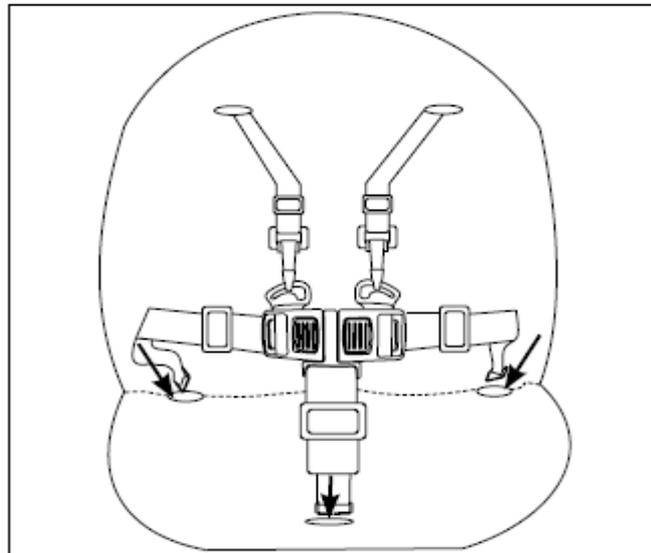

Ensure the waist straps and crotch strap are fed through the slots in the seat cover and are correctly fitted to the chair frame.


These 3 straps are wrapped around the frame support bars and secured by steel buckles.

Pass the strap over the bar and feed the edge of the webbing through the small opening in the metal buckle until the webbing is fully inserted and lying flat.

Pull to form a loop securing the strap to the bar - **A**.

Ensure that the attachment looks like **B**.

Repeat for all 3 straps.

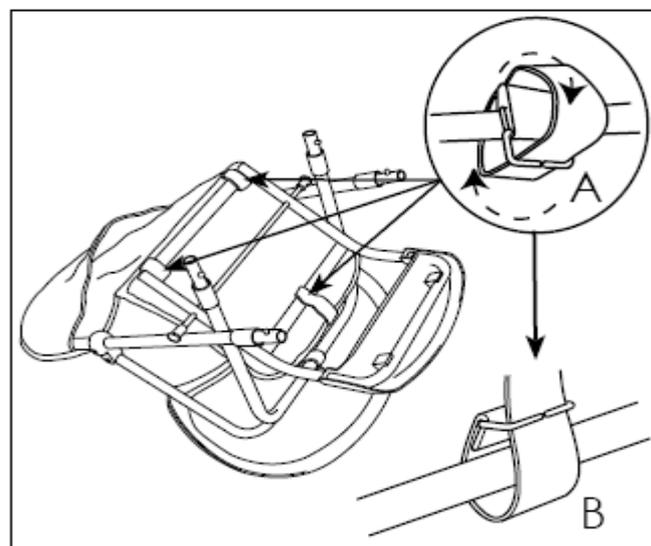


Check the security of the waist and crotch straps by firmly pulling on them from the front of the seat.

A five-point safety harness is provided to restrain your child and should always be worn. Sliding adjusters are fitted, and should be carefully adjusted so the harness fits your child firmly but comfortably.

To fasten the harness, push the side pieces into the centre buckle until they click in place.



To release, press the exposed tongues of the side pieces and remove from the buckle.

*(Note the buckle appearance may differ slightly from that shown.)*

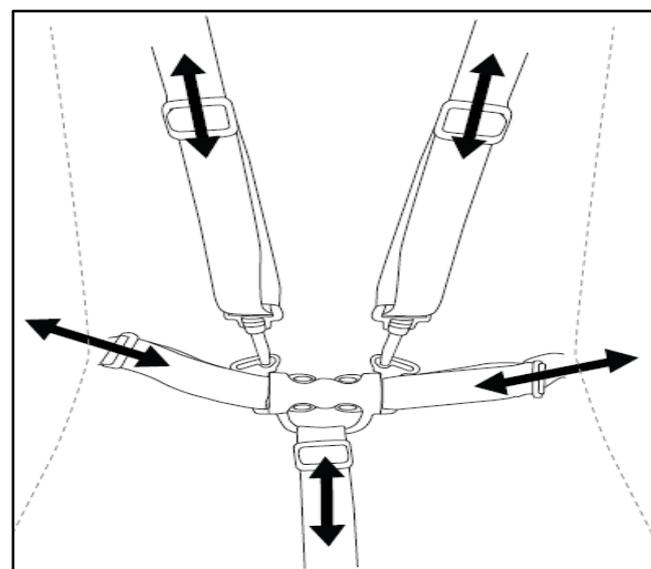

# FOLDING

Release the press stud on the webbing strap underneath the tray, lift the tray firmly to release the clips from the tube, and fold the legs together.

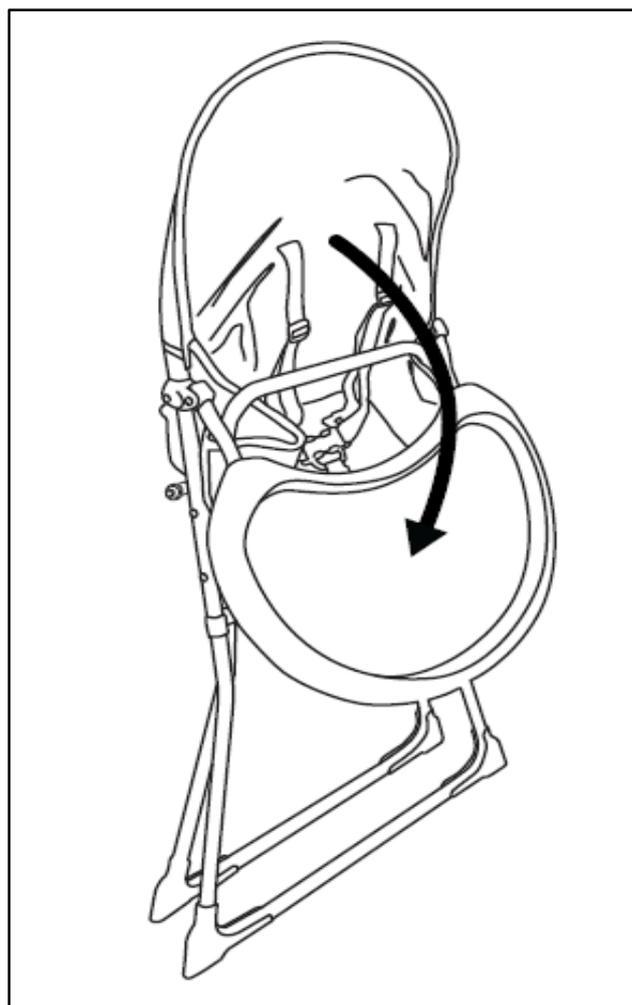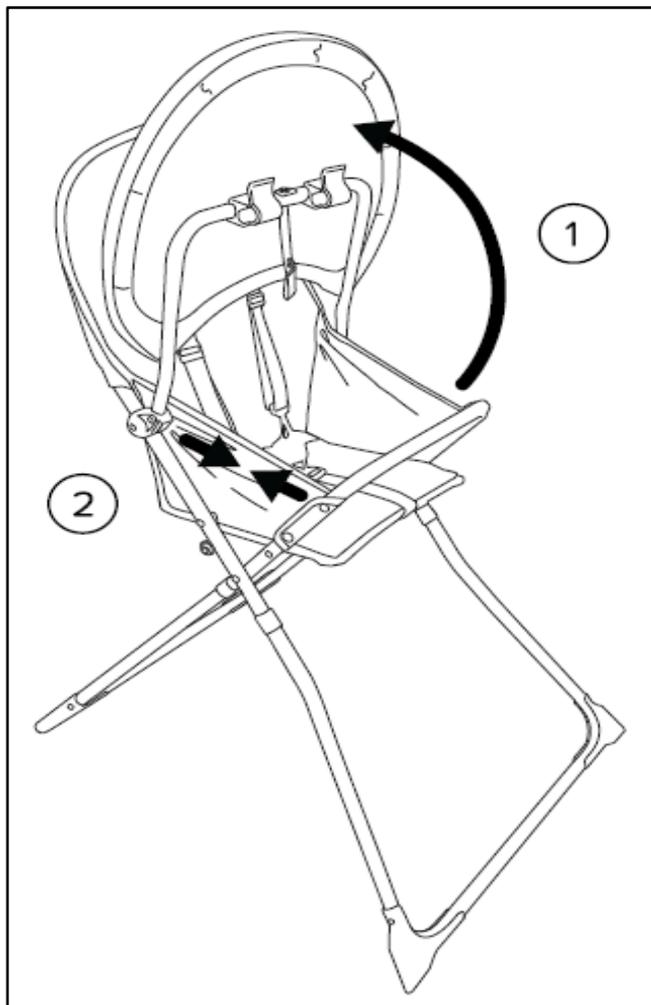

# MAINTENANCE

---

- Ensure all locking devices work correctly and regularly check the locks and fittings for security.
- Regularly check all parts for wear and tear.
- Do not use spray lubricants, simply wipe clean after use.

# CARE

---

- Clean spills as soon as possible to prevent permanent marking.
- The highchair can be cleaned by sponging with warm soapy water and a mild detergent. A mild disinfectant may be used if desired.
- Stubborn marks may be removed with a non-abrasive cleaner. Never clean with abrasive, ammonia based, bleach based or spirit type cleaners.
- Regularly check the highchair, and particularly the harness, for wear and discontinue use if any damage is found.

Made in China

*Manufactured for:*  
The Warehouse Ltd  
26 The Warehouse Way,  
Northcote, Auckland.  
0800 422 274