




Contento Highchair

INSTRUCTION MANUAL

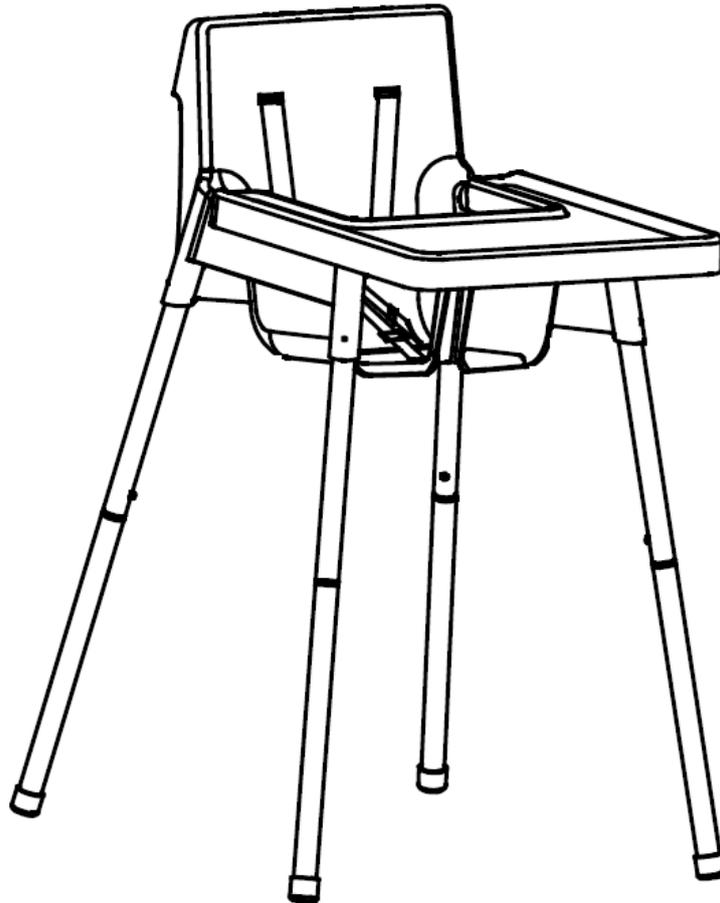

Complies with High Chair Safety Requirements of EN Standard EN14988-2 + A1:2012 & Australian Standard AS4684:2009

IMPORTANT:

Thank you for choosing our product. Please read and understand these instructions before using this high chair. If in doubt, please seek help from our Customer Service Team.

Please retain the instructions for future reference.

Images in this manual are representative only. Actual product may vary. The manufacturer reserves the right to change specifications without prior notice.

SAFETY

THANK YOU FOR CHOOSING OUR PRODUCT. PLEASE TAKE TIME TO READ THE IMPORTANT SAFETY NOTES BELOW. THIS WILL ENSURE MANY YEARS OF HAPPY AND SAFE USE. IF IN DOUBT, PLEASE SEEK ASSISTANCE FROM OUR CUSTOMER SERVICE TEAM.

INCORRECT ASSEMBLY MAY MAKE THE HIGHCHAIR UNSAFE. DO NOT USE THIS HIGHCHAIR IF ANY PART IS BROKEN, TORN OR MISSING.




WARNING

- **Follow the manufacturer's instructions.**
- **Do not leave children unattended.**
- **The harness must always be used and correctly fitted - most injuries from highchairs are caused by falls.**
- **Position the highchair away from solid structures and benches to avoid injuries caused by falls and by access to dangerous items.**
- Adult assembly required.
- DO NOT use the highchair unless all components are correctly fitted and adjusted
- Use only on a flat, even and horizontal floor. Do not elevate the high chair on any structure or table.
- To reduce the risk of injury, position the high chair away from furniture, walls, hot surfaces and liquids, window covering cords, and electrical cords and position the high chair away from furniture unless the chair is being used at a table, with a tray removed.
- Be aware of the risk of open fire and other sources of strong heat, such as electric bar fires, gas fires etc. in the vicinity of the high chair.
- DO NOT use the high chair until the child can sit up unaided.
- This high chair should be used in an upright position only by children capable of reliably and consistently sitting upright.
- This high chair is designed to be used by a child up to 3 years of age.
- Maximum weight 18kg.
- DO NOT use this high chair for more than one child at a time and do not leave other children playing unattended near the high chair.
- If the high chair is not working correctly, do not use it - immediately seek repair.
- Regularly inspect your high chair. Discontinue use if any part is broken, torn or missing.


PARTS LIST

Please retain all packaging until after assembly is complete and you are certain no parts are missing.


After assembly, please dispose of all packaging carefully.

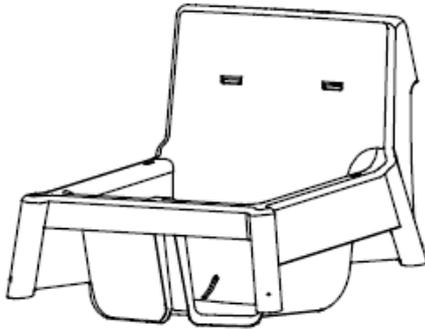


SEAT

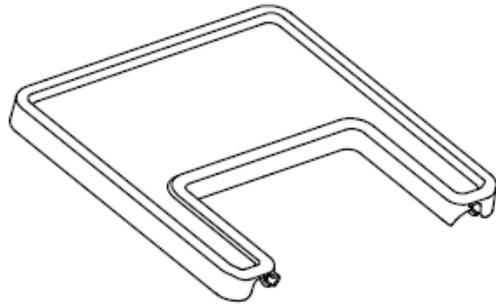


TRAY TABLE

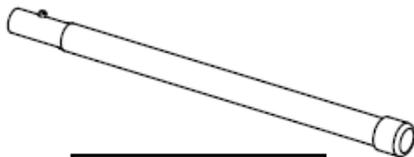


FRONT LEG x2

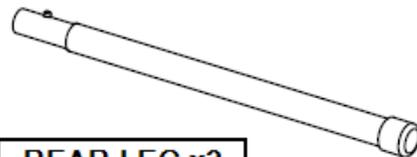

REAR LEG x2

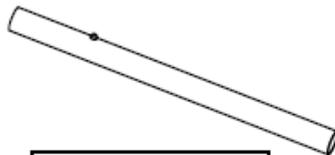


LOWER LEG x4

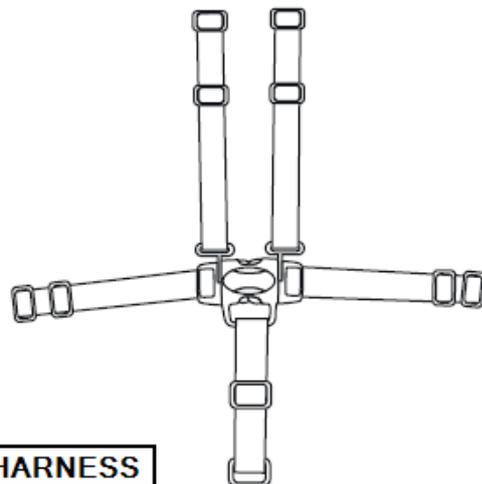


HARNESS

ASSEMBLING LEGS

Press the spring button and fit a lower leg to an upper leg, sliding in until the button pops out through the hole in the upper leg. Repeat for the other 3 legs.

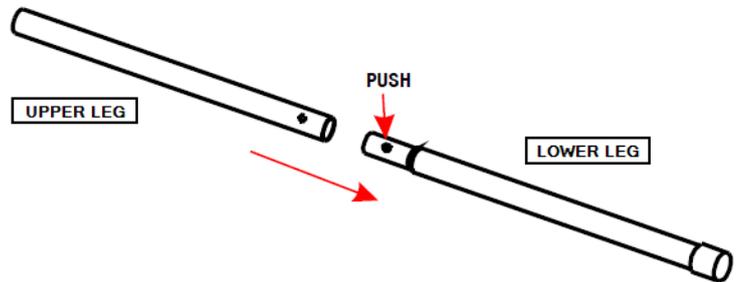

Once assembled, attach legs to the chair body, taking care that front and back legs are in the correct location. Ensure that the button clicks through the corresponding hole in each case.

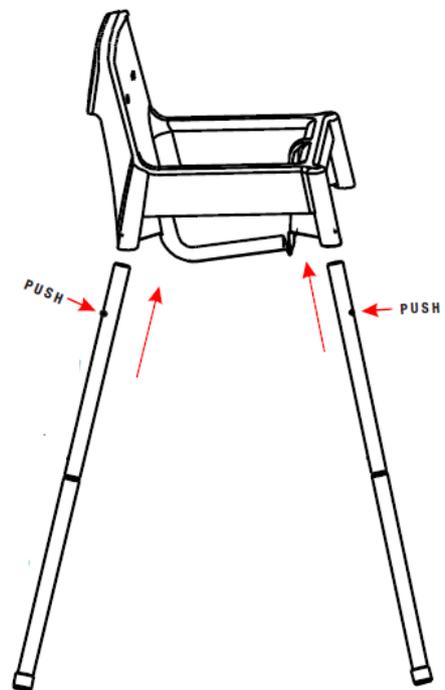


High Chair with all four legs assembled.




FITTING TRAY TABLE

Insert the hooks on each side of the rear of the tray into the corresponding slots on the armrests.

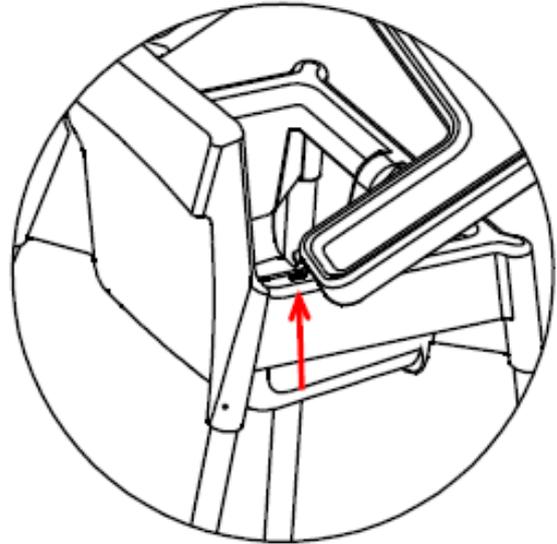

Gently press down until the tray clicks into place on the front of the seat.

Ensure the two tabs have clicked into place beneath the cross bar of the seat.

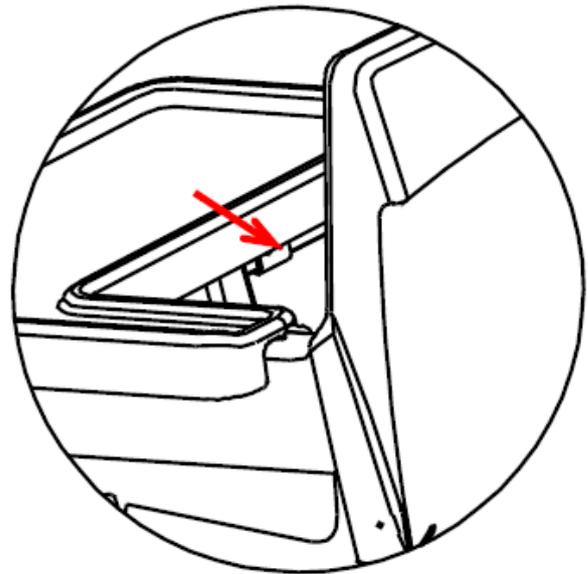



WARNING: Always ensure the tray is locked correctly before use.



TO REMOVE TRAY TABLE


With both hands, pull back and lift the two locking tabs holding the tray to the crossbar of the seat above the leg openings.

The tray table can then be rotated up and lifted away from the slots at the rear of the seat sides.

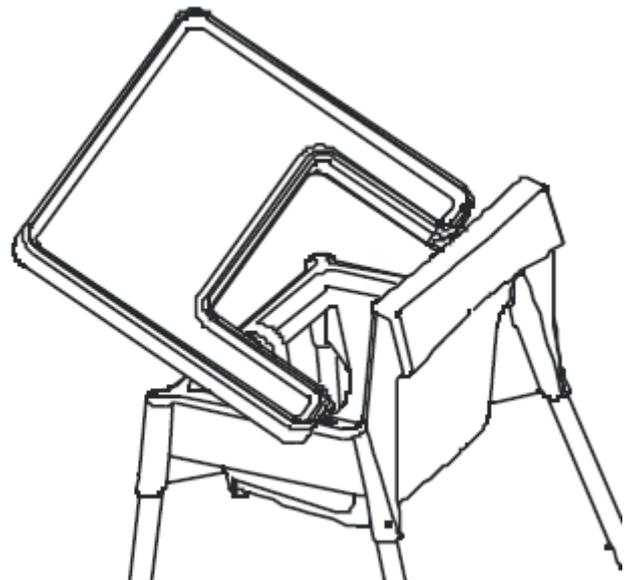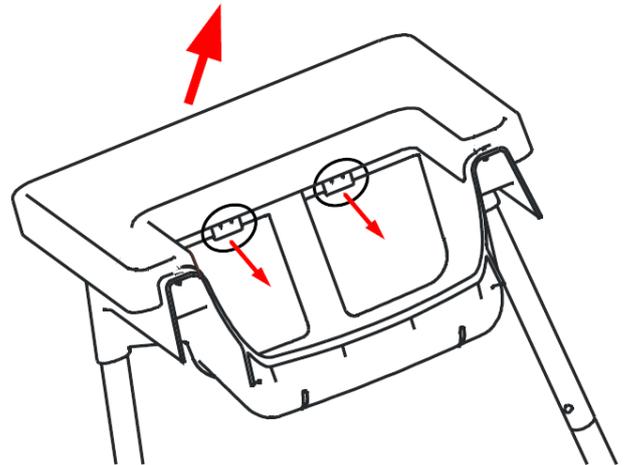

SAFETY HARNESS


A five-point safety harness is provided to restrain your child and should always be worn. Confirm the waist straps, shoulder straps and crotch strap are fed through the slots in the seat unit before use.

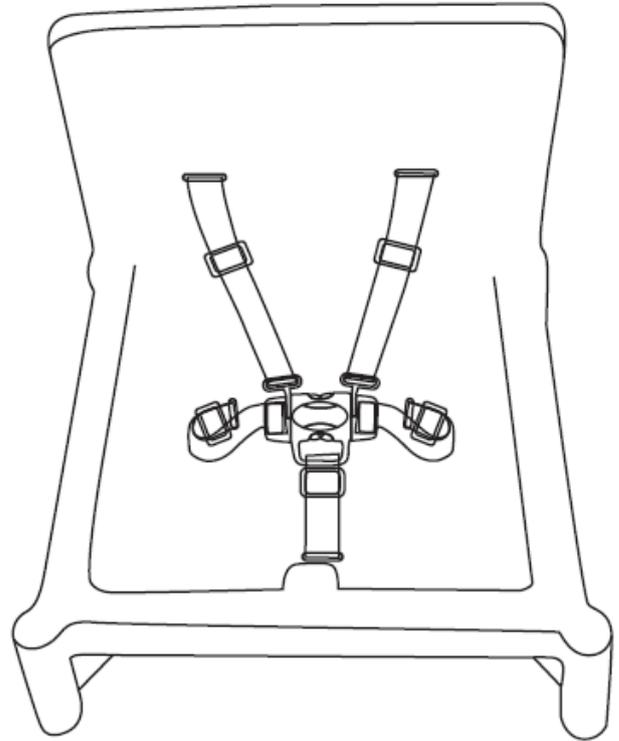

Sliding adjusters, **A**, are fitted and should be carefully adjusted so the harness fits your child comfortably.

To fasten the harness push the side pieces into the centre buckle.

To release, press parts **B** and remove from the buckle.

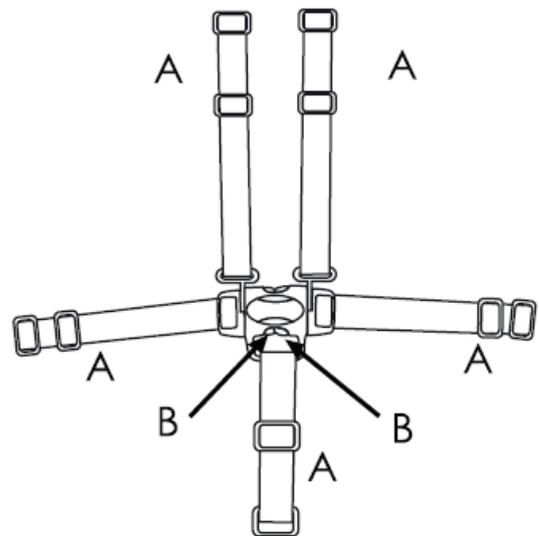

WARNING: USE THIS HARNESS AT ALL TIMES

DISASSEMBLY

The High Chair can be disassembled for storage or travel by pushing in the spring buttons and removing the legs from the body, and then pulling apart the upper and lower leg tubes.

CLEANING AND MAINTENANCE

- Wipe spilled food off the high chair as soon as possible as some types of food may cause staining.
- Wipe clean with a cloth dampened in a mild cleaner. Wipe dry with a soft, clean cloth. Do not use bleach.
- Regularly check the high chair, particularly the harness, for wear and discontinue use if damaged.

Made in China

Manufactured for:
The Warehouse Ltd
26 The Warehouse Way,
Northcote, Auckland.
0800 422 274