


GASCRAFT®

PORTABLE CHARCOAL BBQ BLACK/ RED

Model No. BQ004

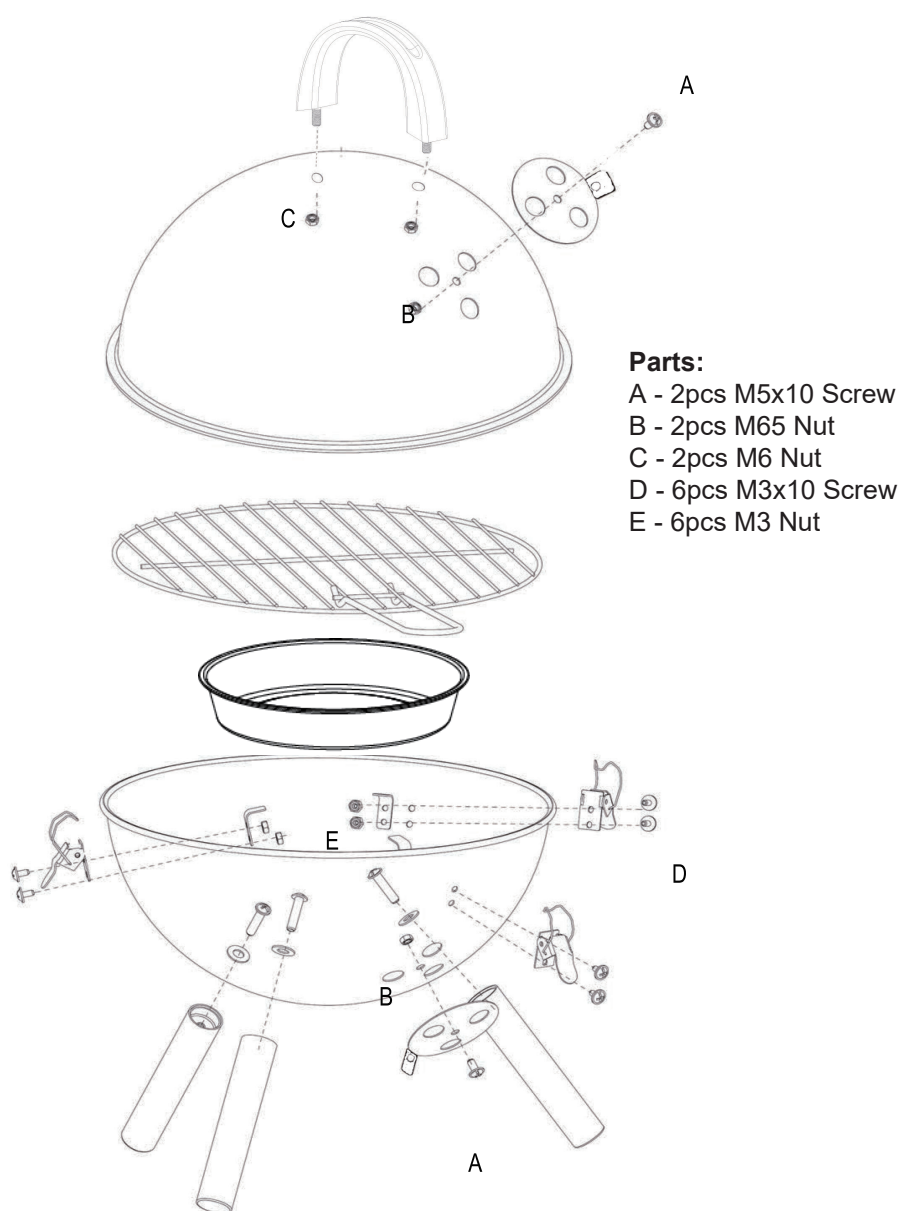

Retain these instructions for future use.

Important: The installer or seller must leave these instructions with the consumer.

GASCRAFT®



IMPORTANT SAFETY WARNINGS

Failure to read and follow this manual and the safety warnings herein may result in serious bodily injury or death, or in a fire or an explosion causing damage to property.

Important

Check with your local council regarding fire bans before using your Charcoal BBQ.

Check with your local council regarding air quality regulations.

- ⚠ **IMPORTANT!** Only use this BBQ on a flat, level non-flammable surface or ground.
- ⚠ This product is for **OUTDOOR USE ONLY**. **NEVER** use in an enclosed space such as a carport, garage, veranda, covered patio, or under an overhead structure of any kind.
- ⚠ **ATTENTION!** This BBQ will become very hot. Do not attempt to move it during operation.
- ⚠ **WARNING!** Keep children and pets away from the BBQ when in use. Any modification of this BBQ may be dangerous.
- ⚠ When positioning, ensure the BBQ is a minimum of 1 metre from flammable items or structures. Do not use within 4m of gas cylinders, and keep away from vehicles.
- ⚠ Do not overfill fire pan with burnable products. Never handle hot parts with unprotected hands.
- ⚠ **NEVER USE INDOORS.** If used indoors, toxic fumes can build up and cause bodily injury or death. Only use outdoors in a well-ventilated area.
- ⚠ **ATTENTION!** This BBQ should not be used under any overhead combustible material.
- ⚠ **NEVER** leave this BBQ unattended when in use.
- ⚠ Do not add starter fluid or charcoal impregnated with starter fluid to warm or hot fires.
- ⚠ Do not remove ashes until all wood is completely burnt out and the BBQ is fully cooled.
- ⚠ Do not use clothing with long or loose sleeves when operating the BBQ.
- ⚠ Do not use the BBQ in high winds. Do not touch the BBQ with your hands to check if it is hot.
- ⚠ Do not use water to control flare-ups or extinguish charcoal. Always extinguish your BBQ when not being monitored.
- ⚠ Do not dump hot coals where they may cause a fire hazard. Do not store away or cover the BBQ until all embers are extinguished and removed, and the BBQ is fully cooled.
- ⚠ This BBQ is not intended to be used in recreational vehicles or boats.
- ⚠ **CAUTION!** Do not use petrol, spirit or lighter fluid for lighting or re-lighting the BBQ! Use only commercially made firelighters.
- ⚠ This BBQ is for use with charcoal. It will burn hotter, more completely and create less smoke.
- ⚠ Do NOT burn manufactured logs, driftwood, trash, leaves, paper, cardboard, plywood, painted or stained or pressure treated wood. Avoid using softwoods such as pine or cedar that can throw sparks.
- ⚠ **CAUTION:** It is not recommended to use this BBQ on a wooden or other combustible surface or any surface that is not entirely resistant to high heat. However, if you intend to use this item on a wooden deck, other combustible surface, or any surface that is not entirely resistant to high heat, **you must** use a non-flammable and heat resistant material such as concrete pavers, brick, or stone between the BBQ and the surface.
- ⚠ If you start or see a fire that is out of control, call 111 from a safe place.

1. **Make sure** the assembly instructions have been followed correctly.
2. Set the grill up in a suitable position, on a level surface away from areas likely to catch fire. The base of grill will get hot so ensure it stands on a suitable surface.
3. Use charcoal or kindling wood and a suitable lighting method.
4. **ALWAYS WEAR OVEN GLOVES WHEN HANDLING.**
5. **CHECK REGIONAL FIRE REGULATIONS BEFORE USE.**



- **NEVER TOUCH METAL PARTS WHICH MAY BE HOT**
- **DO NOT USE OR POUR GASOLINE METHYLATED SPIRITS OR PARAFFIN ONTO BURNING CHARCOAL**
- **DO NOT USE INDOORS**
- **DO NOT ATTEMPT TO MOVE FIRE PIT WHILE IN USE WITH HOT CHARCOAL**
- **NEVER HANDLE CHARCOAL OR KINDING WOOD AFTER LIGHTING**
- **KEEP SMALL CHILDREN AND PETS CLEAR OF THIS FIRE PIT**



KEEP IN A SAFE PLACE FOR FUTURE REFERENCE


SAFETY HINTS

- 1 Stand your grill on a safe, level surface, away from flammable items such as wooden fences or over-hanging tree branches. **NEVER USE** your grill indoors or in confined areas.
- 2 **DO NOT** use gasoline, paraffin, methylated spirit or lighter fuel to light your grill. Special lighting fluid, pastes and fire lighters are available.
- 3 Once lit **DO NOT** move your grill or leave it unattended.
- 4 Keep children and pets a safe distance from the grill.
- 5 Keep a fire extinguisher handy for emergency use.
- 6 During use the grill will become hot, so only handle lids etc with an oven glove.
- 7 Ensure that the grill has completely cooled before removing the ash.



HELPFUL HINTS

- 1 To make it easier to clean your grill after use, line the fire bowl with aluminium foil, shiny side up. Remember to leave ventilation holes clear, by piercing the foil where necessary. This process will lengthen the life of your grill and reflect the heat more efficiently on to the food.
- 2 If the fire flares then douse the flames slightly with a fine water spray.
- 3 When you have finished with the grill never pour cold water directly on the coals to extinguish them as this may damage the appliance. Use old cinders, sand or fine water spray.
- 4 To clean your grill soak the grates grill and tools in hot soapy water as soon as possible after use. Dry thoroughly and store in a dry place. Do not leave your grill outside unprotected.

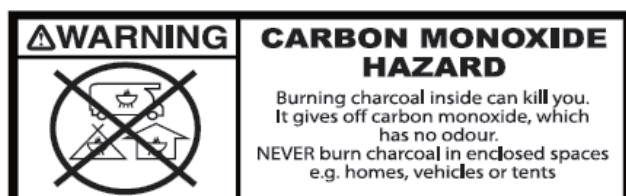

CARBON MONOXIDE HAZARD

Burning charcoal inside can kill you.
It gives off carbon monoxide, which
has no odour.
NEVER burn charcoal in enclosed spaces
e.g. homes, vehicles or tents