

living & co.

40cm Pedestal Fan with Timer



INSTRUCTION MANUAL

FS40-L

AFTER SALES SUPPORT

☎ NZ 0800 422 274

Contents

	Page
Important Safety Instructions	2-3
Product Overview	4
Getting Started	5-8
Operating Instructions	9-10
Other Useful Information	11-12
Warranty	13

Important Safety Instructions

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Make sure you understand all instructions and warnings. **Keep the manual in a safe place for future reference**, along with any warranty information, your purchase receipt and the original packaging carton. If you sell or transfer ownership of this product, pass on these instructions to the new owner. **Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:**

Electrical safety and cord handling

- **Voltage:** Make sure your outlet voltage and circuit frequency correspond to the voltage stated on the rating label. If this is not the case, do not use the fan.
- **Water:** To protect against fire and electric shock, do not immerse the cord, plug or the fan itself in water or other liquids, or expose the electrical connections to water. Ensure your hands are dry before handling the plug or switching on the appliance. Do not use the fan outdoors or on wet surfaces. Protect it from liquid spills.
- **Damage:** Check the power cord regularly for visible damage. If the cord is damaged, it must be replaced by the manufacturer, its authorised service centres or appropriately qualified personnel in order to avoid any hazards. **WARNING!** Do not pick up or operate the appliance if the power supply cord, plug or housing is damaged, or after it malfunctions or has been dropped or damaged in any manner.
- **Protect the power cord:**
 - * Do not operate the fan with the cord coiled up; always fully unwind.
 - * Do not twist or kink the cord or let it touch heated surfaces.
 - * Do not put any stress on the cord where it connects to the product.
 - * Never carry the fan by the cord.
 - * Arrange the cord away from any traffic area so no one will trip over it.
 - * Do not run the cord under carpeting or cover it with rugs or runners.
- **Connection:** To insert the plug, grasp it firmly and guide it into outlet.
- **Disconnection:** Switch off and unplug the fan from the power outlet when it is not in use, during lightning storms and before cleaning, servicing, moving or storing the fan. Grasp the plug and remove it from the outlet, do not pull the cord when disconnecting.

 
Important Safety Instructions (Continued)

- **RCD:** Unless your home is already fitted with a residual current device (safety switch), we recommend installing an RCD with a rated residual operating current not exceeding 30mA to provide additional safety protection when using electrical appliances. See your electrician for professional advice.


Usage conditions and restrictions

- **Domestic use only:** This appliance is intended for indoor household use only. It is not suitable for commercial, industrial, trade or outdoor use. Do not use it for anything other than its intended purpose, and only use it as described in this manual. Any other use may cause fire, electric shock or injury.
- **Attachments:** The use of accessories not intended for use with this fan may cause injuries to the user or damage to the appliance.
- **Liability:** We assume no liability for any damages or personal injury caused by misuse of the product and/or failure to follow these instructions.
- **Usage restriction:** This fan is not intended for use by children and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Children:** This fan is not a toy. Supervise children to ensure they do not play with it. Close supervision is necessary when any appliance is used by or near children.
- **WARNING! Do not leave unattended during use!** Always switch it off and unplug when not in use, if left unattended and before cleaning and storing.
- **Location:** Place the fan on a dry, flat, stable surface to avoid overturning.
- **Keep clear:** Ensure nothing is blocking the airflow outlet, air intake grilles or ventilation openings.
- **WARNING! DO NOT use the fan in the following areas:**
 - * Near an open flame, a hot burner, oven or other source of high heat.
 - * On a soft surface (such as carpet) or where it may tip over during use.
 - * Outdoors or in areas of high humidity.
 - * In a bathroom, laundry area, near a sink, washer, pool or any source of water.
 - * Near curtains or in tight corners, to enjoy maximum airflow.
 - * In areas where paint, petrol, etc. is stored and there is a risk of explosion or fire from flammable gases, or in areas where substances are being sprayed.
- **CAUTION! Personal safety:** Avoid contact with moving parts. Never insert fingers, pencils or any other objects through the grilles when the fan is running, as this may cause electric shock and/or a fire hazard. Keep hair and loose clothing well away from the fan when it is in use.

Product Overview

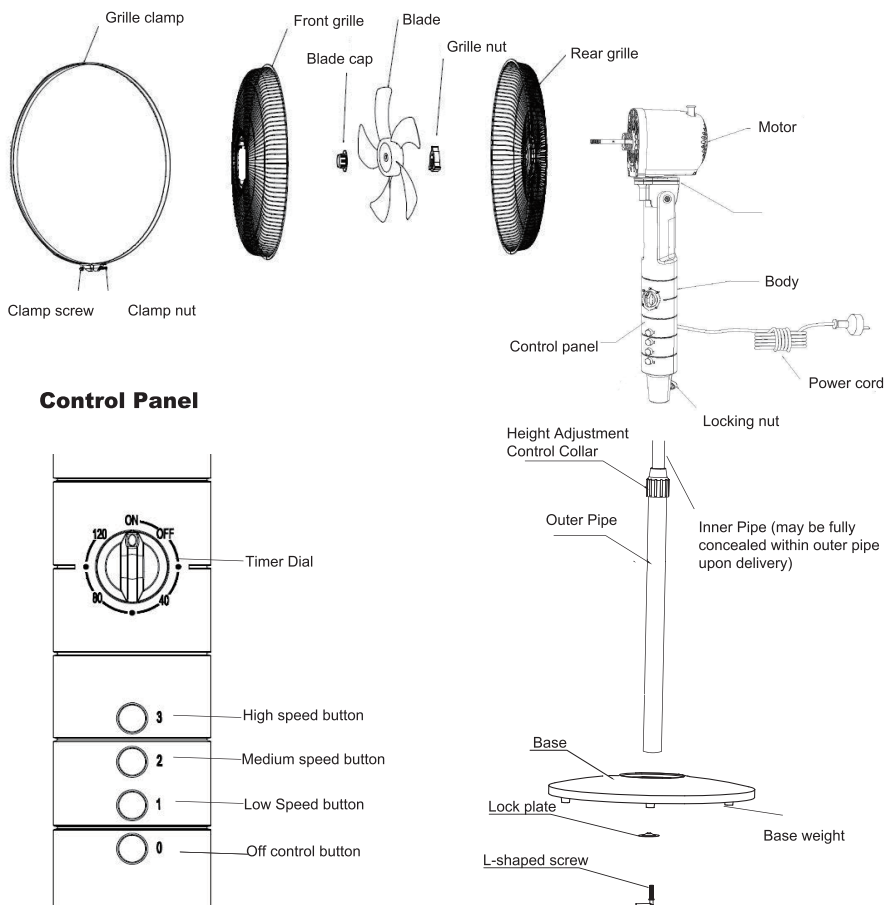

Control Panel

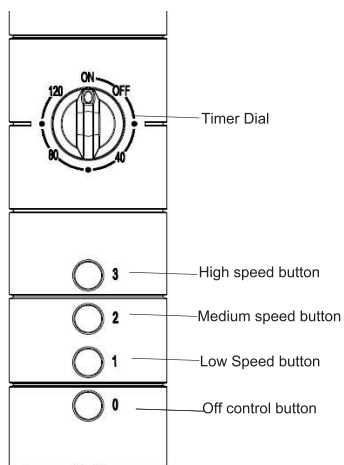 

NOTE:

Due to continued product improvement, images and illustrations in this manual may vary slightly from the product purchased. All images in this manual are for reference purposes only. Parts are not necessarily pictured to scale.

Getting Started

Before first use

- **Unpacking:** This product has been packaged to protect it against transportation damage. Unpack the appliance and keep the original packaging carton and materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the appliance when it is not in use. In the event it is to be disposed of, please recycle all packaging materials where possible.
- **Safe packaging disposal:** Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.
- **Inspection:** Unwind the cord to its full length and inspect it for damage. Do not use the appliance if the appliance or its cord have been damaged or are not working properly.

In case of damage, contact our after sales support centre for advice on examination, repair or return of the damaged product.

- **Instructions:** Make sure you have read and understood all instructions and warnings in this manual. Refer to the Product Overview, page 4, to familiarise yourself with the product and identify all parts. Pay particular attention to the safety instructions.
- **Assembly:** Your new fan has been shipped unassembled to minimise packaging waste. It is easy to disassemble for cleaning and storage. Assembly instructions are provided on the following pages. The instructions on page 6 and the illustrations on pages 7 and 8 shows how all the parts fit together.

Getting Started (Cont.)

WARNING: Electric shock hazard!

Do not connect the fan to power until it is fully assembled.

ASSEMBLY INSTRUCTIONS:

1. Unscrew the **Height Adjustment Control Collar** from the **Outer Pipe** by turning counter-clockwise and set aside. Pull out the **Inner Pipe** all the way to the top. (This may be fully concealed within the outer pipe, pull it up to the top).
2. Put the **Base weight** together with **Base** on a level dry surface and remove the **Lock Plate** and **L-shaped screw** from the **Outer Pipe**. Insert the **Outer Pipe** into the hole on the **Base**, turn the **Base** over and affix the **Outer Pipe** using the **L-shaped screw** and the **Lock Plate**. Tighten the screw firmly. [refer Figure 1]
3. Replace the **Height adjustment Control Collar** and tighten by turning clockwise. [refer Figure 2]
4. Place the fan motor **Body** into the top of the inner pipe, tighten the **Locking nut**
5. Unscrew the **Grille Nut** (by turning counterclockwise) and the **Blade Cap** (by turning clockwise) on the front of the motor [refer Figure 3]
6. Mount the **Rear Grille** to the motor front cover by aligning holes on the guard to the positioning knobs on the motor front cover. [refer Figure 3]
7. Replace and tighten the **Grille Nut** by turning nut clockwise to hold the Rear Grille in place.
8. Put the **Fan Blade** onto the motor shaft by matching the shafts slots with the blades slot, tighten the **Blade** with **Blade Cap** by turning it counterclockwise. [refer Figure 4]
9. Test fan by rotating the **Blade** with your hands, make sure there isn't any contact with the nut. The fan **Blade** should rotate freely, otherwise repeat all steps again, beginning from step 4.
10. Mount the **Front Grille** [Figure 5] onto the **Rear Grille** taking care to align the **Grille clamp** so that it clips and retains both sections of grille together.
11. Once the **Grille Clamp** is in place, use a screwdriver to secure the **Clamp screw** and **Clamp nut** [refer Figure 6].
12. Assembly is complete [Figure 7].

Figure 1

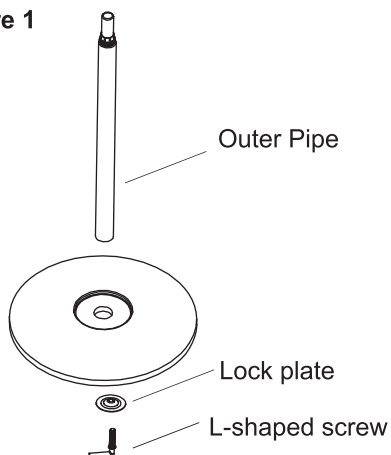 


Figure 2

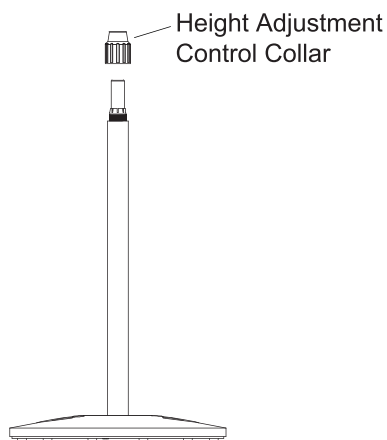 


Figure 3

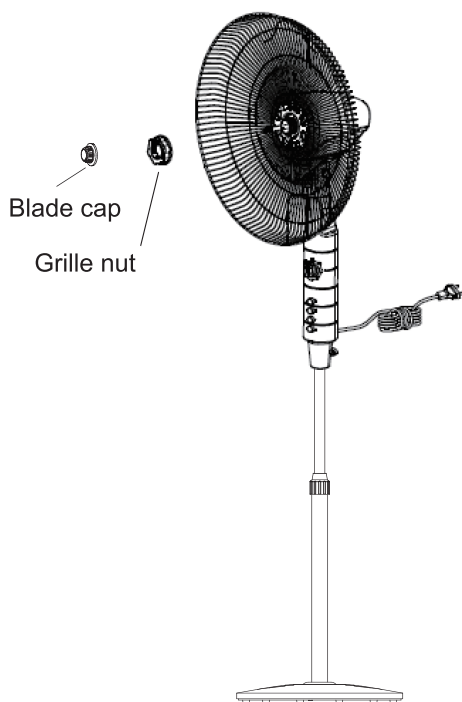 


Figure 4

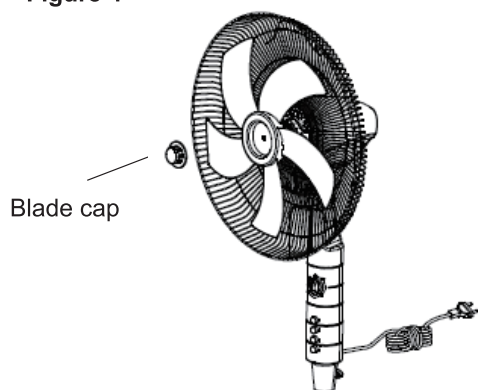 


Figure 5


 
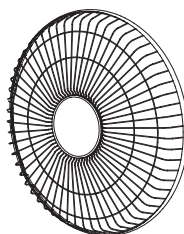 


Figure 7

 Figure 6

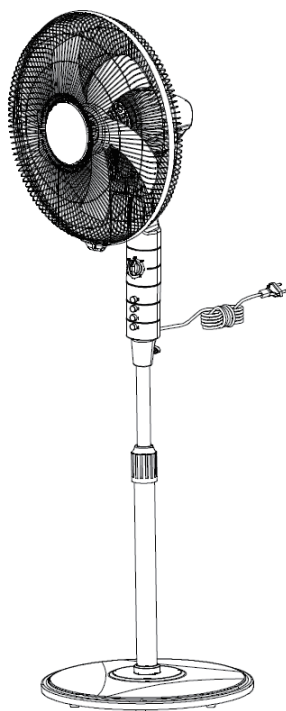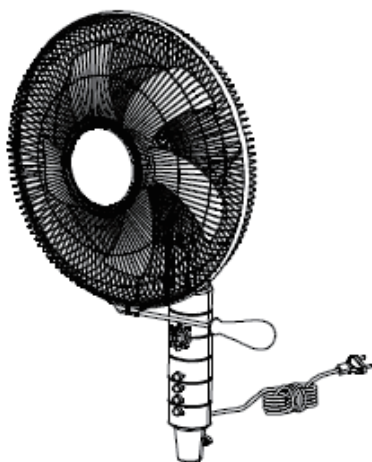

Operating Instructions

 
Using the fan

- Decide on a location for the fan: convenient to a mains electrical supply socket. Place the fan on a dry, level surface floor where it will not overturn during use. If moving the fan to a different location, switch off and unplug it from the mains. Make sure the fan is switched to the OFF position, then insert the power plug into an appropriate electrical outlet and switch on power to the outlet.

Switching the fan on/off and Speed selection:

- Turn the timer dial to the "ON" position, then simply press the desired fan speed selection button:
 - Control button 1) Low Speed
 - Control button 2) Medium Speed
 - Control button 3) High Speed
 - Control button 0) OFF

Note: The fan can be switched off by adjusting the timer dial to the OFF position or by pressing the "0" speed button.

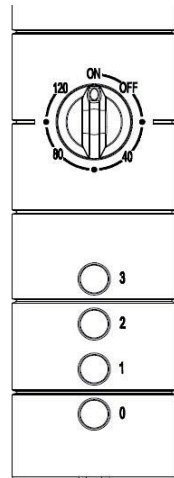

Timer function:

 
- Firmly grasp the timer dial with thumb and forefinger and rotate clockwise to set to your desired run time, up to 120 mins (2hrs). The timer will automatically count down, switching the fan off at the completion of the set time.

Oscillation:

- To set the fan into oscillation, press down the oscillation knob on top of the motor housing. The fan head will pivot from one side to the other to help distribute air over larger areas.

For stationary operation, pull up the oscillation knob when the air is blowing in the desired direction.

CAUTION: Do not reach across the front of the fan when operating the oscillation control, to avoid the risk of your clothing, sleeves etc, entering the guard and getting caught in the blades.

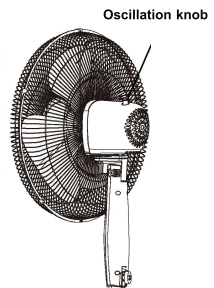


Operating Instructions (continued)

- **Tilt adjustment**

The fan head assembly can be tilted to direct the breeze upwards or downwards to your desired angle. Manually move the fan head in the orientation shown, do not apply excessive force.

 CAUTION: Do not tilt back the fan head further than it is intended to go. Doing so will damage the unit.

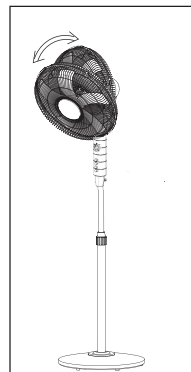

WARNING!

- Before cleaning, maintenance or moving the fan, switch off the fan and unplug it from the wall outlet.
- Do not immerse the fan in water or other liquids. Do not spray it with liquids. Do not allow water to drip on or into the housing.
- Never use petrol, solvents, harsh detergents, or abrasive or alkaline cleaners on the fan.

Other Useful Information

Cleaning and maintenance

- **Dusting:** Clean your fan periodically by lightly running a vacuum cleaner nozzle (soft brush) over the front outlets and rear grilles to remove any dust or dirt that may have accumulated inside or on the unit. Alternatively, use a soft, dry cloth for dusting.
- **Stubborn stains:** Use a slightly damp, soapy cloth for stubborn stains but be sure the cloth is not too wet. Use caution around the housing. Do not allow the electrical components to be exposed to water.
- **Storage:** In the off season, store the clean and dry fan in a safe, dry location, protected from dust and located so it is not in direct sunlight. We recommend using the original carton for storage of the disassembled product (follow the assembly instructions in reverse order to disassemble). Alternatively, place a large plastic bag or piece of material over the top of the cleaned appliance for dust protection.
- **Service/repair:** The appliance requires no maintenance and contains no user-serviceable parts. Do not attempt to take the motor unit apart, repair or modify it. Do not operate the fan if its power cord or plug is damaged, or when it is working abnormally. In case of damage or malfunction, or if the cord is damaged, have the unit repaired by trained personnel only, or contact the after sales support line for advice on repair or replacement.
- **Before phoning customer service:** please ensure that your fan is properly assembled and all parts are undamaged and in good working order. Also ensure that the fan is correctly connected to your power supply.

Other Useful Information (Cont.)

Technical specifications

Power	45W,220-240V~,50-60Hz
Fan speeds	3 (Low - Medium - High)
Dimensions (mm)	1240 mm (H) x 410 mm (W)x 380 mm (D)

Compliance

This appliance has been fully tested and meets all requirements as set out by standards AS/NZS 60335.1 and AS/NZS 60335.2.80.



The RCM Mark (Regulatory Compliance Mark) indicates that the product complies with the relevant government requirements for EMC and electrical product safety.

Responsible disposal

- At the end of its working life, make the appliance unserviceable by unplugging it from the power outlet and cutting the power cord.
- Do not throw this appliance out with your household rubbish. Electrical and electronic products contain substances which can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.



living & co.

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are confident in our products, we back them up with a 1 year warranty. Now you too can relax knowing that you are covered. Customer Helpline NZ: 0800 422 274

This product is covered by 1 year warranty when accompanied by proof of purchase.

IM Version 1.0 May 2023