

成品尺寸：145x210mm 骑马钉

living & co.

10CM USB FAN



INSTRUCTION MANUAL TX-401D-U

Contents

	Page
Important Safety Instructions	2-3
Product Overview	4
Operating Instructions	5
Other Useful Information	6
Warranty	7

Important Safety Instructions

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Make sure you understand all instructions and warnings. Keep the manual in a safe place for future reference, along with any warranty information, your purchase receipt and the packaging carton. If you sell or transfer ownership of this product, please pass on these instructions to the new owner.

Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:


Usage conditions and restrictions

- **Water:** To protect against fire and electric shock, do not immerse the cord, plug or the fan in water or other liquid, or expose the electrical connections to water. Do not use the fan outdoors or on wet surfaces. Protect it from liquid spills.
- **Damage:** Check the USB power cord regularly for visible damage. If the cord is damaged, it must be replaced by the manufacturer, its authorised service centres or appropriately qualified personnel in order to avoid any hazards.
- **Protect the USB cord:**
 - Do not twist or kink the cord or let it touch heated surfaces.
 - Do not put any stress on the cord where it connects to the product.
 - Never carry the fan by the cord.
 - Arrange the cord away from any traffic area so no one will trip over it.
- **Connection:** To connect the fan, insert the USB connector firmly into a USB port on a computer or other power source.
- **Disconnection:** Switch off and disconnect the fan from the power source when it is not in use and before cleaning, servicing, moving or storing the appliance. Grasp the USB connector and remove it from the USB port, do not pull the cord when disconnecting.
- **Guard removal:** Do not remove the guard (grille) for cleaning.
- **WARNING! Do not leave unattended during use!** Always switch the fan off and disconnect it from the power source when it is not in use, if left unattended, and before cleaning and storing.

Important Safety Instructions (Cont.)

- **Domestic use only:** This fan is intended for indoor household use only. It is not suitable for commercial, industrial or outdoor use. Do not use it for anything other than its intended purpose (do not use it as a dryer), and only use it as described in this manual. Any other use may cause fire, electric shock or injury.
- **Attachments:** The use of accessory attachments not recommended in this manual may cause injury or hazards.
- **Usage restriction:** This fan is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Children:** This is a fan, not a toy! Supervise children to ensure they do not play with the fan. Close supervision is necessary when any appliance is used by or near children. Place the fan in an area where young children cannot reach it.
- **Location:** Place the fan on a dry, flat, stable surface to avoid overturning.
- **Keep the top clear:** Do not place anything on top of fan.
- **Assembly:** Do not use the fan without the protective grilles (rear and front guards). Do not attempt to force the grille in order to stop or start the fan.
- **WARNING! DO NOT use the fan in the following areas:**
 - Near an open flame, a hot burner, oven or other source of high heat.
 - On a soft surface (such as carpet) or where it may tip over during use.
 - Outdoors, on wet surfaces or in areas of high humidity without suitable ventilation.
 - In a bathroom or near water-filled baths, swimming pools, sinks or wash basins.
 - Near curtains or drapes where these could get pulled into the fan or against the fan grille.
 - In areas where flammable substances (e.g., paint, petrol, etc.) are stored or being sprayed and there is a risk of explosion or fire.
- **CAUTION! Personal safety:** Avoid contact with moving parts. Never insert fingers, pencils or any other objects through the grilles when the fan is running. Keep hair and loose clothing well away from the fan when it is in use.
- **Free airflow:** Ensure nothing is safety grilles (guards). Do not use the fan under a blanket or in poorly ventilated locations.
- **Misuse:** We accept no liability for any damages or personal injury caused by misuse of the product and/or failure to follow these instructions.



Product Overview

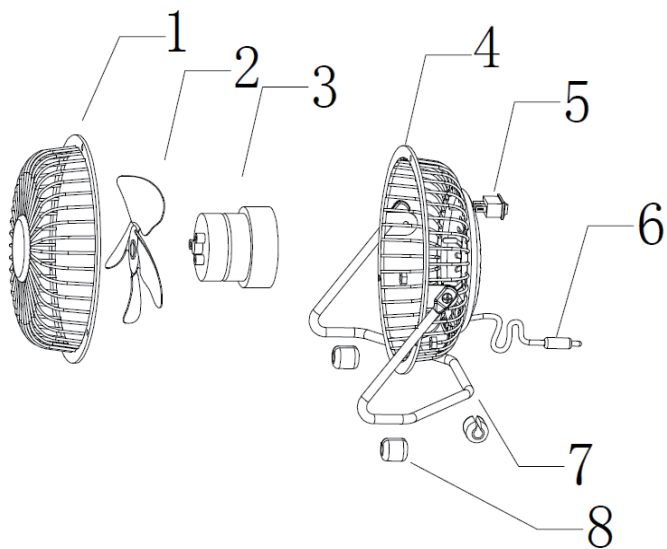

- 1.front grille 2.fan blade 3.Motor 4.rear grille 5.on/off switch
6.USB connector lead 7.support frame 8.support feet

Operating Instructions

Plug the USB plug into a USB outlet and use the on/off switch on the rear of the unit.

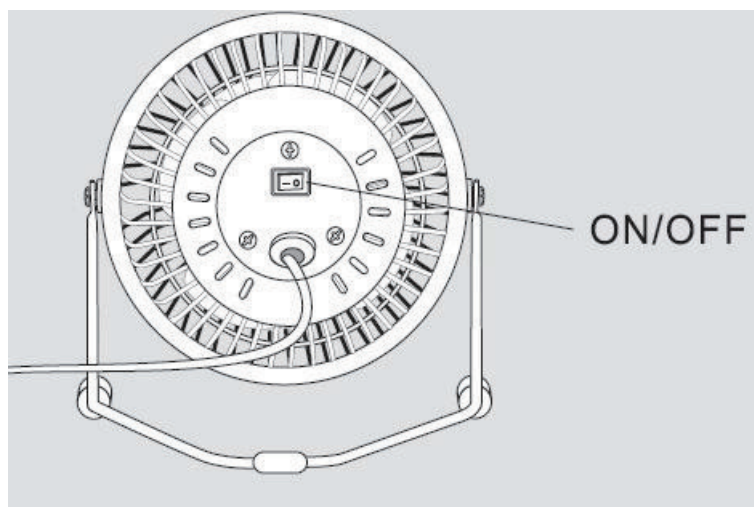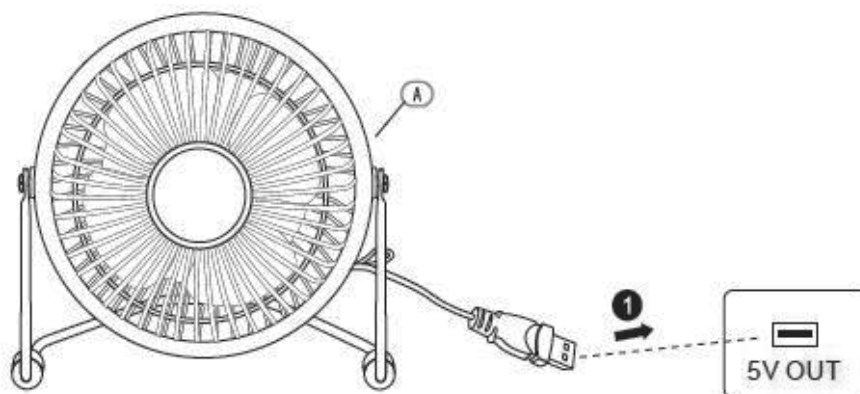

Instructions

Before first use

- **Unpacking:** This product has been packaged to protect it against transportation damage. Unpack the appliance and keep the original packaging materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the appliance when it is not in use. In the event that the packaging is to be disposed of, please recycle it where possible.
- **Safe packaging disposal:** Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.
- **Inspection:** Unwind the USB cord to its full length and inspect it for damage. Do not use the fan if the appliance or its cord has been damaged or is not working properly. In case of damage, contact our after sales support centre.
- **Documentation:** Make sure you have read and understood all instructions and warnings in this manual. Refer to the illustrations to familiarise yourself with the product and identify all parts. Pay particular attention to the safety instructions on the previous pages.
- **Assembly:** The fan comes fully assembled and is ready for immediate use.

Using the fan

- Place the fan on a dry, level surface where it will not overturn during use. The fan is designed for table/desk use. If moving the fan to a different location, switch it off and disconnect it from the power source beforehand.
- Ensure the speed control at the back of the motor housing is in the OFF [O] position, then insert the USB connector into an appropriate power source.
- Press the switch at the back of the fan to switch the fan on or off. Always operate the fan on its base in the normal upright position.
- To disconnect the fan, press the switch to the OFF [O] position, then remove the USB connector from the USB port.

WARNING!

- Before cleaning, maintenance or moving the fan, switch the fan off and disconnect it from the power source.
- Never immerse the fan in water or other liquids. Never spray it with liquids. Never allow water to drip on or into the fan motor housing.
- Never use petrol, solvents, harsh detergents, or abrasive or alkaline cleaners on the fan.



living & co.

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are confident in our products, we back them up with a 1 year warranty. Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This product is covered by 1 year warranty when accompanied by proof of purchase.

IM Version 1.0 April 2025