 


Kensington

AIR CIRCULATION DESK FAN

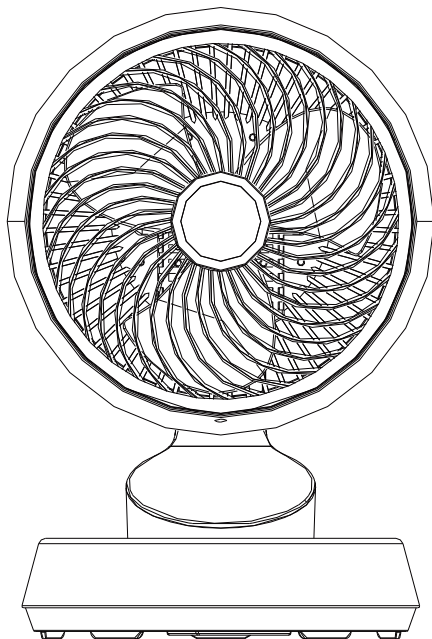

INSTRUCTION MANUAL

Model FS18-T1R

(Read and save these safety instructions before using this appliance)

AFTER SALES SUPPORT

☎ (NZ) 0800 422 274

CONTENTS

Important Safety Instructions2

Product Overview4

How To Use.....5

Remote Battery Replacement.....5

Button Battery Precautions6

CLEANING & MAINTENANCE6

Technical Parameters.....6

Warranty.....7

Important Safety Instructions

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Make sure you understand all instructions and warnings. Keep the manual in a safe place for future reference, along with any warranty information, your purchase receipt and the original packaging carton. If you sell or transfer ownership of this product, pass on these instructions to the new owner.

Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

Electrical safety and cord handling.

- **Voltage:** Make sure your outlet voltage and circuit frequency correspond to the voltage stated on the rating label. If this is not the case, do not use the fan.
- **Water:** To protect against fire and electric shock, do not immerse the cord, plug or the fan itself in water or other liquids, or expose the electrical connections to water. Ensure your hands are dry before handling the plug or switching on the appliance. Do not use the fan outdoors or on wet surfaces.
Protect it from liquid spills.
- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Children being supervised not to play with the appliance.
- **Damage:** Check the power cord regularly for visible damage. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

WARNING! Do not pick up or operate the appliance if the power supply cord, plug or housing is damaged, or after it malfunctions or has been dropped or damaged in any manner.

- **Protect the power cord:**

Do not operate the fan with the cord coiled up; always fully unwind.
Do not twist or kink the cord or let it touch heated surfaces.
Do not put any stress on the cord where it connects to the product.
Never carry the fan by the cord.

Arrange the cord away from any traffic area so no one will trip over it.
Do not run the cord under carpeting or cover it with rugs or runners.

 
 
- **Connection:** To insert the plug, grasp it firmly and guide it into outlet.
- **Disconnection:** Switch off and unplug the fan from the power outlet when it is not in use, during lightning storms and before cleaning, servicing, moving or storing the fan. Grasp the plug and remove it from the outlet, do not pull the cord when disconnecting.
- **RCD:** Unless your home is already fitted with a residual current device (safety switch), we recommend installing an RCD with a rated residual operating current not exceeding 30mA to provide additional safety protection when using electrical appliances. See your electrician for professional advice.

Usage conditions and restrictions:

- **Domestic use only:** This appliance is intended for indoor household use only. It is not suitable for commercial, industrial, trade or outdoor use. Do not use it for anything other than its intended purpose, and only use it as described in this manual. Any other use may cause fire, electric shock or injury.
- **Liability:** We assume no liability for any damages or personal injury caused by misuse of the product and/or failure to follow these instructions.
- **Usage restriction:** This fan is not intended for use by children and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- **Children:** This fan is not a toy. Supervise children to ensure they do not play with it. Close supervision is necessary when any appliance is used by or near children.
- **WARNING! Do not leave unattended during use!** Always switch it off and unplug when not in use, if left unattended and before cleaning and storing.
- **Location:** Place the fan on a dry, flat, stable surface to avoid overturning.
- **WARNING! DO NOT use the fan in the following areas:**
 - Near an open flame, a hot burner, oven or other source of high heat.
 - On an unstable surface where it may tip over during use.
 - Outdoors or in areas of high humidity.

- In a bathroom, laundry area, near a sink, washer, pool or any source of water.
 - Near curtains or in tight corners, to enjoy maximum airflow.
 - In areas where paint, petrol, etc. is stored and there is a risk of explosion or fire from flammable gases, or in areas where substances are being sprayed.
- **CAUTION! Personal safety:** Avoid contact with moving parts. Never insert fingers, pencils or any other objects through the grilles when the fan is running, as this may cause electric shock and/or a fire hazard. Keep hair and loose clothing well away from the fan when it is in use.

Product Overview

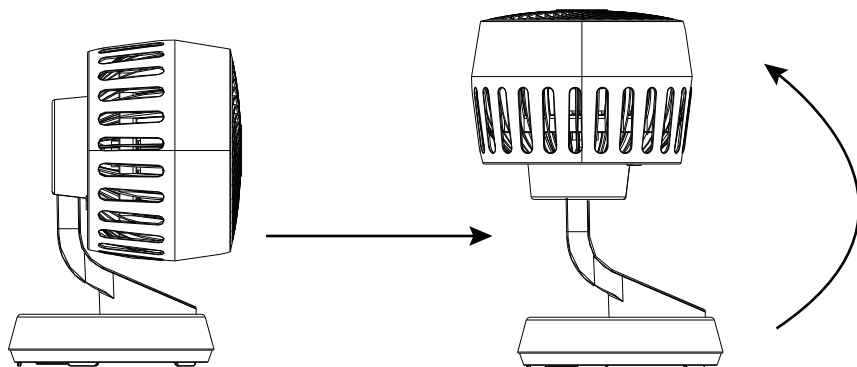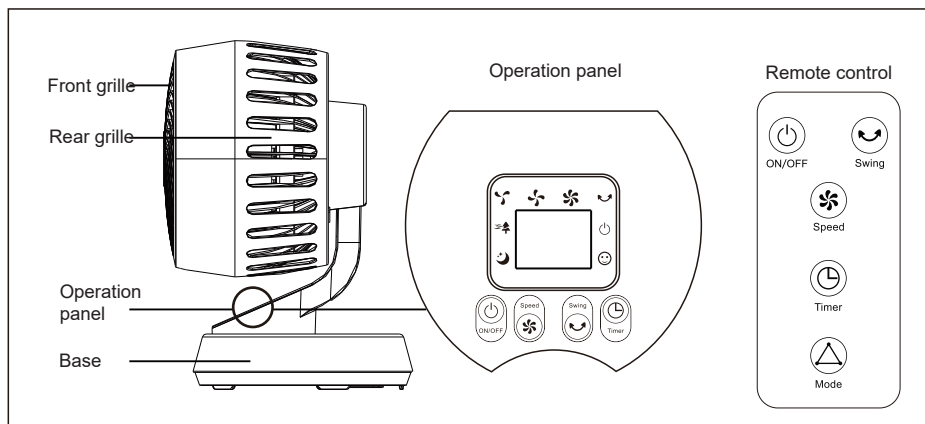


Fan head can be manually adjusted from horizontal to vertical, over an angle of 90 degrees as above.

How To Use

- **ON/OFF button:** When the power ON/OFF button is pressed for the first time, the beeper sounds and enters the power-ON state. The fan will operate by default in the medium speed setting for approximately 3 seconds each time it is turned on, then it will automatically switch to low-speed. The indicator light switches according to the running state, and when it is turned on, press it again. Press the power button during operation to switch to the standby off state.
- **Speed button:** This button allows adjustment from subsequent presses, of the three speed settings of low, medium and high
- **Timer button:** This button allows the fan preset time to be set when the power is on. The adjustable time is 1-8 hours and the setting is indicated by "1- 8H" on the display panel. When operating, the LED indicator will display the preset remaining time as time.
- **Swing button:** This button can be set to activate the oscillation function, allowing the fan head to pivot from side to side to help distribute the air in larger areas.
- **Mode button:** Three modes available (select by remote control only):
 - Normal: Speed operates in accordance with speed selected.
 - Natural: Speed varies randomly to simulate natural conditions.
 - Sleep: Speed varies on low to medium settings to create a gentle airflow.

 Remote Battery Replacement

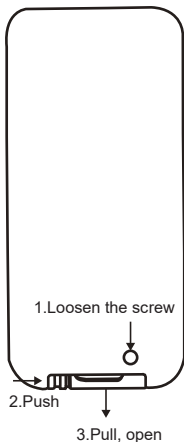

- If the battery in the remote is flat, a new CR2025 (or equivalent) lithium battery needs to be inserted. Follow the below instructions:
- Loosen and remove the retaining screw.
- Push the carriage lever clip and pull the carriage holder out.
- Remove the old battery from the remote control and insert a new one, taking care to position in the same orientation / polarity.
- Push the battery carriage back into the remote control and make sure its securely locked in position.
- Refit the security retaining screw.

Button Battery Precautions

Dispose of used batteries immediately. This product has been designed so that the coin/button cell battery is not accessible to young children, as the battery compartment cover is secured with a screw and mechanical fastener. Always ensure that the compartment is secured before use.



DANGER if swallowed

WARNING! Keep batteries out of reach of children. Swallowing may lead to serious injury or death in as little as 2 hours due to internal burns. If swallowed, go straight to a hospital.

CLEANING & MAINTENANCE

- Switch off from the power supply before cleaning.
- Never immerse the appliance in water.
- Never allow water or cleaning agent to run into the appliance.
- Using a soft, moist cloth, with or without a mild soap solution, carefully clean the exterior surface of the product.
- We also recommend the periodic cleaning of this appliance by lightly running a vacuum cleaner nozzle over the guards to remove any dust or dirt that may have accumulated inside or on the unit.
- CAUTION: Do not use harsh detergents, chemical cleaners or solvents as they may damage the surface finish of the plastic components.

Technical Parameters

Model	Voltage	Frequency	Power
FS18-T1R	220-240V~	50-60Hz	40W

Kensington



Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features, and completely reliable. We are so confident in our products, we back them up with a 3 year warranty when accompanied by proof of purchase.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

IM Version 1.0 – April, 2025