



## L&C FOLD PORTABLE DESK FAN



### INSTRUCTION MANUAL

**MODEL F42**

---

**AFTER SALES SUPPORT**

**☎ NZ 0800 422 274**

# Contents

|                               | Page |
|-------------------------------|------|
| Important Safety Instructions | 2-3  |
| Product Overview              | 4    |
| Getting Started               | 5    |
| Operating Instructions        | 6    |
| Other Useful Information      | 7    |
| Warranty                      | 9    |

## Important Safety Instructions

 
When using electrical appliances, in order to reduce the risk of fire, electric shock and/or injury, these basic safety precautions should always be followed:

- Read all instructions carefully, even if you are quite familiar with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Close supervision is necessary when any appliance is used by or near children.
- Do not charge the fan on the carpet or flammable materials.
- Do not leave the charge cable connected continuously for more than 10 hours.
- Do not operate any appliance with a damaged charging cord / connector plug; if the appliance malfunctions; or if it is dropped or damaged in any manner.
- Do not use outdoors.
- Do not use the product for anything other than its intended use. This product is intended for household use only.
- Do not attempt to repair, disassemble or modify the appliance. There are no user- serviceable parts.
- Do not insert or allow foreign objects to enter the grille openings as this may cause damage to the appliance and/or user.
- To prevent fire or shock hazard, DO NOT expose this appliance to rain or moisture.
- Do not use fan near curtains, plants, window treatment, or where other objects can become caught in the blades.
- Do not operate with wet hands while in recharging the fan.
- Do not let the charge cable hang over the edge of a table or counter or let it come into contact with any hot surfaces.

## Important Safety Instructions (Continued)

- Do not operate fan in the presence of explosive and/or flammable fumes. Do not place the fan near an open flame, cooking or other heating appliance.
- Do not place the fan close to an open window. Rain splashing on the fan could cause an electrical fault.
- Do not leave the appliance running or operable in a place where young children or animals could have access to it without supervision.
- To protect against fire, electrical shock and injury to persons, do not immerse unit in water or spray with liquids.
- Ventilation should not be impeded by covering the ventilation openings. Slots and opening are provided for ventilation to ensure reliable operation of the product and to protect it from overheating.
- Do not immerse any part of the appliance in water or any other liquid.
- Switch off the appliance and unplug the USB before cleaning or inspecting any part of the appliance.
- Do not operate with a damaged charge cable or after the fan malfunctions, has been dropped or damaged in any manner. DO NOT operate the fan with a broken blade, safety guard or with any obvious damage to the enclosure.
- In the unlikely event the appliance develops a fault, stop using it immediately and seek advice from the manufacturer.
- Do not put heavy objects on the fan body
- Keep fingers, hair and clothing away from this appliance.
- Do not put the unit close to heat-generating devices or near flammable and dangerous materials.
- For optimal airflow circulation, leave a distance of at least 30cm around the back and sides.
- This fan includes an internal Lithium battery, do not position the fan in a high temperature (more than 40°C) environment or near fire. Do not impact, squeeze the batteries.
- WARNING: When using rechargeable lithium powered appliances, basic safety precautions, should always be followed to reduce the risk of fire, electric shock, personal injury and material damage.

## Product Overview

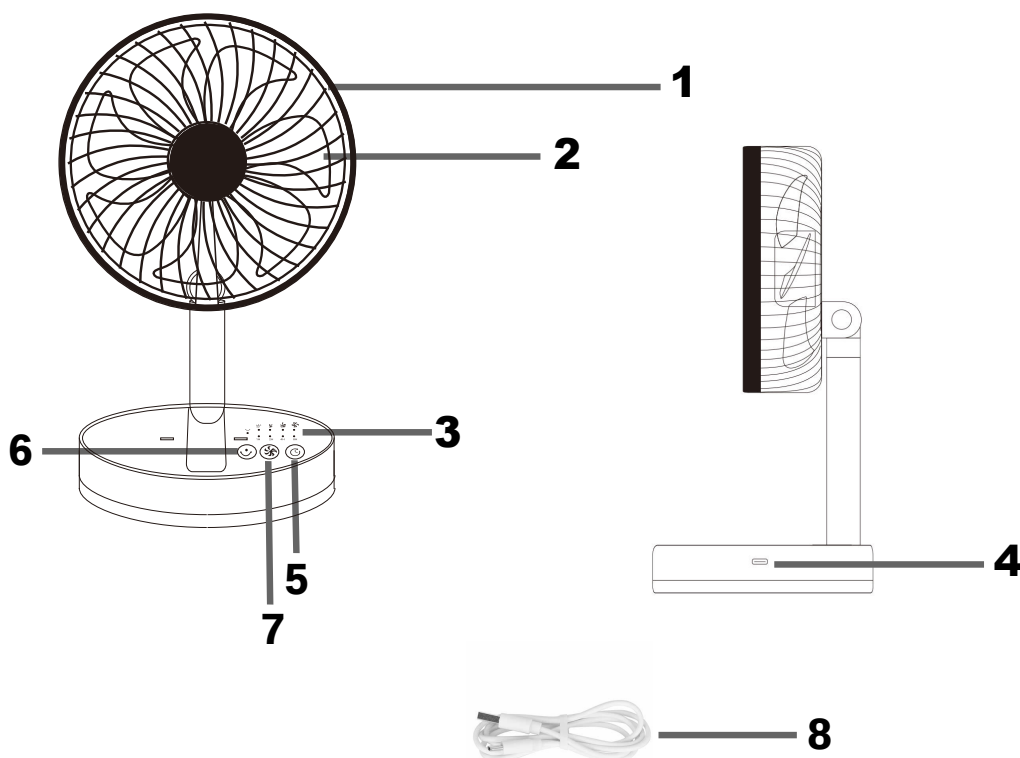

1. Fan grille
2. Fan blades
3. Fan speed & Timer Indicator Light
4. Type-C charging port (side)
5. Timer button
6. Oscillation button
7. Power / Speed button
8. Type-C / USB charging cord

**NOTE:** Images and illustrations are for reference purposes only, are not to scale and may vary from the product purchased.

## Getting Started

- **Unpacking:** This product has been packaged to protect it against transportation damage. Unpack the appliance and recycle all packaging materials where possible.
- **Safe packaging disposal:** Plastic wrapping can be a suffocation hazard for babies and young children, so ensure all packaging materials are out of their reach and disposed of safely.
- **Inspection:** Unwind the charging cord to its full length and inspect it for damage. Do not use the product or its cord if damage is visible.

### CHARGING

You should charge the fan battery before using. Connect the USB cable (Type-C connector) to the charging port of the fan and then connect the USB input connector to a charging adapter, power board or similar USB outlet device (not provided). Plug the USB charging adapter/power board or similar device into a power outlet.

Upon connection to the charging source, the green indicator light will flash alternately. When fully charged, the indicator light will illuminate. Recommended charging time from flat is 7 hours. When charging is complete, make sure to disconnect the USB connector in time.

#### Indicator light status and operating times:

Green light Flash: Fan is charging, it will flash from first speed to fourth speed  
Green light on: Fan finished charging

RUN TIME (without OSC mode): Up to 5 Hours run time at Maximum Speed. Up to 26 hours on Low Speed.

 
If we run the fan with OSC mode, run time will be reduced .

# Operating Instructions

## How to use

In the folded state, hold the base, careful to pull up the fan. This fan is designed to two position(highest and lowest) and not extend only . Push the handle vertically until the handle is on two positions.

Adjust the fan head angle and fan height as you need.

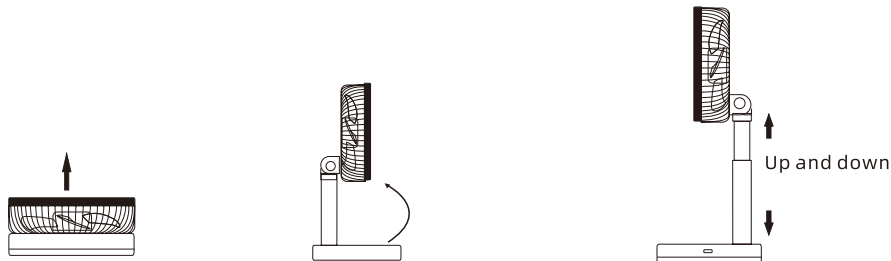

## Speed Button:

Hold the fan and press the **POWER/SPEED** button to increase the speed up to 4 levels, and the green indicator light under the speed icon will illuminate with your desire speed. When Fan is off, the Green indicator light will turn off.

On the fifth subsequent press, or long press the button, the fan will switch off.

**NOTE:** Low Speed fan will allow the fan to run for longer without charge.

 
## Timer button

Press Timer button to set the timer in increments from 1 hour to maximum 8 hours. After the timer runs out, the fan will automatically switch off. There are four LED indicator lights for the timer: 1h, 2h, 4h, 8h.

# Operating Instructions

## OSC Button:




Press OSC Button on active oscillation function for left and right. Press the button again to stop oscillation function

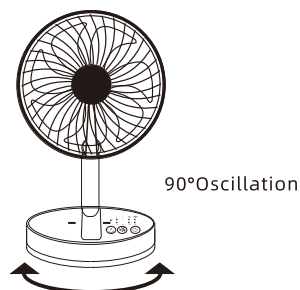

## Tilt / Height Adjustable




You can pull it up as a floor fan, and fold the length as a table fan. You can place it anywhere and get the air where you need it. The height adjustment of this stand fan is only 333mm and 405mm.

   Tilt angle can be adjust to 180° up, can't be adjust down.

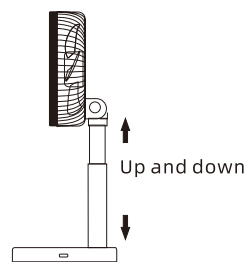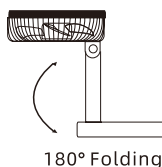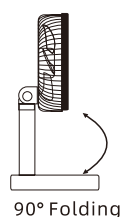

## Foldaway Design

   1. Rotate the fan head until it is parallel to the base
2. Carefully pull down the handle in the meantime, then fold the fan head
3. Carry the fan in your suitcase or store it in a cabinet for next use.

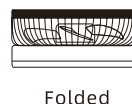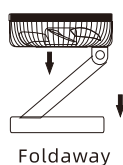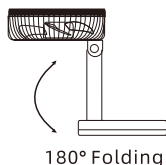

## Other Useful Information

### CARE AND CLEANING

Always disconnect the USB cable from the charging adapter, power board or similar charging device before cleaning the fan.

Do not immerse any part of the fan, USB cable or adapter in liquids. Cleaning should be limited to application of a slightly damp cloth, applied to external surfaces.

If the fan is not intended to be used for an extended period, we recommend storing out of direct sunlight and away from damp or moisture. Ideally, stored within this original packaging box.

### PROTECTING THE ENVIRONMENT

The products and internal battery must not be disposed of with normal household waste. Please recycle electrical products and batteries according to local council regulations.

Do not put the battery in fire, do not drill or compact the battery.

### Technical specifications

|                  |          |
|------------------|----------|
| Input            | 5V dc 2A |
| Fan speeds       | 4 speeds |
| Battery capacity | 5400mAh  |

#### Responsible Disposal

At the end of its working life, do not throw this product out with your household rubbish.

Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling.

Contact your local authorities for advice on recycling facilities in your area. Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.



# living & co.

## Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are confident in our products, we back them up with a one year warranty. Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This product is covered by 1 year warranty when accompanied by proof of purchase.

IM Version 1.0 March 2025