


Austin Entertainment Unit


2hr

APPROXIMATE ASSEMBLY TIME


2 PERSON ASSEMBLY

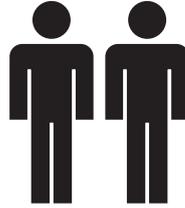

FLOOR AREA
2M x 2M

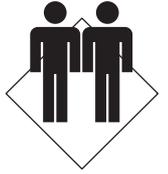

REQUIRED ASSEMBLY SPACE

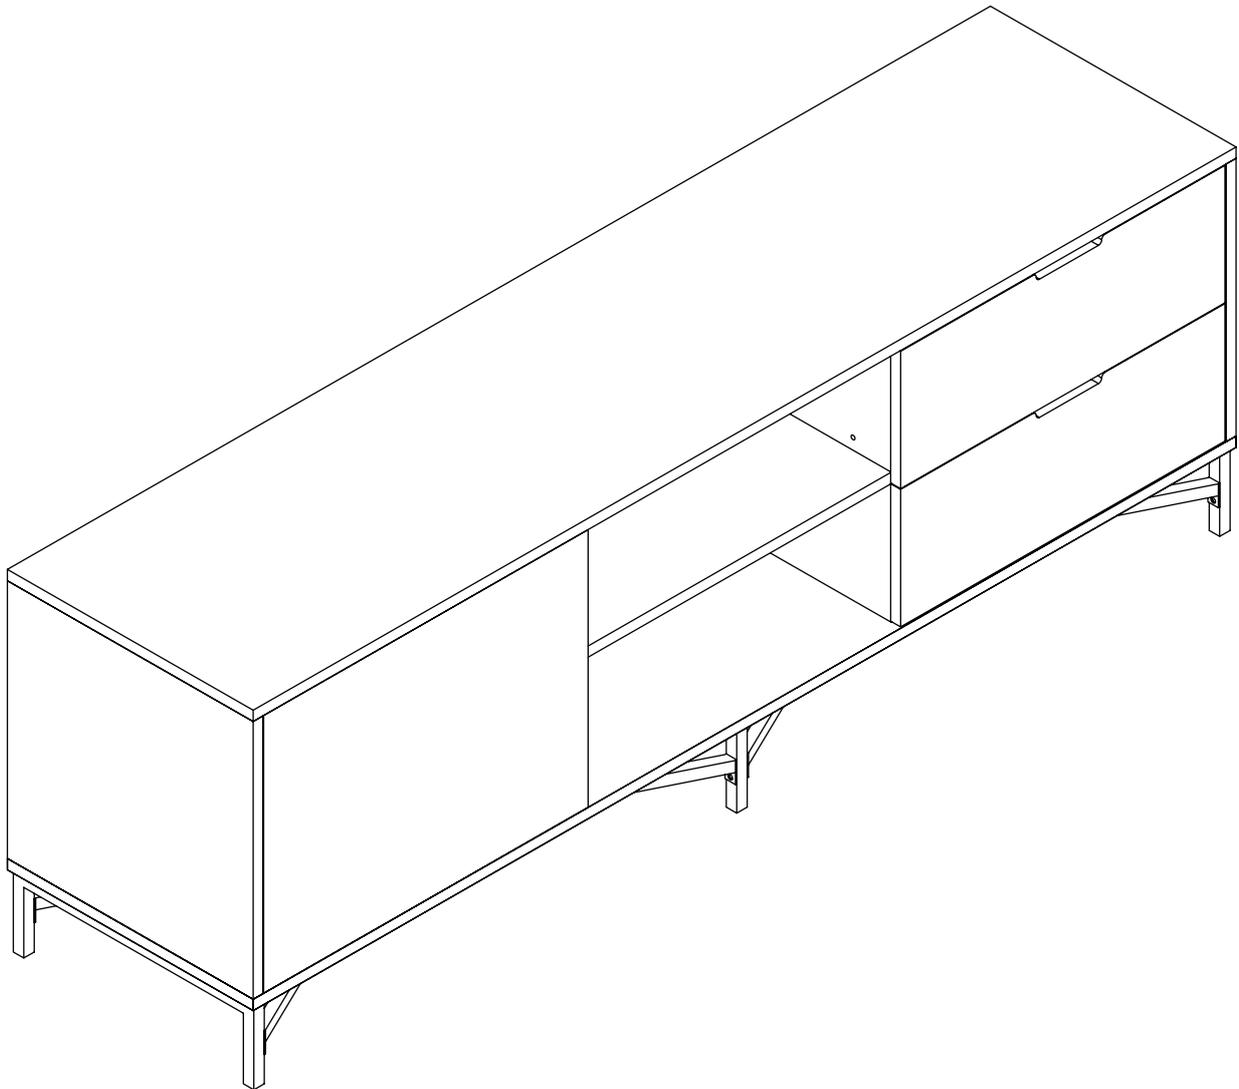

Austin Entertainment Unit

Tips before you start:

1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.
10. Please use caution and care when lifting the product to avoid personal injury and/or product damage.


Care and Maintenance of your Furniture

- Please periodically check all fittings and re-tighten as necessary.
- To clean your item, please use a damp cloth and wipe clean.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- Please do not place hot items (eg. hot drinks) directly on to the surface.
- Please do not drag and pull your furniture.

Austin Entertainment Unit


Tips before you start:

QUICKFIT

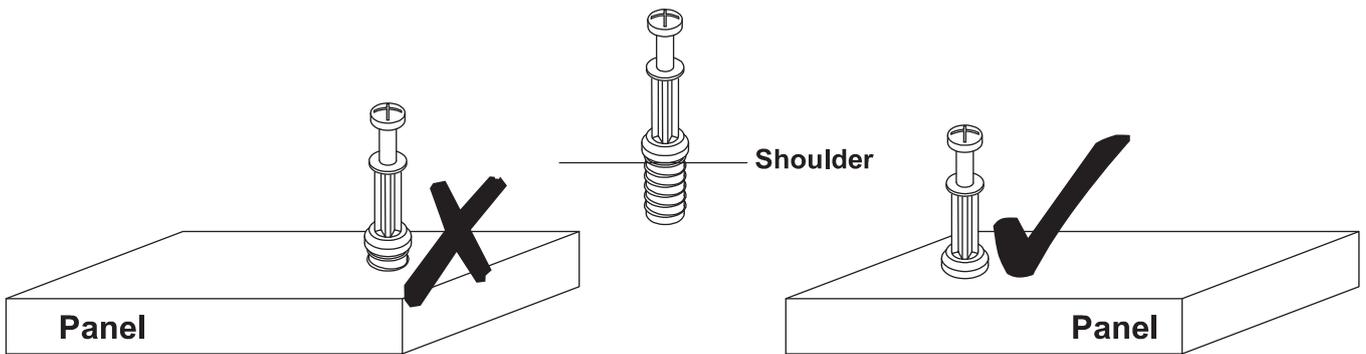

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

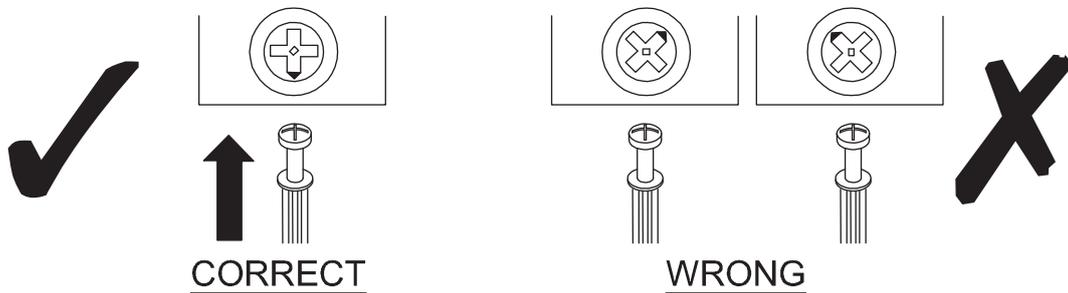

When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

Quickfit head should be in the centre of the cam lock when the two panels are joined.


Cam lock should be inserted before quickfit.

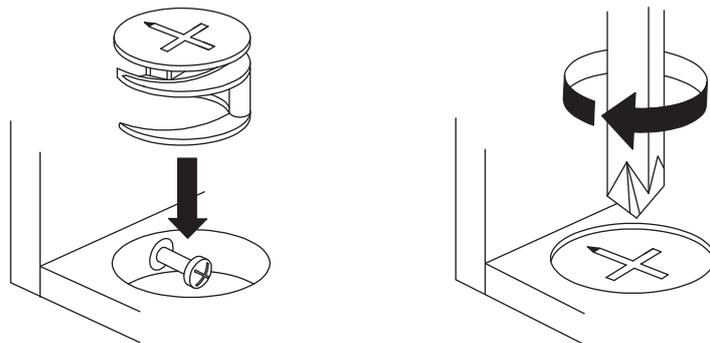

Turn cam lock clockwise to tighten.

Austin Entertainment Unit

HARDWARE LIST

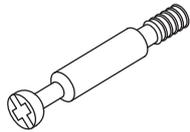

16 x A
Quickfit
Screw



16 x B
Cam Lock



16 x C
Wooden
Dowel



8 x D
Bolt
6 x 8mm




1 x E
Allen Key



8 x F
Screw
5 x 45mm




2 x G
Outer Drawer
Runner

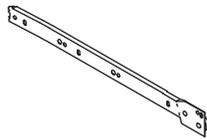

2 x H
Outer Drawer
Runner



24 x I
Screw
3.5 x 12mm

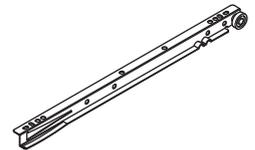

2 x J
Inner Drawer
Runner



2 x K
Inner Drawer
Runner



8 x L
Screw
4 x 30mm



9 x M
Screw
4 x 25mm



2 x N
Hinge



12 x O
Screw
4 x 14mm



4 x P
Shelf Support



6 x Q
Wedge



















6 x R
Screw
3 x 14mm



4 x S
Screw
3 x 12mm

Austin Entertainment Unit

PARTS LIST

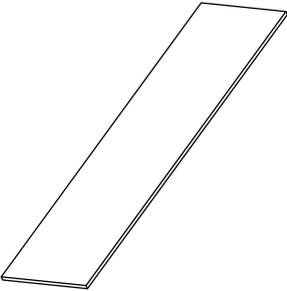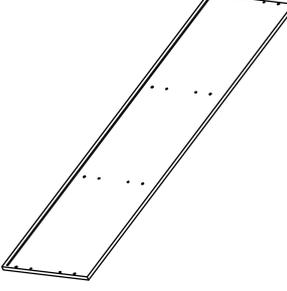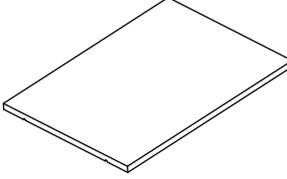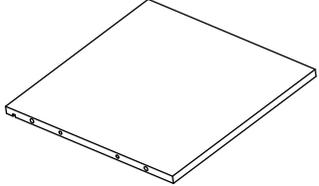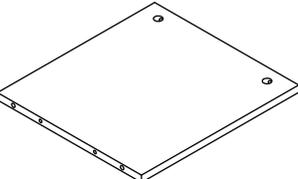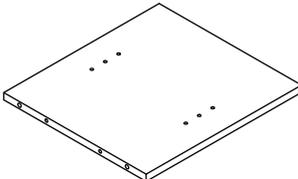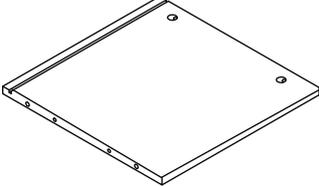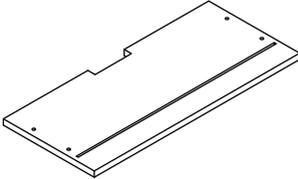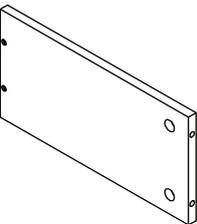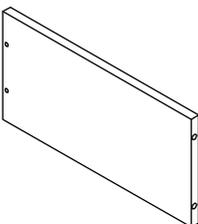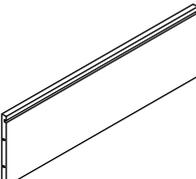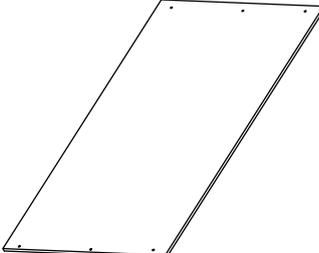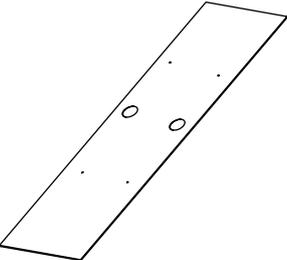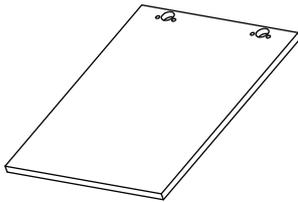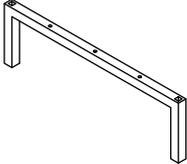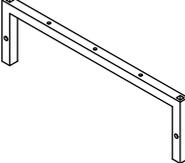
				
1 1 PC	2 1 PC	3 1 PC	4 1 PC	
				
5 1 PC	6 1 PC	7 1 PC	8 2 PCS	
				
9 2 PCS	10 2 PCS	11 2 PCS	12 2 PCS	
				
13 1 PC	14 1 PC	15 2 PCS	16 2 PCS	17 1 PC

Austin Entertainment Unit

STEP 1


1.1

Fix parts 9 and 10 to part 11 using screws (L).

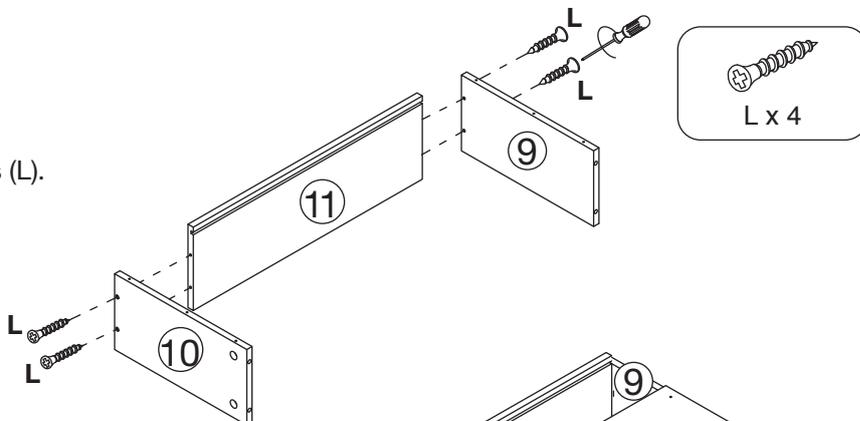


1.2

Place panel 12 on top of parts 10 and 9.

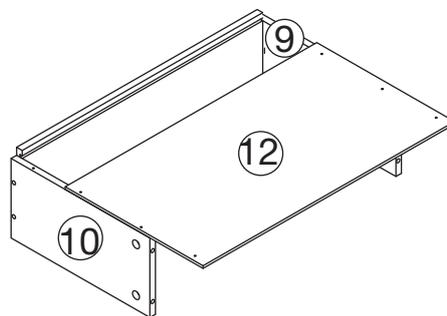

1.3


Insert the cam locks (B) to parts 9 and 10.
Insert quick fit screws (A) into front panel 8.

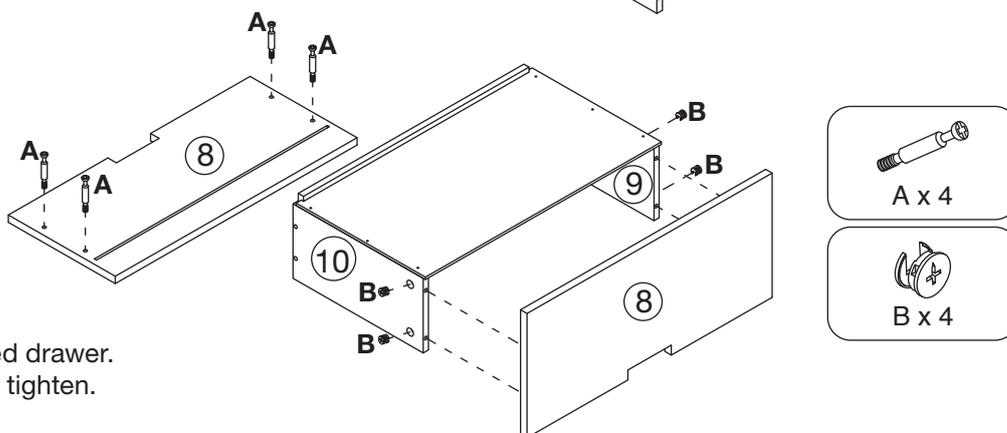

Fit front panel 8 to assembled drawer.
Turn cam locks clockwise to tighten.

1.4

Fix inner drawer runners (J) and (K) to underside of drawer using screws (I), as shown.

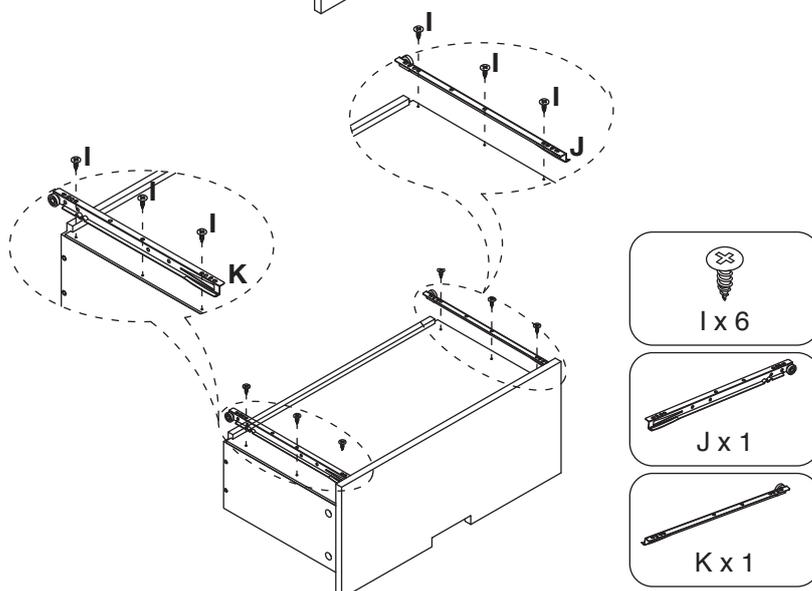


x2 Repeat for all 2 drawers

Austin Entertainment Unit


STEP 2

Fix outer drawer runners (H) to part 6 and (G) to part 7 using screws (I), as shown.
Fix quickfit screws (A) to part 1.

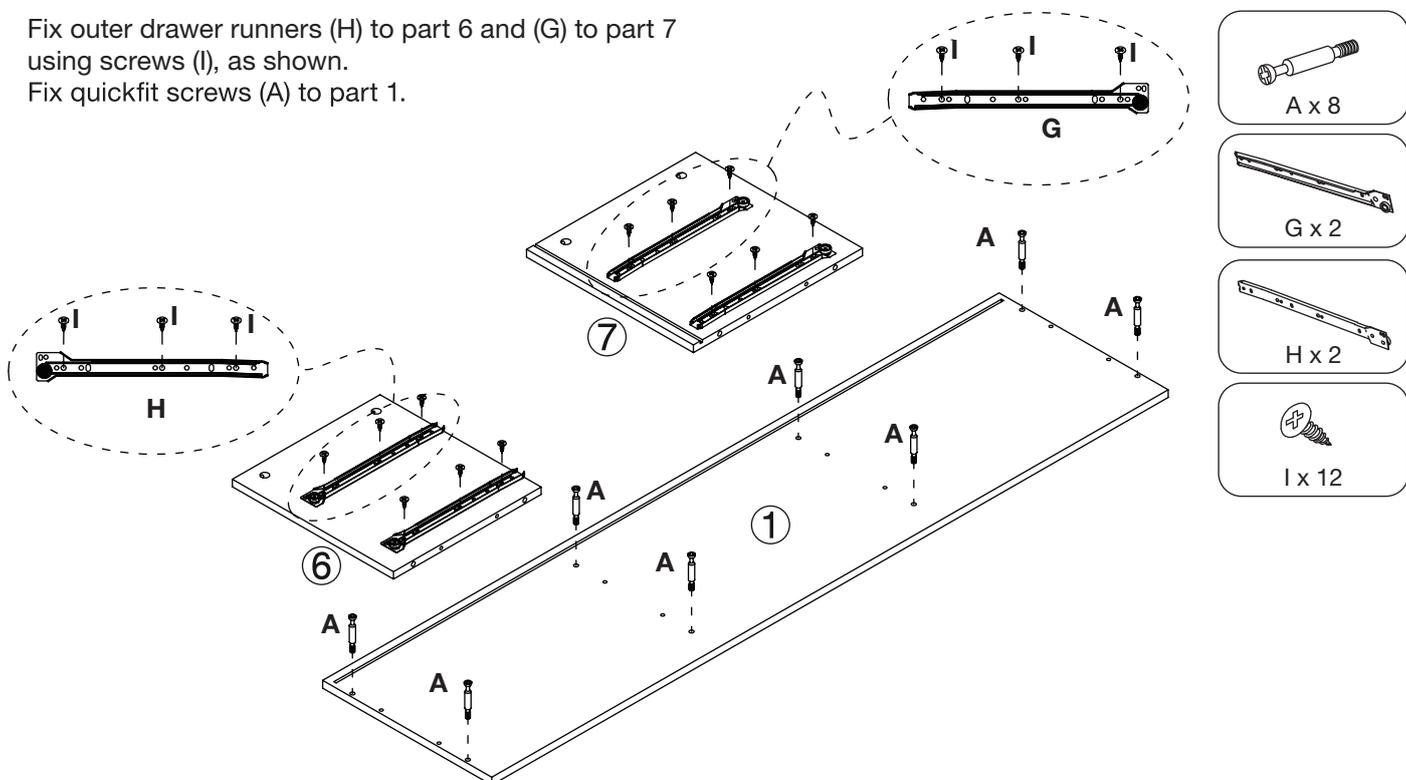

STEP 3


Fit wooden dowels (C) to parts 4, 5, 6 and 7.
Fit parts 4, 5, 6 and 7 to part 1.
Insert cam locks (B) to parts 4, 5, 6 and 7.
Turn cam locks clockwise to tighten.

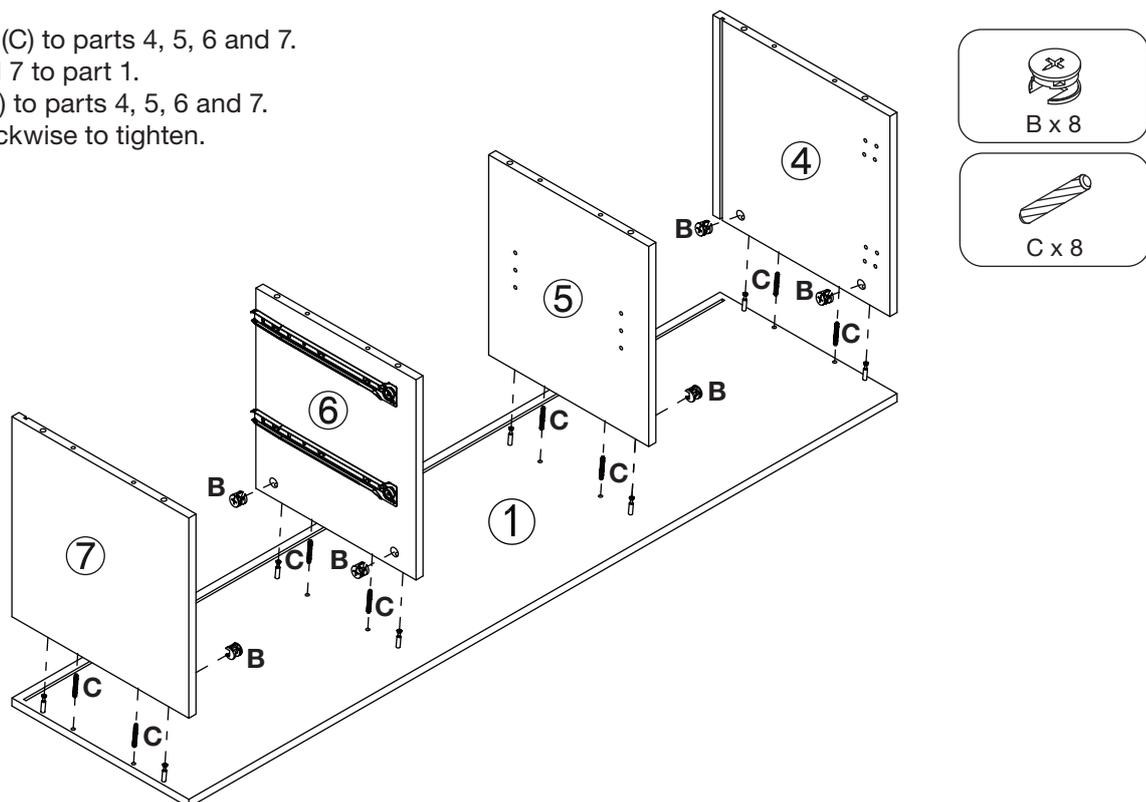

Austin Entertainment Unit


STEP 4

Slide back panel 13 into slots between parts 4 and 7 at the rear of the unit.

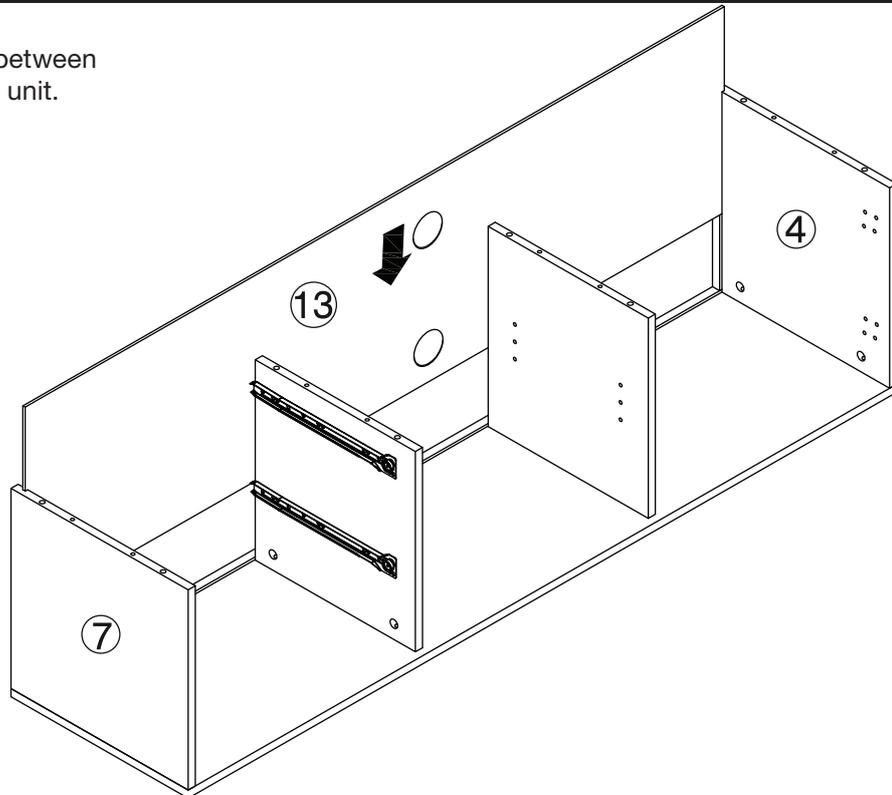

STEP 5

Fit wooden dowels (C) to side panels of 4, 5, 6 and 7.
Fit part 2 to assembled unit.
Secure with screws (F).

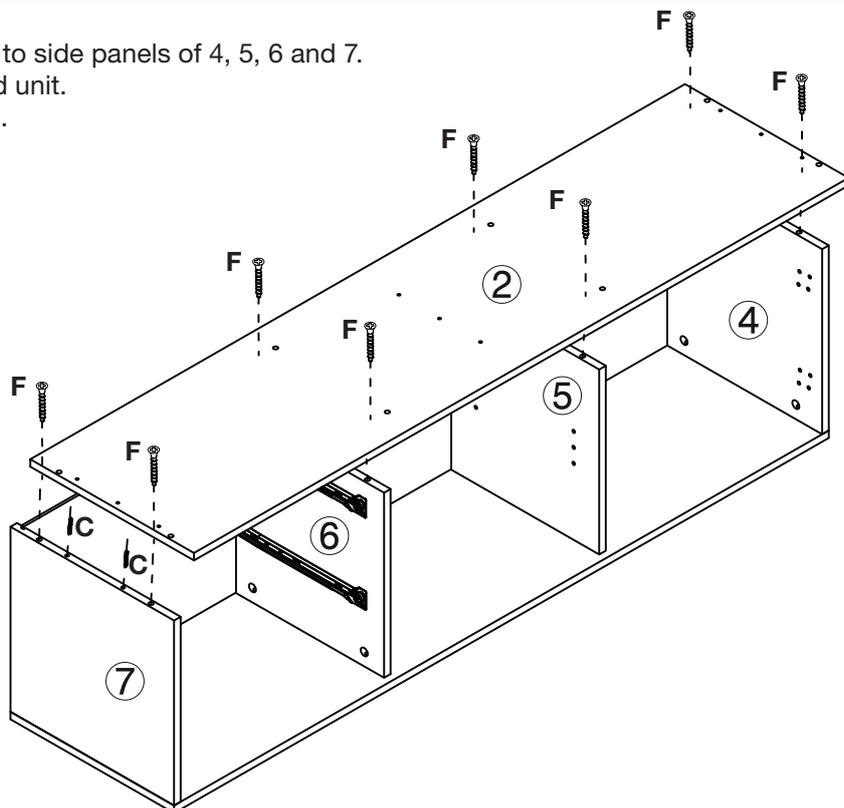

C x 8




F x 8

Austin Entertainment Unit

STEP 6

Fix parts 15, 16 and 17 together, as shown, using bolts (D) and allen key (E).

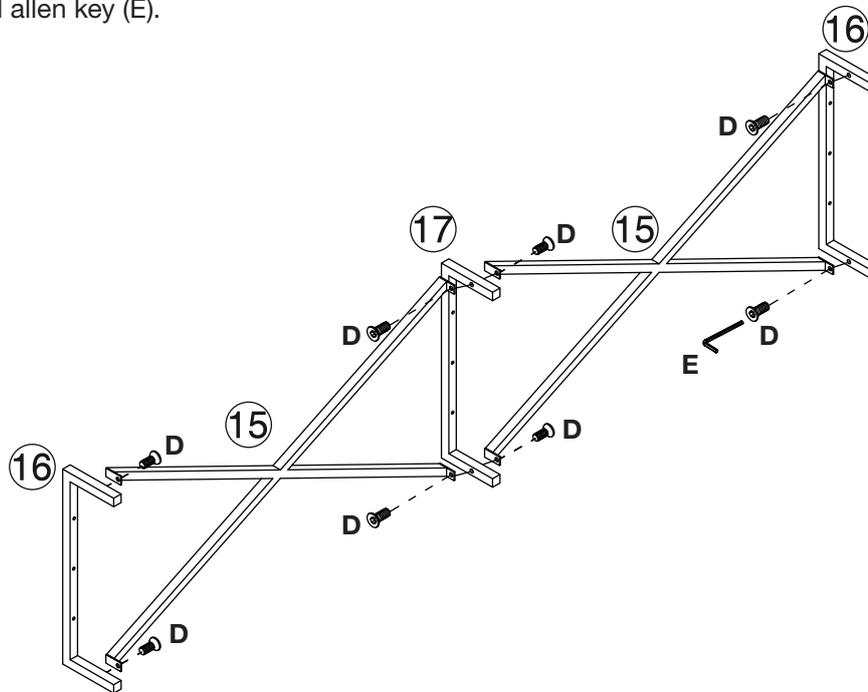


D x 8

E x 1

STEP 7

Fix assembled frame (step 5) to underside of entertainment unit using screws (M), as shown.

Carefully turn assembled unit upright.

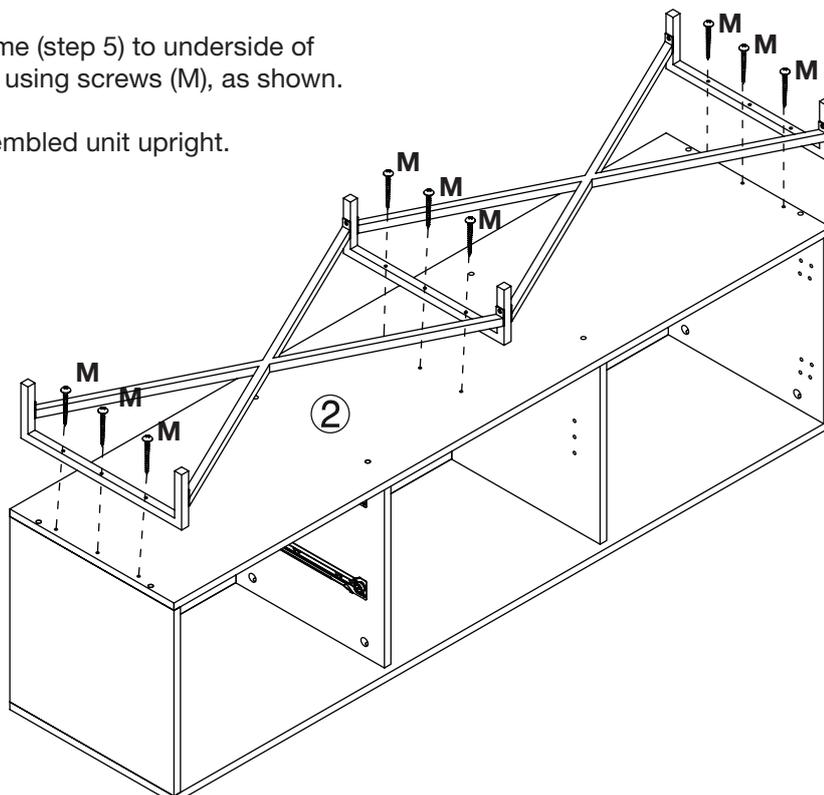


M x 9

Austin Entertainment Unit


STEP 8

Secure back panel by fixing wedges (Q) to back of unit using screws (R).

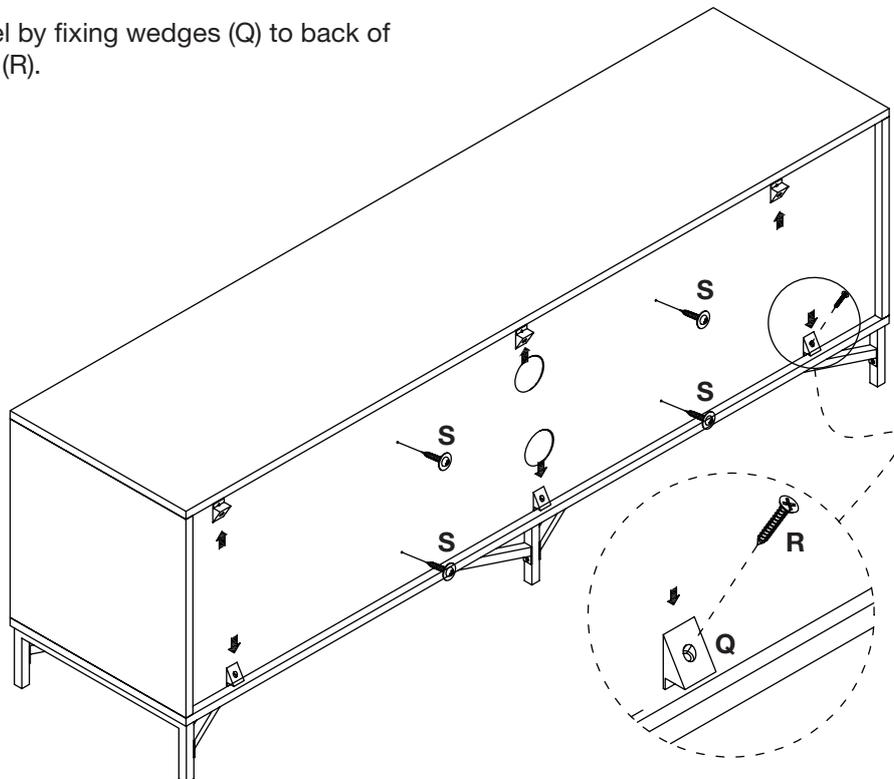

STEP 9

Fix hinges (N) to parts 4 and 14 using screws (O) as shown.
Fit shelf supports (P) to parts 5 and 6 at desired shelf height.

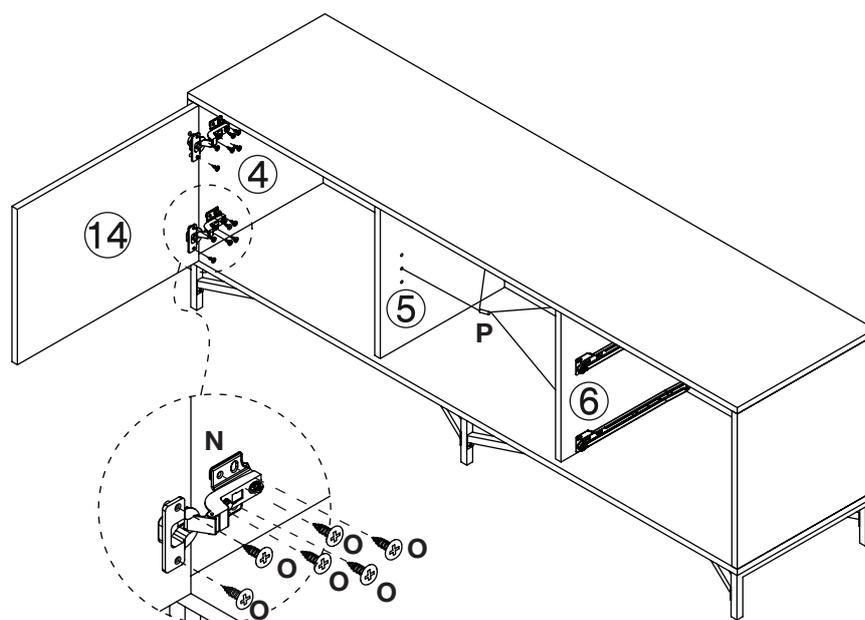


Austin Entertainment Unit

STEP 10


Insert assembled drawers (step 1) into assembled unit, as shown.

Lower shelf 3 onto shelf supports, as shown.

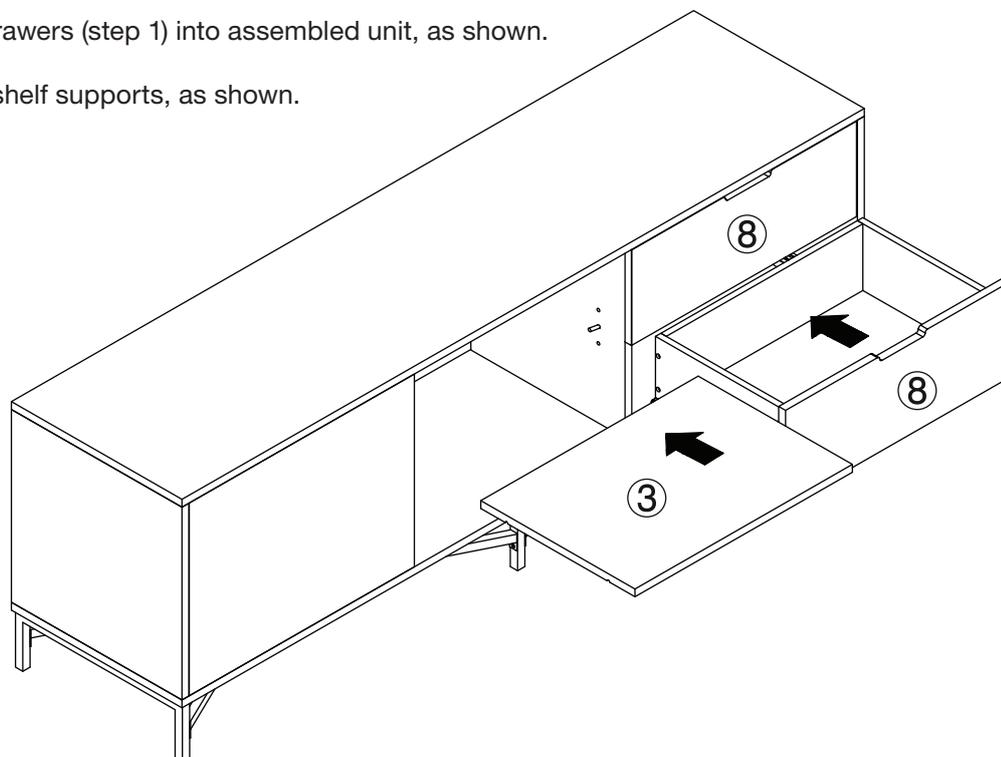

STEP 11

Your entertainment unit is ready for use.

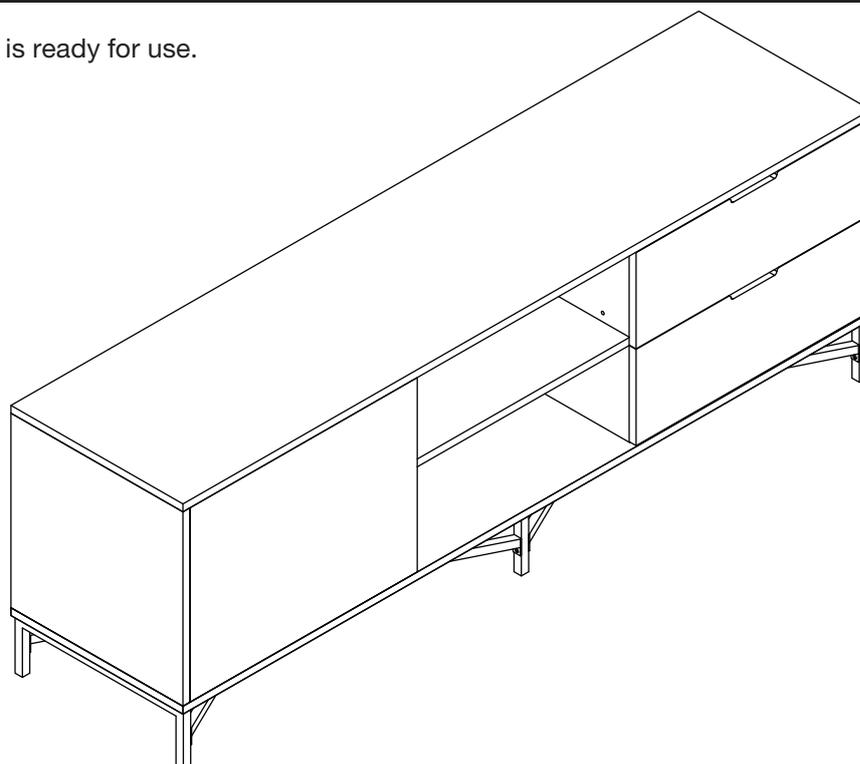

Maximum recommended weight is 35kg. Please distribute weight evenly.