



MODEL NAME:
INDIANA
ENTERTAINMENT UNIT

2.0hr

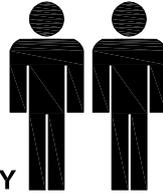

FLOOR AREA
1.2M X 1.6M


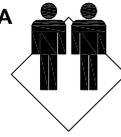


APPROXIMATE ASSEMBLY TIME


2 PERSONS OF ASSEMBLY

REQUIRED ASSEMBLY SPACE

REQUIRED ASSEMBLY TOOLS

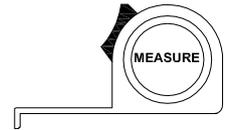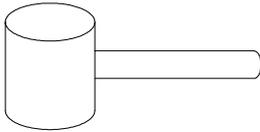

ASSEMBLED DIMENSIONS

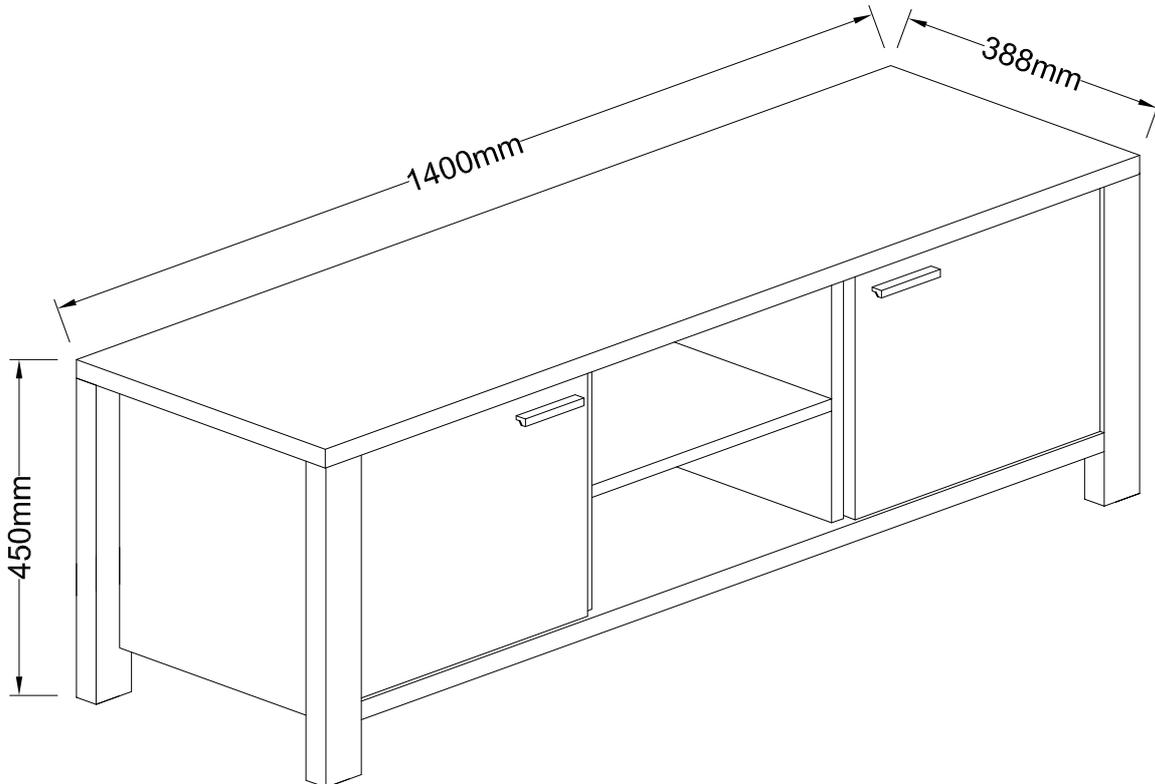

NOTE : THE MAXIMUM WEIGHT THIS PRODUCT CAN HOLD UP TO 25 KGS.

| | |
|--|---|
| | MODEL NAME: INDIANA ENTERTAINMENT UNIT |
|--|---|

Top Tips before you start :

1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product.
7. Always place the product on a flat, steady and stable surface.
8. Do not sit or stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is non industrial product.

Care and Maintenance of your Furniture

- Please periodically check all fittings and re-tighten as necessary.
- To clean your item, please use a damp cloth and wipe clean.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- Please do not place hot items (e.g. Hot drinks) directly on to the surface.
- Please do not drag and pull your furniture.

WARNING

We recommend you to fix the furniture to the wall with the enclosed safety straps to prevent it from tipping over if a child climbs or hangs on it. Different wall materials require different types of fixing devices, if you are uncertain about what type of screw or fitting to use, please contact your local hardware store.

It is undesirable to place objects of interest to children in view on this type of furniture item, as children may be tempted to climb to retrieve the objects the result that the furniture item may tip and cause injury of death.


Furniture items can tip under certain circumstances, especially when placed on carpet, uneven or sloping flooring or when subject to extreme use. Therefore care must be taken especially where small children can access any chests of drawers or bookcases or similar furniture items.

MODEL NAME:

**INDIANA
ENTERTAINMENT UNIT**

| NO. | PART LIST | QTY |
|------------|--------------------|------------|
| (A) | RIGHT SIDE PANEL | 1 |
| (B) | LEFT SIDE PANEL | 1 |
| (C) | RIGHT CENTRE PANEL | 1 |
| (D) | LEFT CENTRE PANEL | 1 |
| (E) | TOP PANEL | 1 |
| (F) | BOTTOM PANEL | 1 |
| (G) | FIXED PANEL | 1 |
| (H) | RIGHT DOOR PANEL | 1 |
| (I) | LEFT DOOR PANEL | 1 |
| (J) | BACK PANEL | 1 |
| (K) | RIGHT FRONT LEG | 1 |
| (L) | LEFT FRONT LEG | 1 |
| (M) | RIGHT BACK LEG | 1 |
| (N) | LEFT BACK LEG | 1 |


PARTS LIST

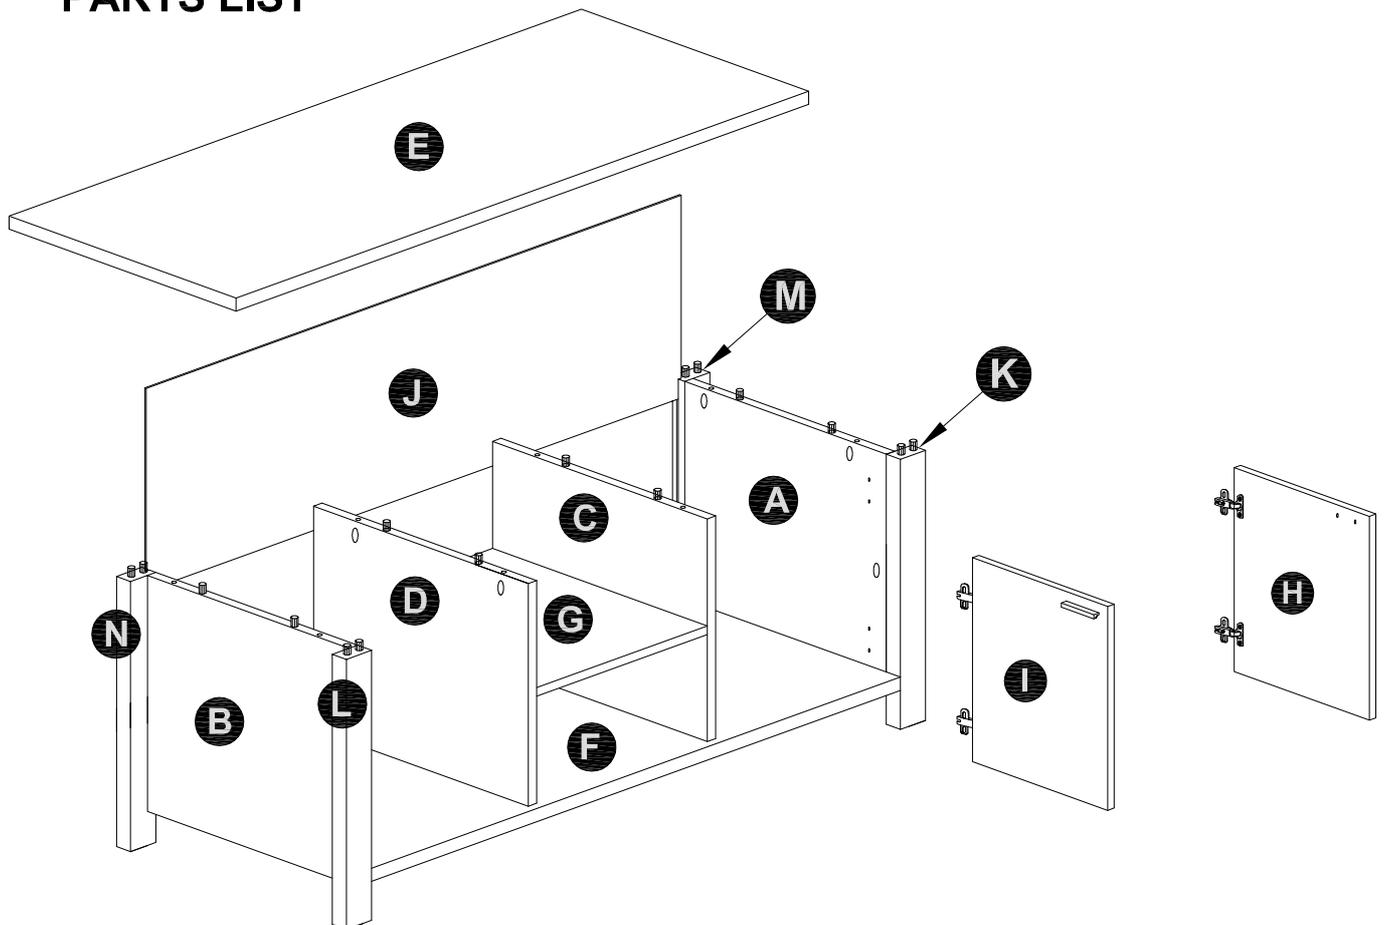

MODEL NAME:

INDIANA ENTERTAINMENT UNIT

HARDWARE LIST

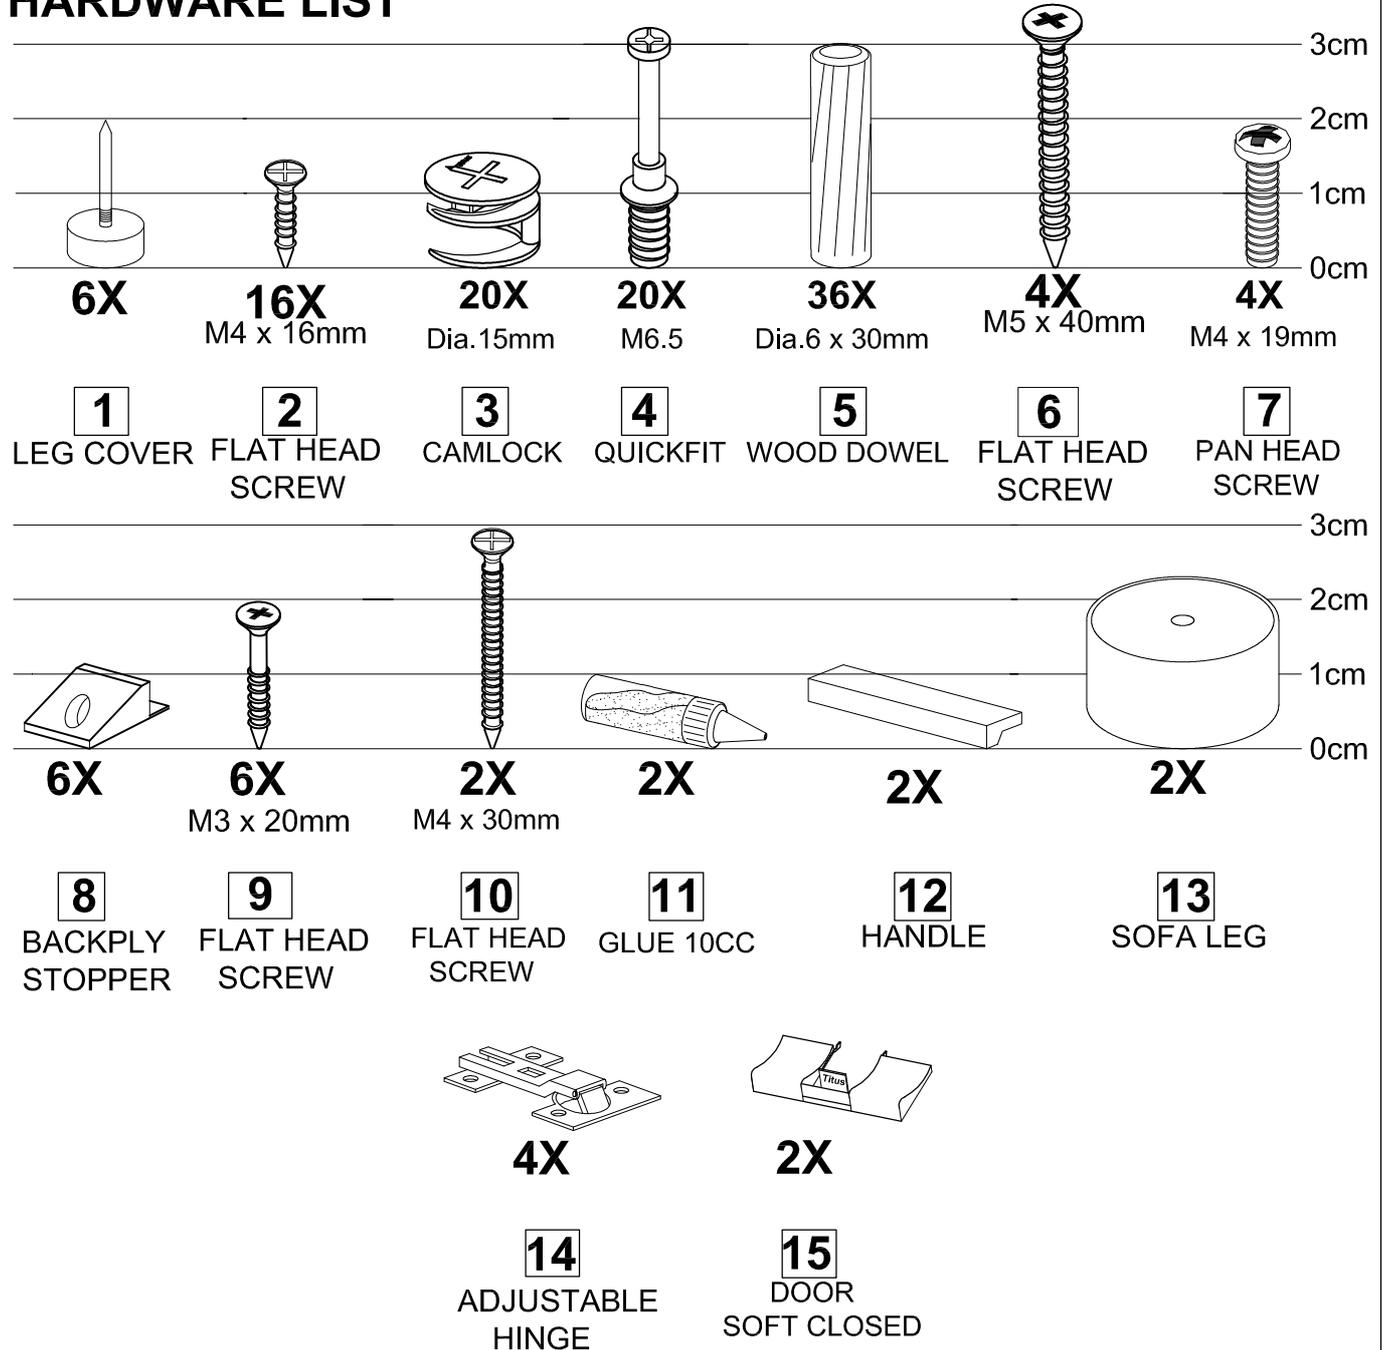


MODEL NAME:



**INDIANA
ENTERTAINMENT UNIT**

SPECIAL TIPS FOR FITTING CAM-LOCKS AND QUICKFIT

CAM-LOCK

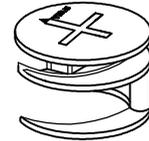


WHEN FITTING CAMLOCK
ENSURE STARTING POSITION IS CORRECT
BEFORE YOU INSERT CONNECTING QUICKFIT
TURN CLOCKWISE UNTIL SECURE

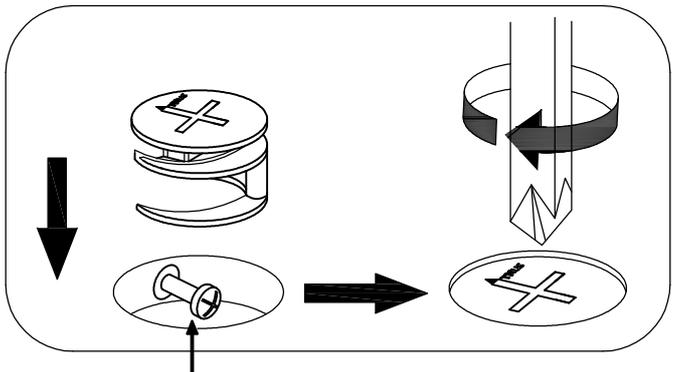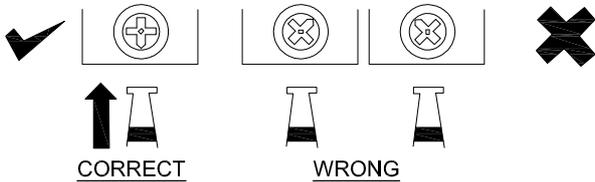

Quickfit head needs to be in centre

QUICKFIT


Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

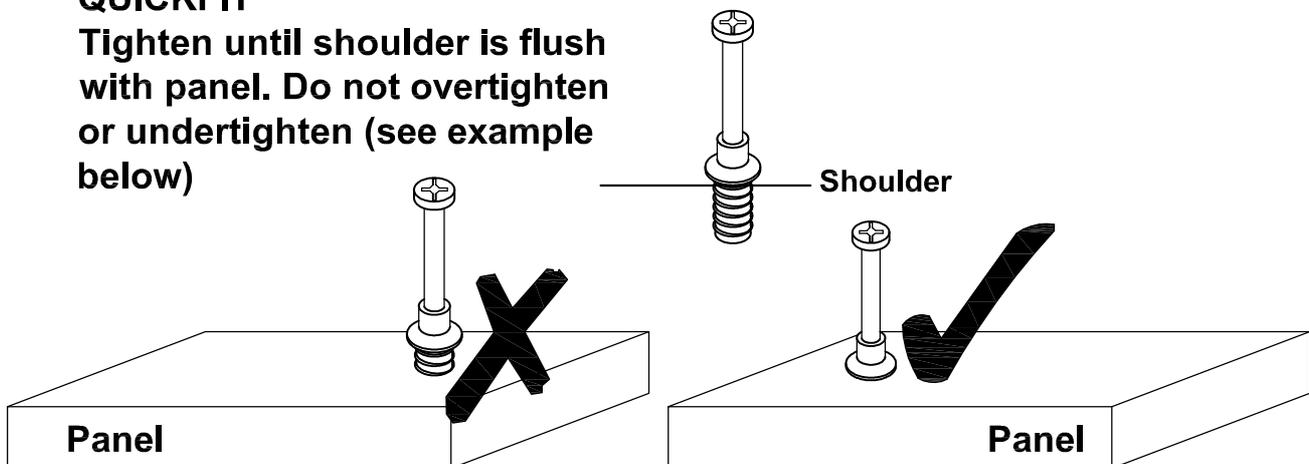


MODEL NAME:

INDIANA ENTERTAINMENT UNIT

STEP 1

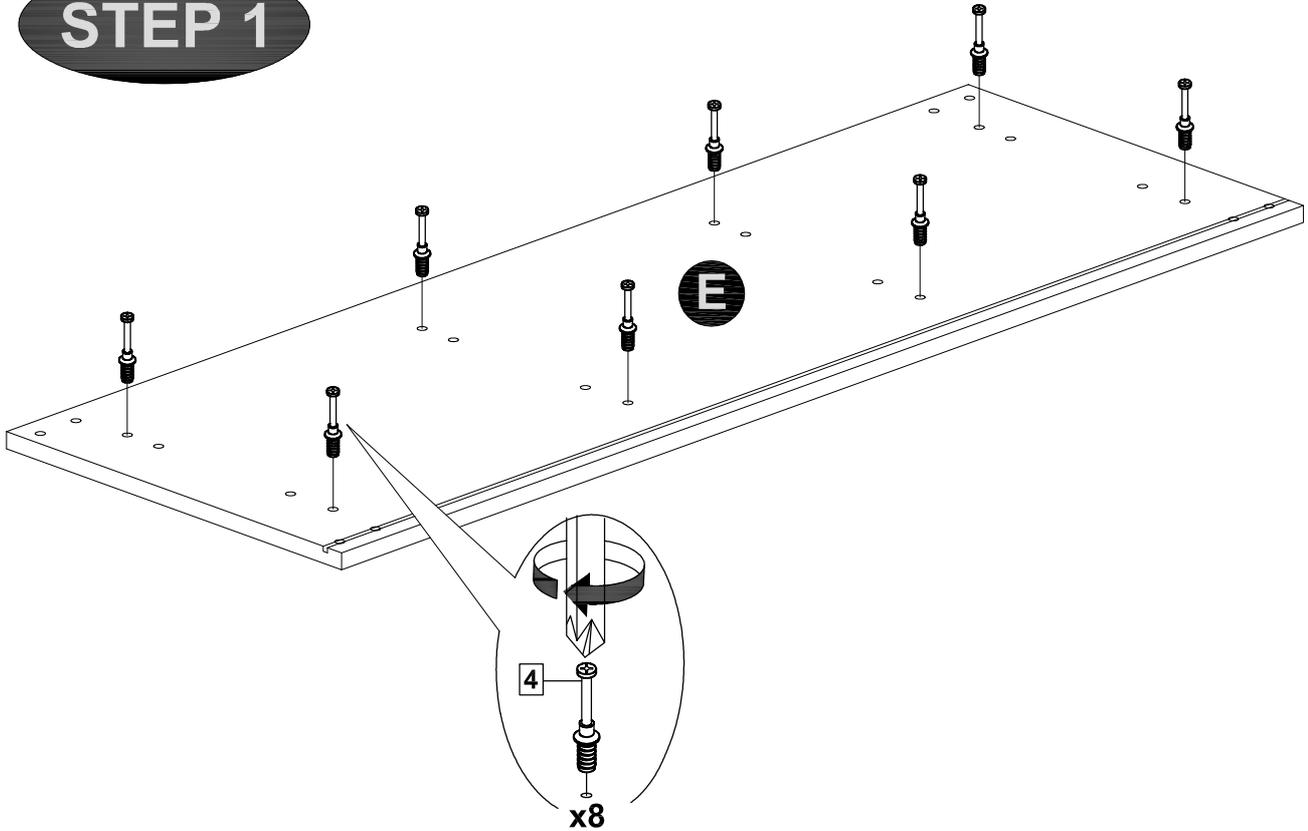


STEP 2

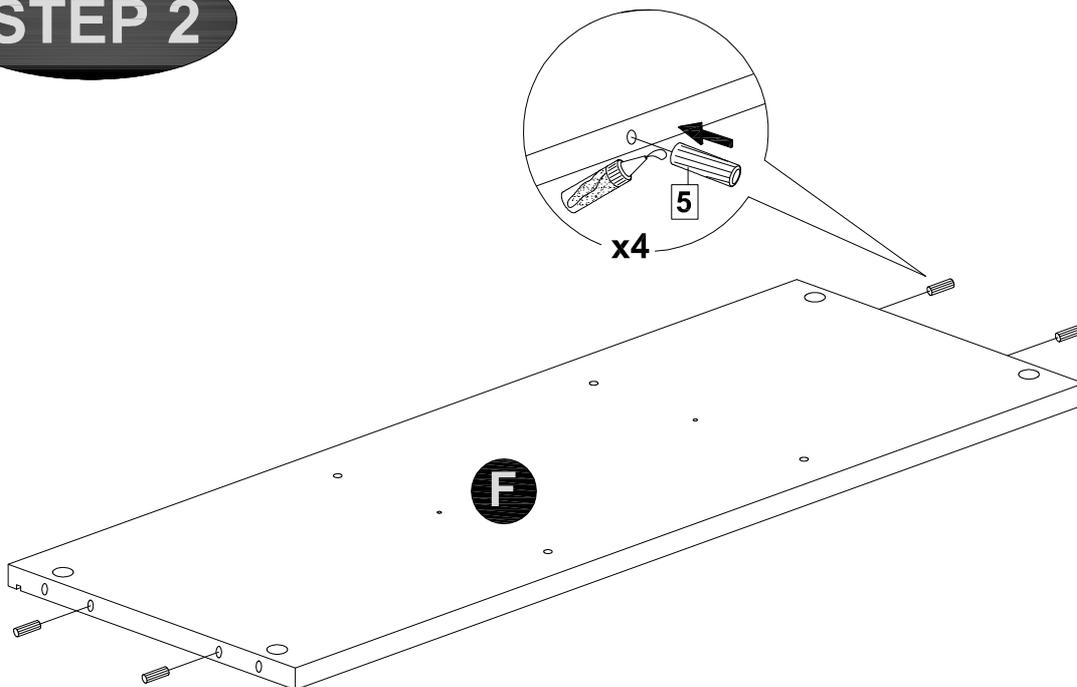


MODEL NAME:

INDIANA ENTERTAINMENT UNIT

STEP 3

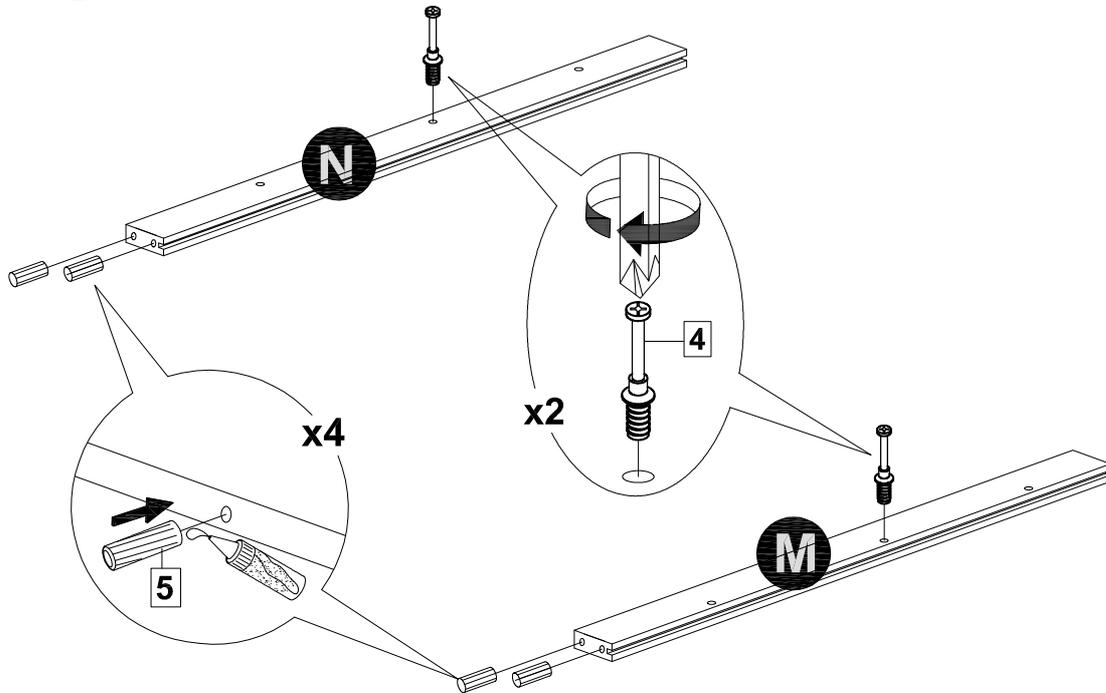


STEP 4

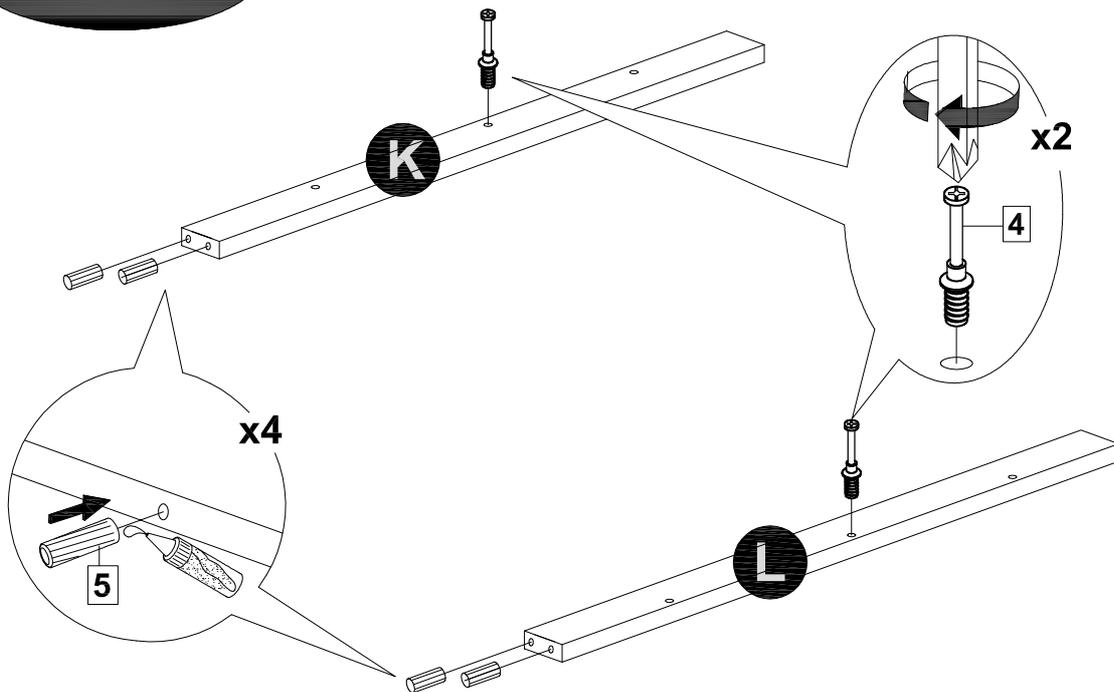


MODEL NAME:

INDIANA ENTERTAINMENT UNIT

STEP 5

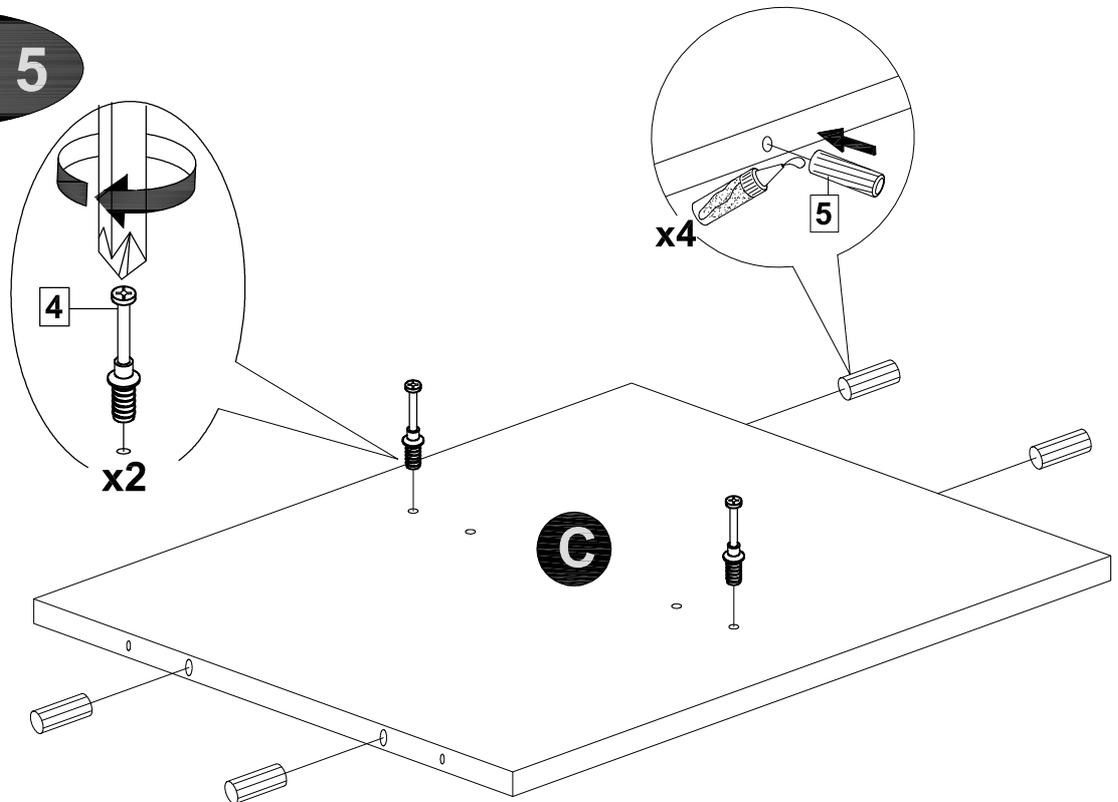


STEP 6

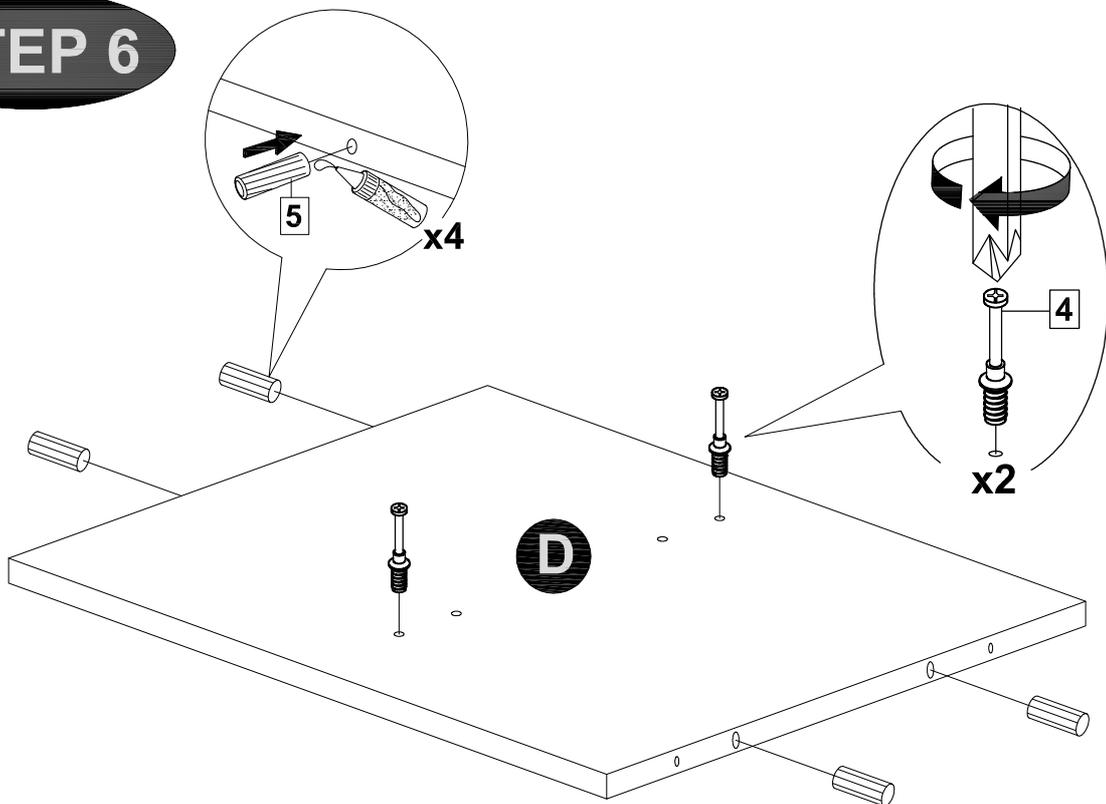


MODEL NAME:

INDIANA ENTERTAINMENT UNIT

STEP 7

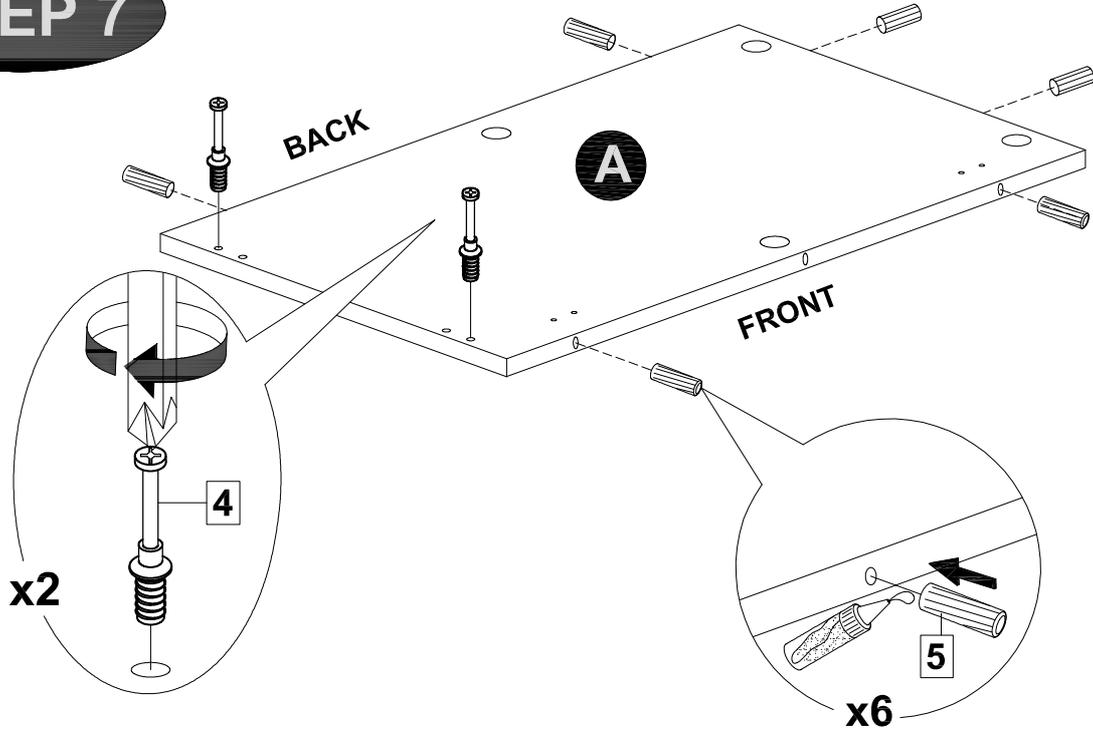


STEP 8

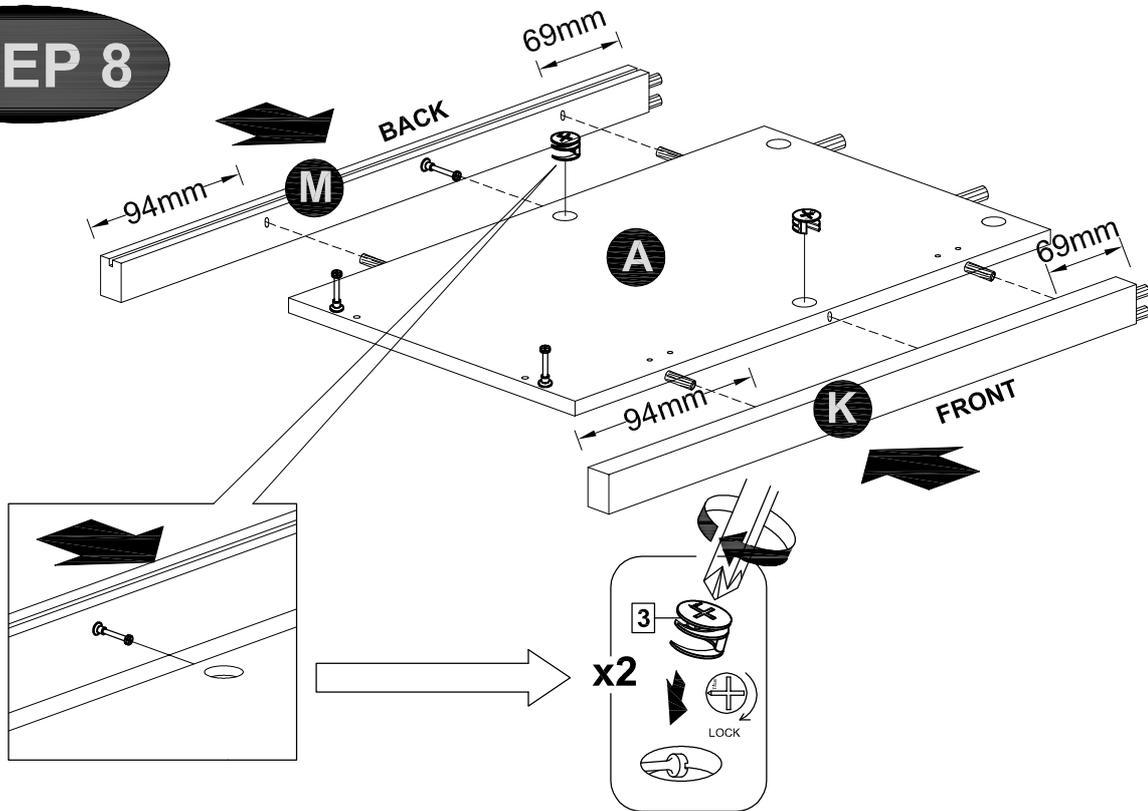


MODEL NAME:

INDIANA ENTERTAINMENT UNIT

STEP 9

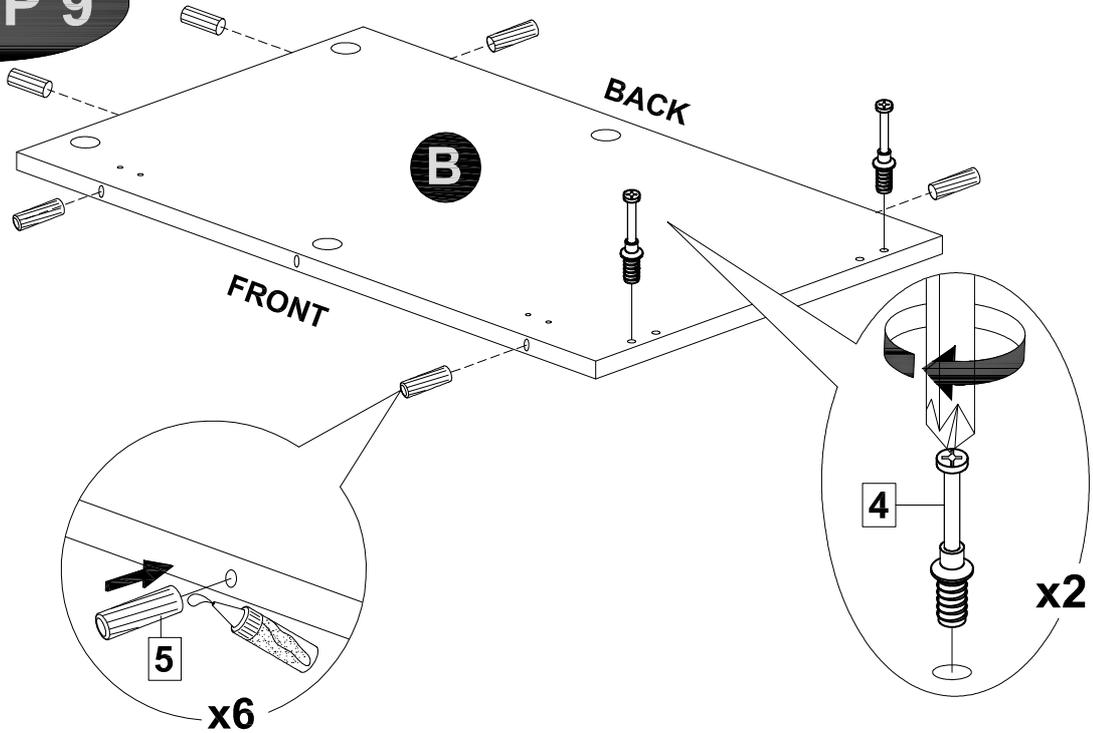


STEP 10

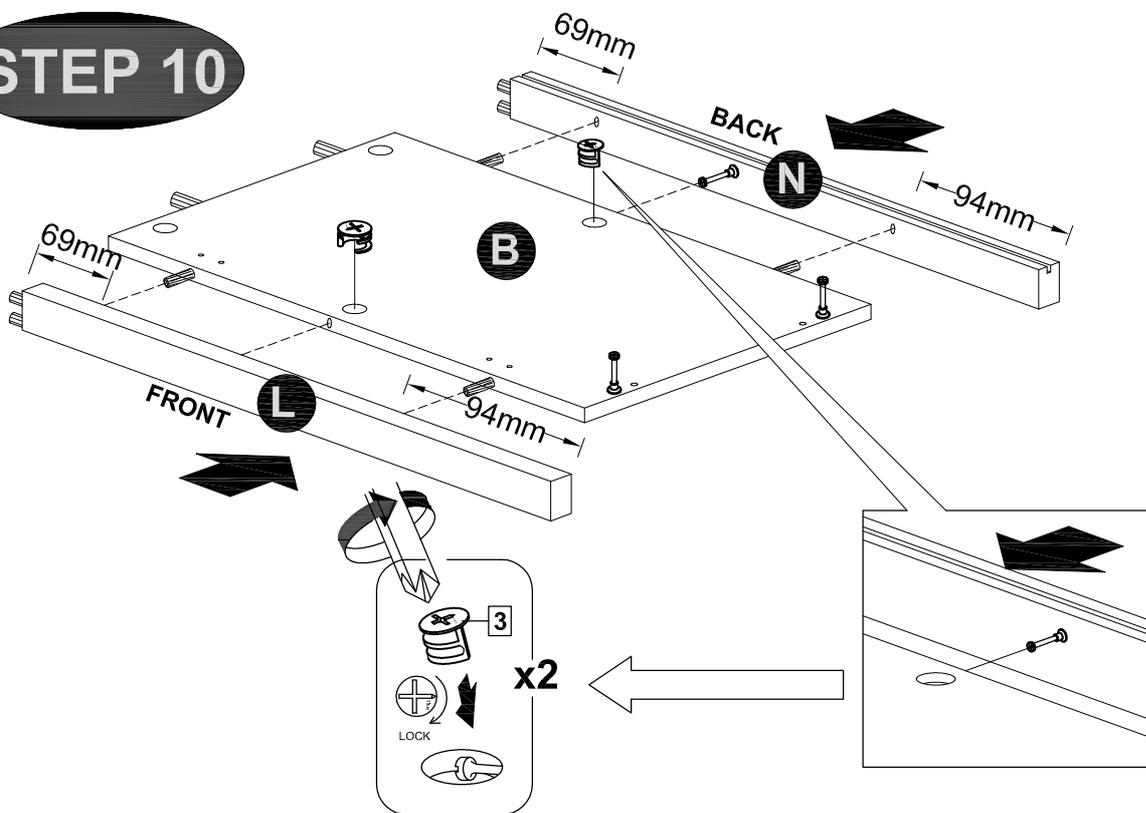


MODEL NAME:

INDIANA ENTERTAINMENT UNIT

STEP 11

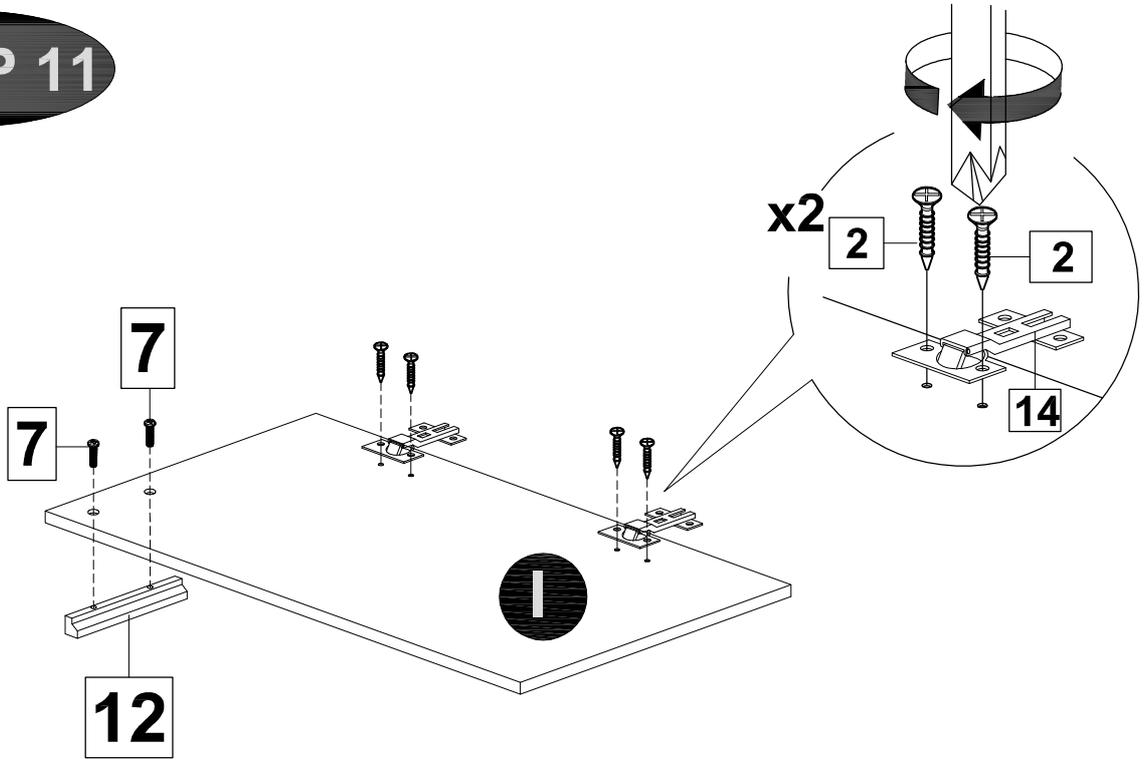


STEP 12

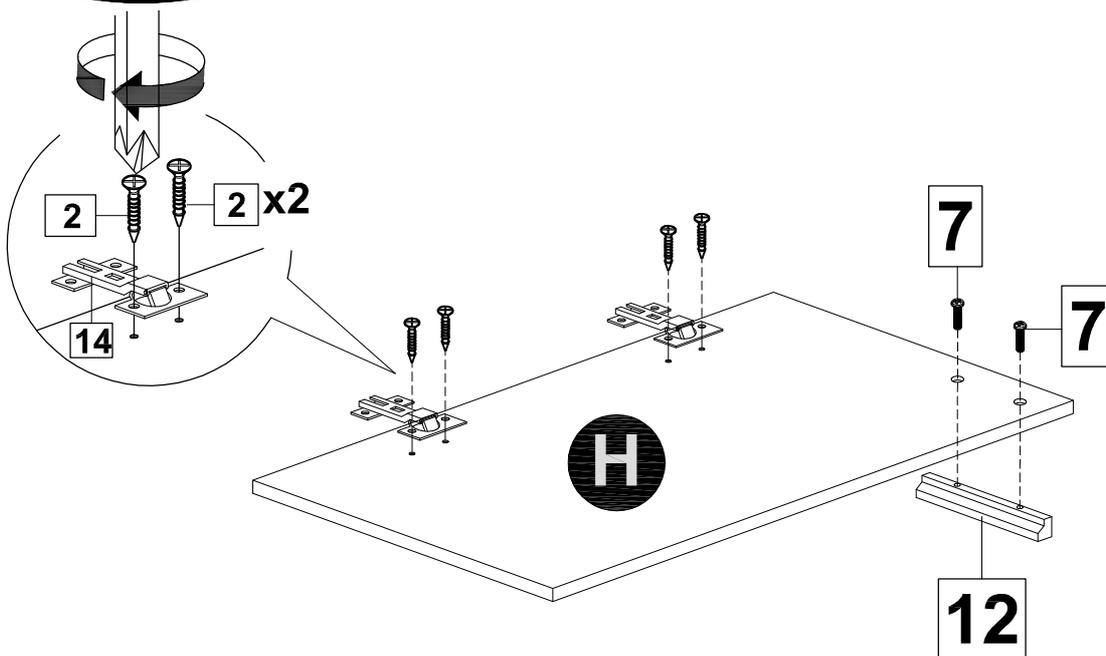


MODEL NAME:

INDIANA ENTERTAINMENT UNIT

STEP 13

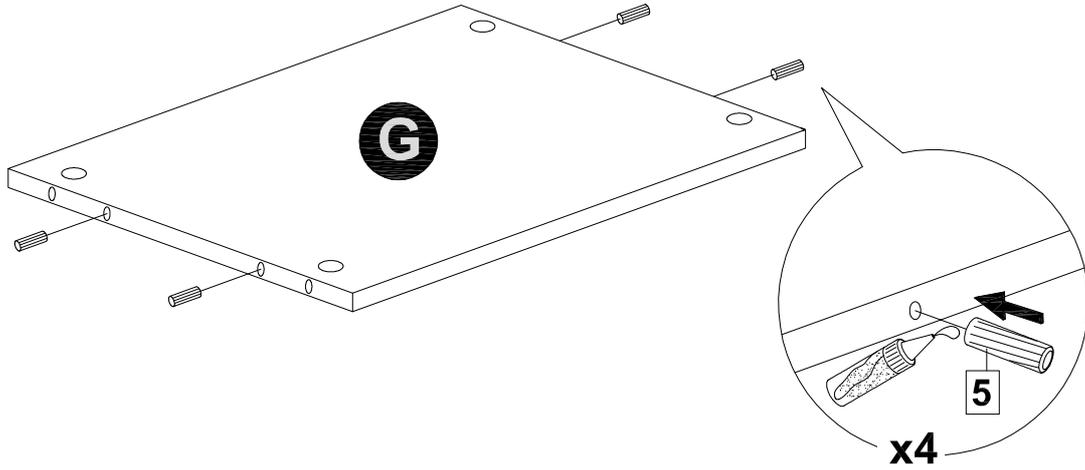


STEP 14

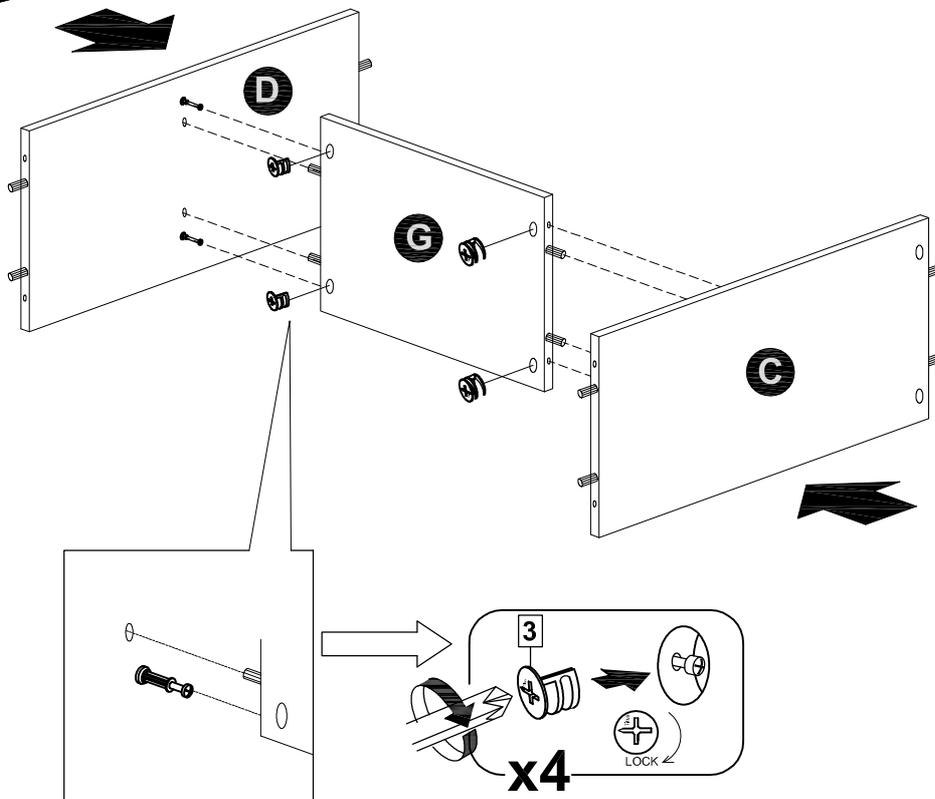


MODEL NAME:

INDIANA ENTERTAINMENT UNIT

STEP 15

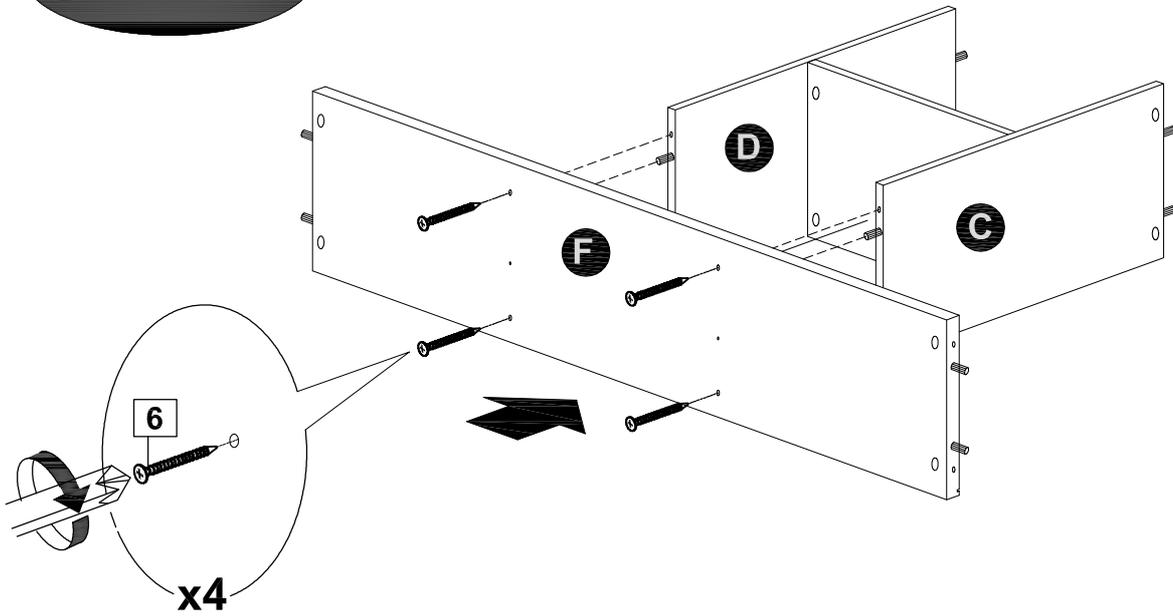


STEP 16

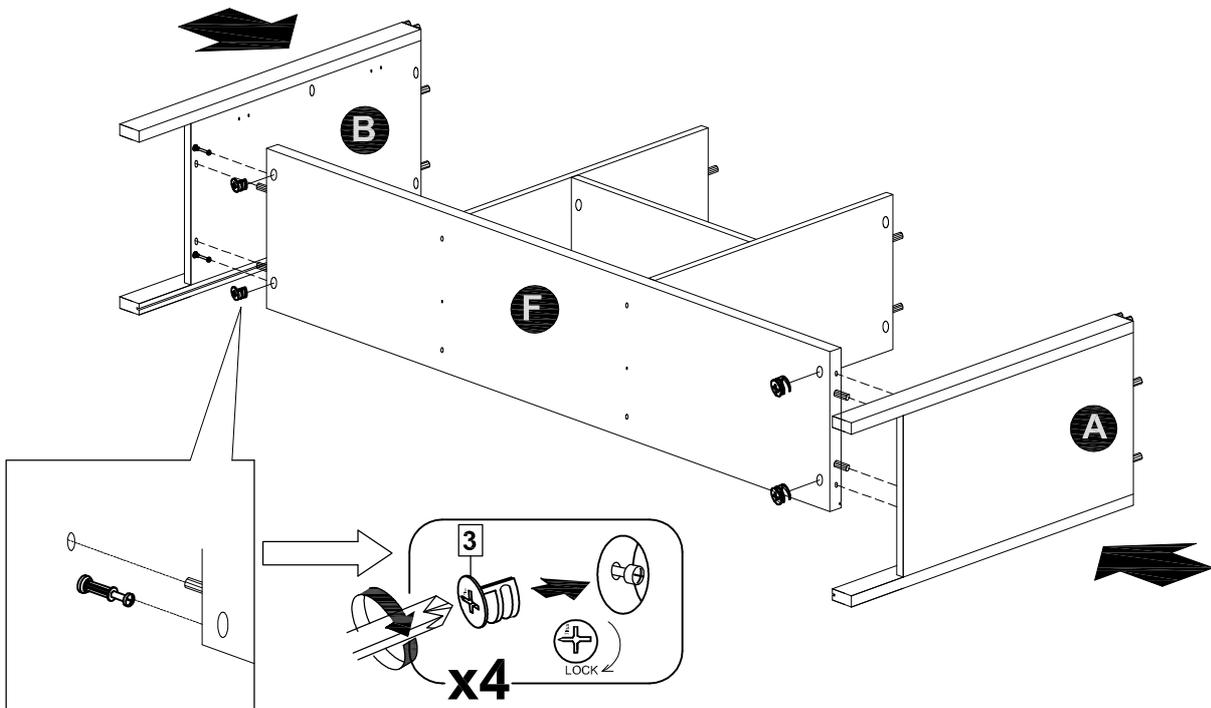


MODEL NAME:

INDIANA ENTERTAINMENT UNIT

STEP 17

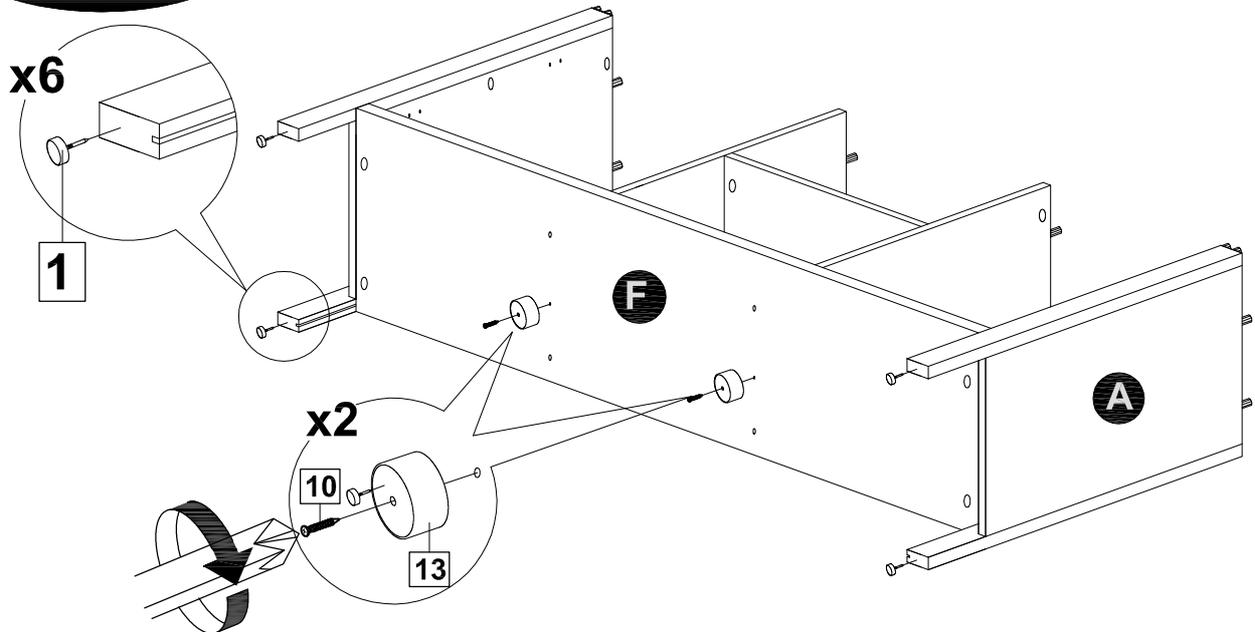


STEP 18

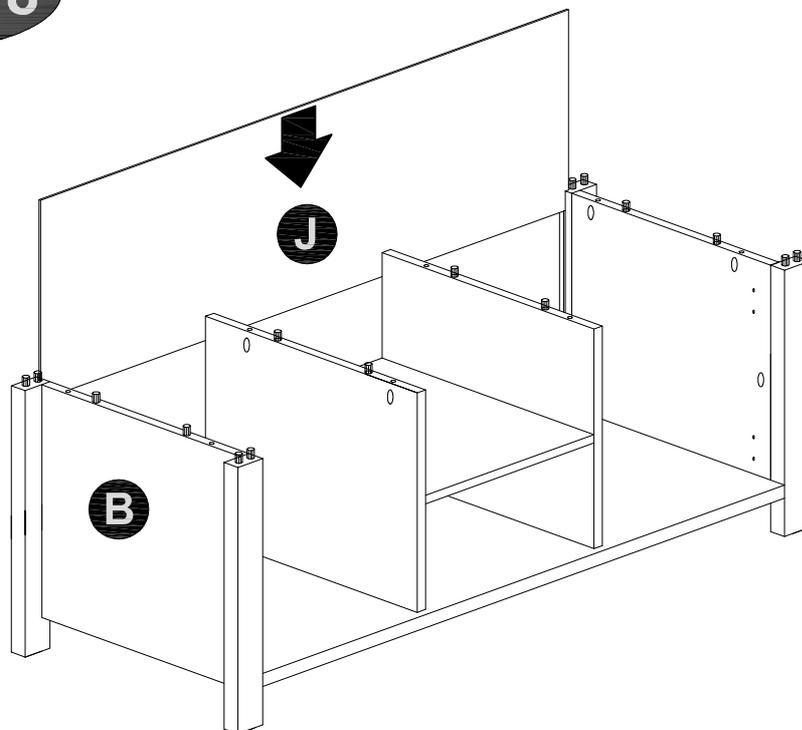

MODEL NAME:

INDIANA ENTERTAINMENT UNIT

STEP 19

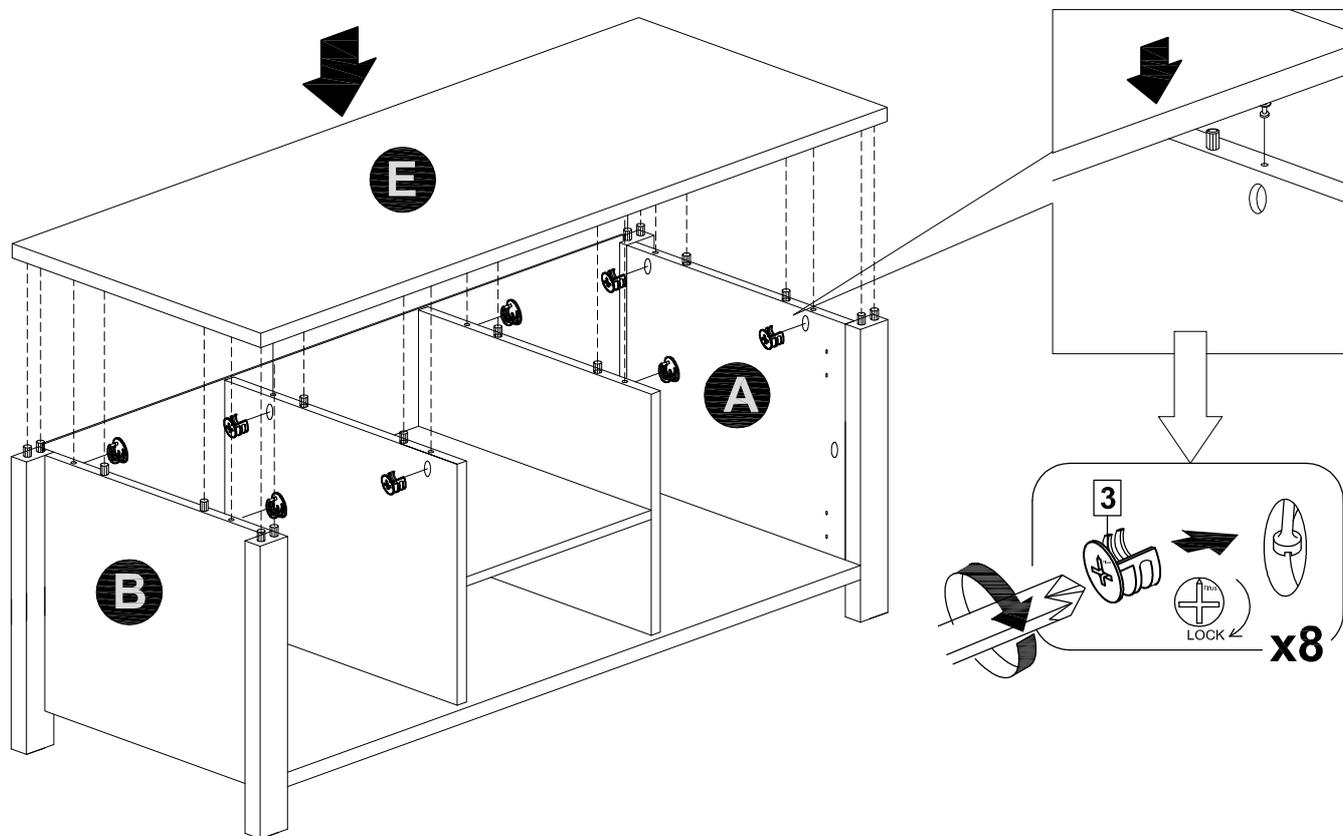


MODEL NAME:

INDIANA ENTERTAINMENT UNIT

STEP 20


Hinges Adjustment Facilities

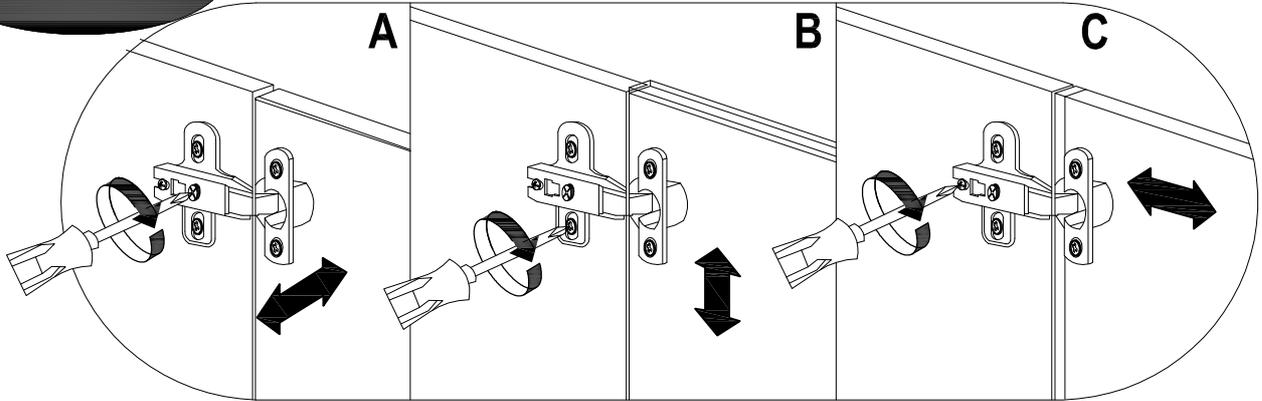

A. Lateral adjustment
by screw adjusting

B. Vertical adjustment via slot
in the mounting plate


C. Front-to-Back by the slacking
the hinge arm mounting screw

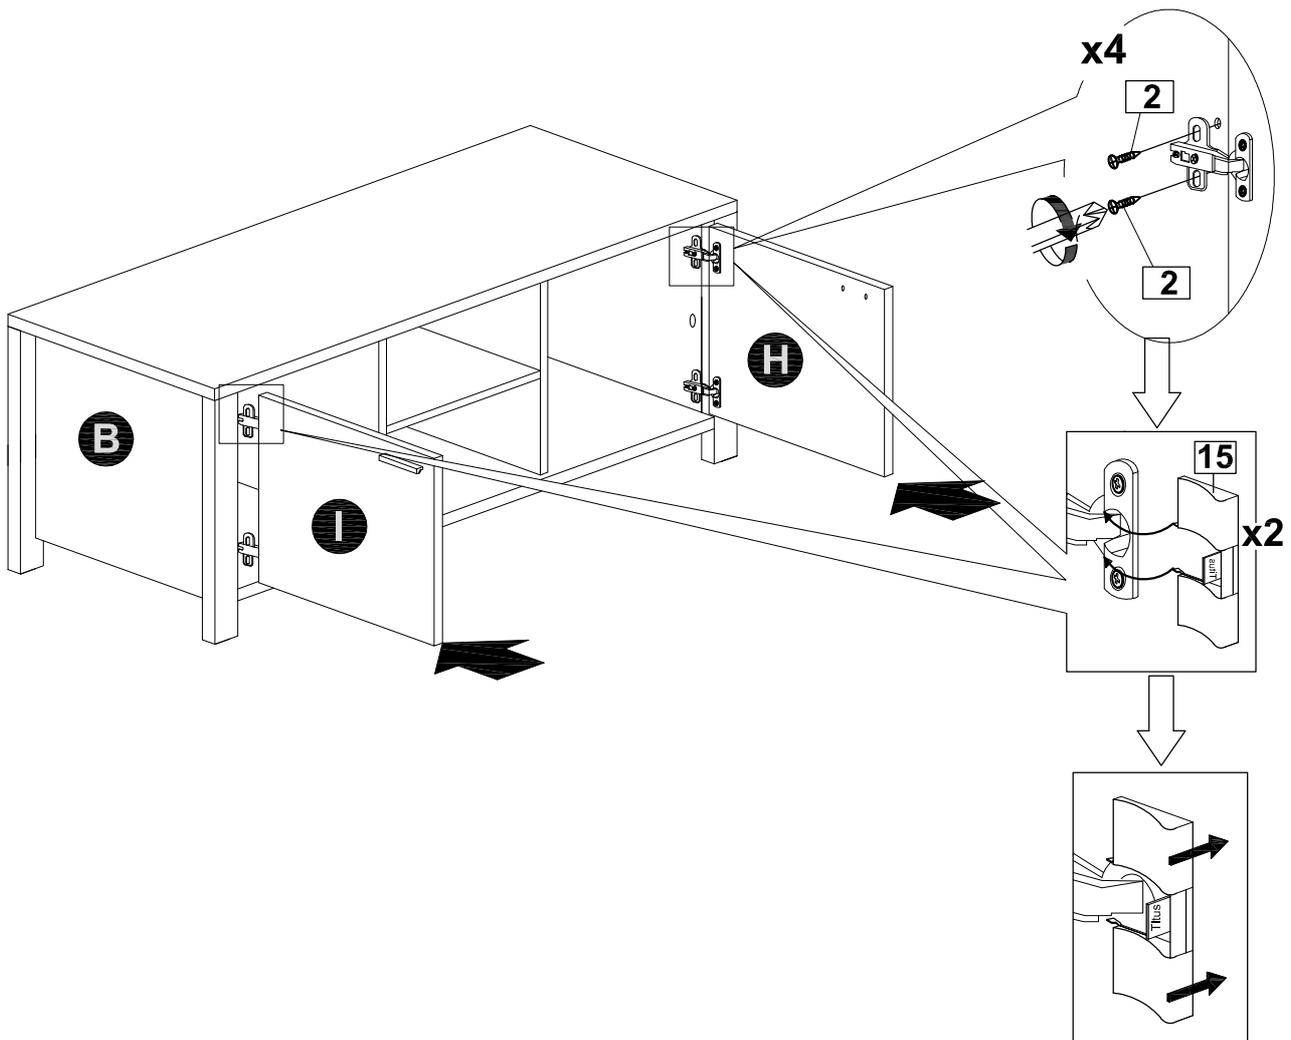

MODEL NAME:

INDIANA ENTERTAINMENT UNIT

STEP 21

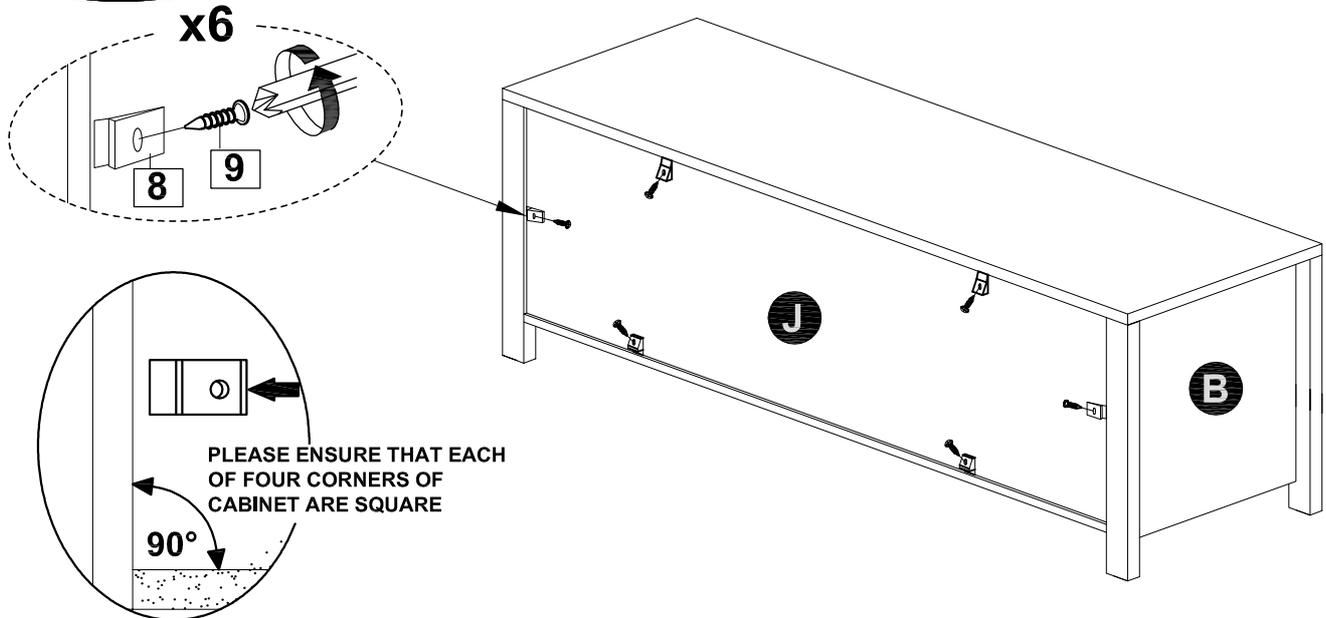

STEP 22

