
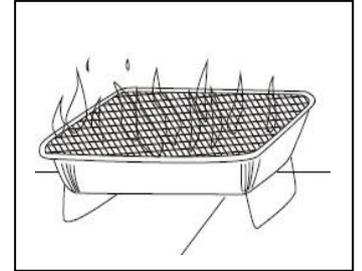
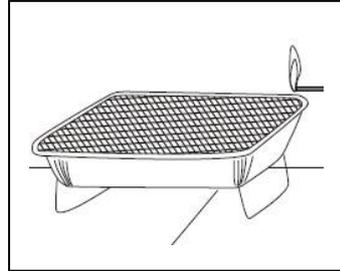


# INSTANT BARBECUE

Barcode: 9401056076857

PLEASE READ THESE INSTRUCTIONS FULLY BEFORE LIGHTING YOUR BARBECUE

## INSTRUCTIONS FOR USE

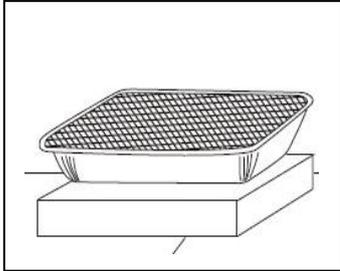

1. Lift the barbecue out of the cardboard tray. Dispose of the cardboard tray in compliance with local regulations.
  2. This barbecue has a special charcoal starter sheet between the cooking grill and the charcoal. This sheet is impregnated with a special substance that allows for easy lighting.
  3. Set the barbecue on the wire stand, and then place it on a level surface that will not be damaged by the heat. Before starting the barbecue, ensure that the charcoal is spread evenly throughout the tray. Ignite the special charcoal starter sheet by inserting a lighted match through one of the holes in the cooking grill.
  4. Let the flames die down before cooking (approximately 15 minutes). The barbecue should be at the ideal cooking temperature at that time.
- DO NOT leave the barbecue unattended when it is lit.
  - DO NOT use this barbecue indoors, in confined spaces, or near overhanging objects.
  - Always use this outdoor fireplace on a hard, level non-combustible surface such as concrete, rock or stone. Do NOT use on wooden decks.
  - Be careful. The grill is very hot. DO NOT handle the barbecue while it is in use. It will remain hot for a considerable amount of time after the flames have gone out.
  - The barbecue burns very hot when it is lit. Keep the barbecue at least 1m away from all flammable materials. DO NOT place under overhead structures or trees.
  - The barbecue should be sheltered from strong winds to avoid having flames blow toward surrounding objects.
  - Extinguish the barbecue by covering the coals with sand or soil, or pouring with water, as soon as the barbecue is no longer being used for cooking.
  - Keep children a safe distance away from the barbecue.
  - This barbecue may have sharp edges. Handle with care when setting up, and when disposing of it.
  - Food must be thoroughly defrosted before cooking.
  - Food will cook very quickly at the beginning, and must be turned frequently. This will help to ensure even cooking.
  - Do not use this barbecue while under the influence of alcohol.
  - After use, please dispose of this barbecue in a manner that is respectful to the environment and in compliance with local regulations.

