


LIVING & CO[®]

WHISTLER 6 DRAWER NARROW TALLBOY

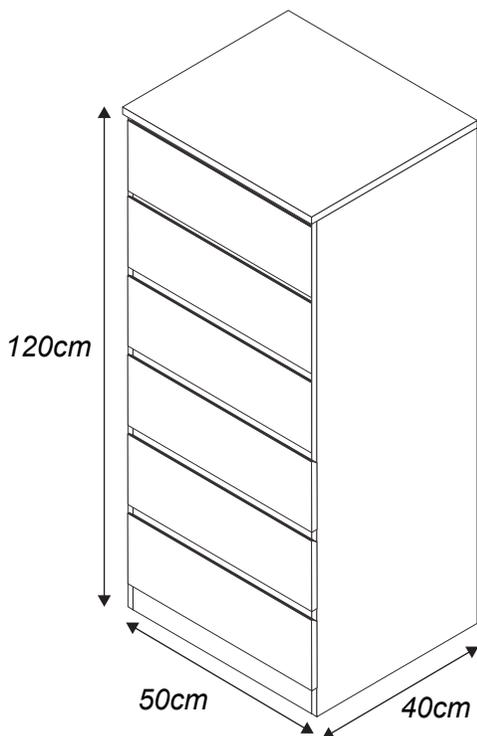

INSTRUCTION MANUAL


Maximum Weight Per Drawer: 3kgs

Maximum Weight For Top: 10kgs

AFTER SALES SUPPORT

📞 (NZ) 0800 422 274

Important Safety Instructions


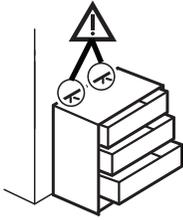


WARNING

Serious or fatal crushing injuries can occur from furniture tip-over. Use of tip-over restraints may only reduce but not eliminate the risk of tip-over. To help prevent tip-over:

- Place heaviest items in the bottom drawers.
- Unless specifically designed to accommodate, do not set TVs or other heavy objects on top of this product.
- Never allow children to climb or hang on drawers, doors or shelves.

  Assembly Details

| | | |
|--|--|--|
| <p style="text-align: center;">90 Min Approximate Assembly Time</p> | <p style="text-align: center;"> 2 Persons of Assembly</p> | <p>Floor Area 2m x 2m</p> <p style="text-align: center;"> Required Assembly Space</p> |
| <p>Required Assembly Tools</p> <p style="text-align: center;"></p> <p style="text-align: center;">Not Provided</p> | | |

 
 
 
 
Tips before you start

- 1 For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage
- 2 Please check that all parts are present before you start the assembly of your furniture.
- 3 For ease and speed of assembly, we recommend that you identify all the parts required for each step before commencing with assembly.
- 4 For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely.
- 5 We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily.
- 6 During assembly please take care not to over-tighten hardware, as this may damage the product. Do not use power tools.
- 7 Always place the product on a steady and stable surface.
- 8 Do not stand on the product. Do not use the product as a stepladder.
- 9 This product is intended for indoor, household use only as it is a non-industrial product.

Care and maintenance


- ✓ Please periodically check all things and re-tighten as necessary.
- ✓ To clean your item, please use a damp cloth and wipe clean.
- ✓ Never allow any kind of liquid to remain on your furniture.
- ✓ Please do not place hot items (eg. Hot drinks) directly on to the surface.


Part List

| | | | |
|--|--|--|--|
|  ① x1 |  ⑤ x2 |  ⑨ x6 |  ⑬ x6 |
|  ② x1 |  ⑥ x1 |  ⑩ x6 |  ⑭ x2 |
|  ③ x1 |  ⑦ x1 |  ⑪ x6 | |
|  ④ x6 |  ⑧ x1 |  ⑫ x6 | |

Hardware List



| | | | |
|---|--|---|---|
|  Ax52 |  Bx52 |  Cx24 |  Dx25 |
|  Ex12 |  Fx72 |  Gx1 |  Hx1 |
|  Ix1 |  Jx4 |  Kx4 |  Lx4 |


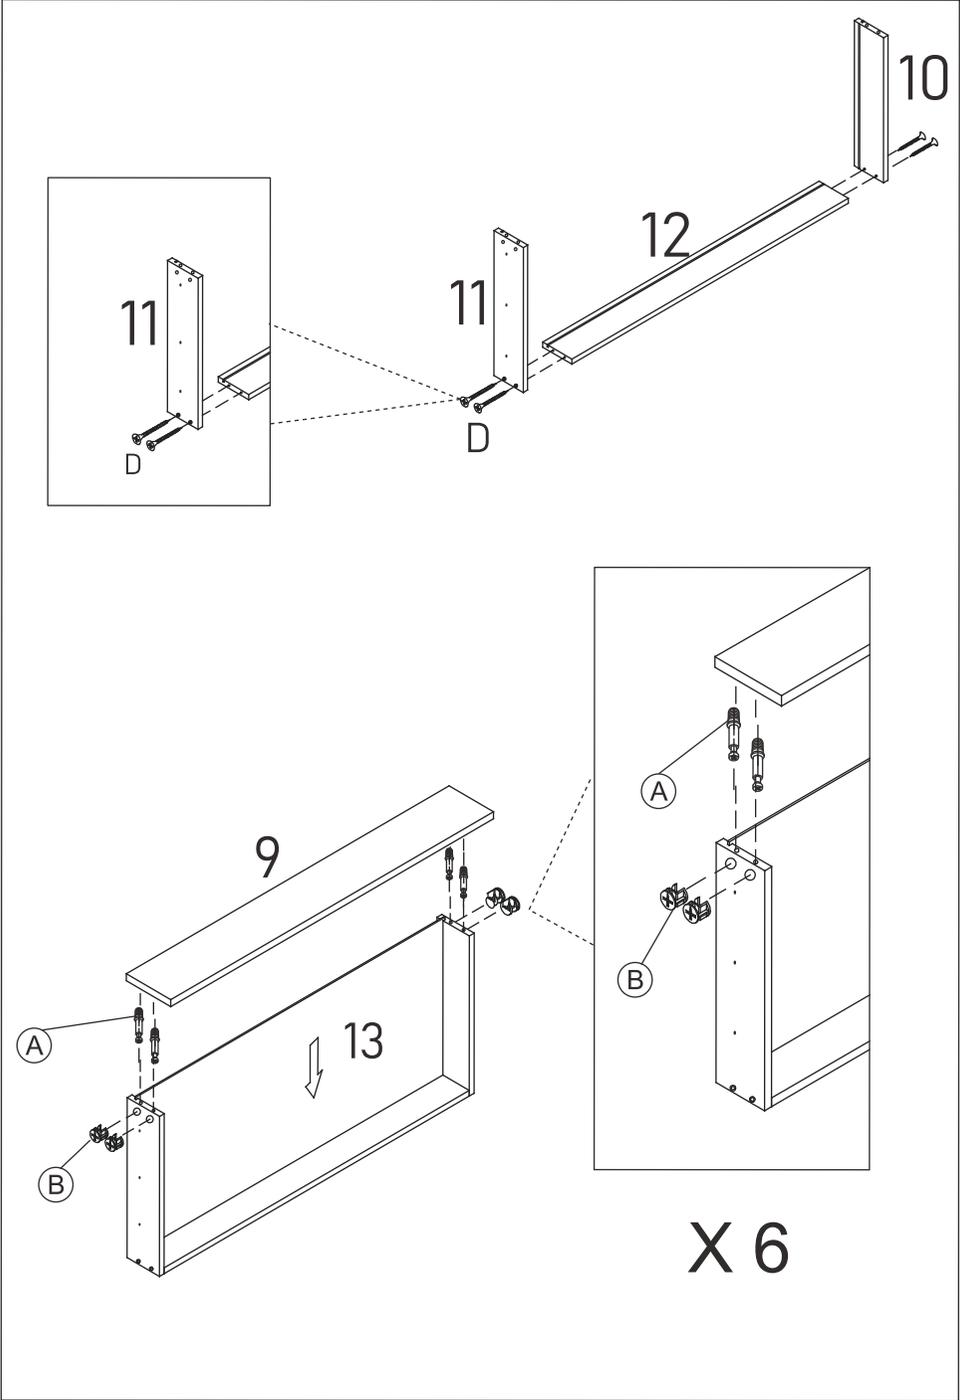



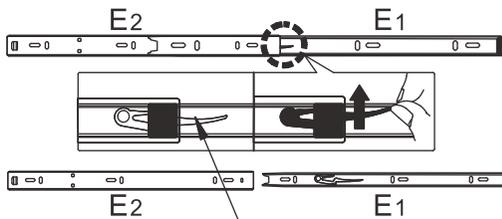




Trigger Disconnect Lever

X 6

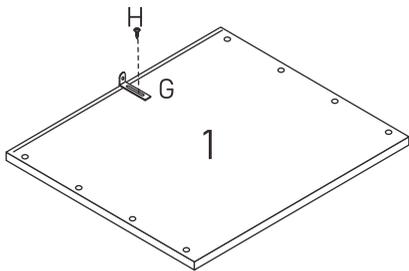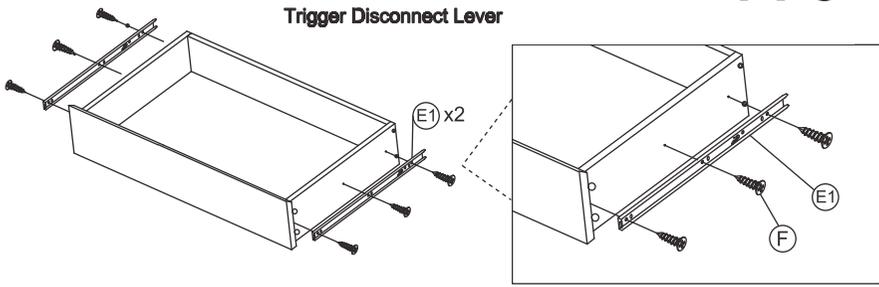

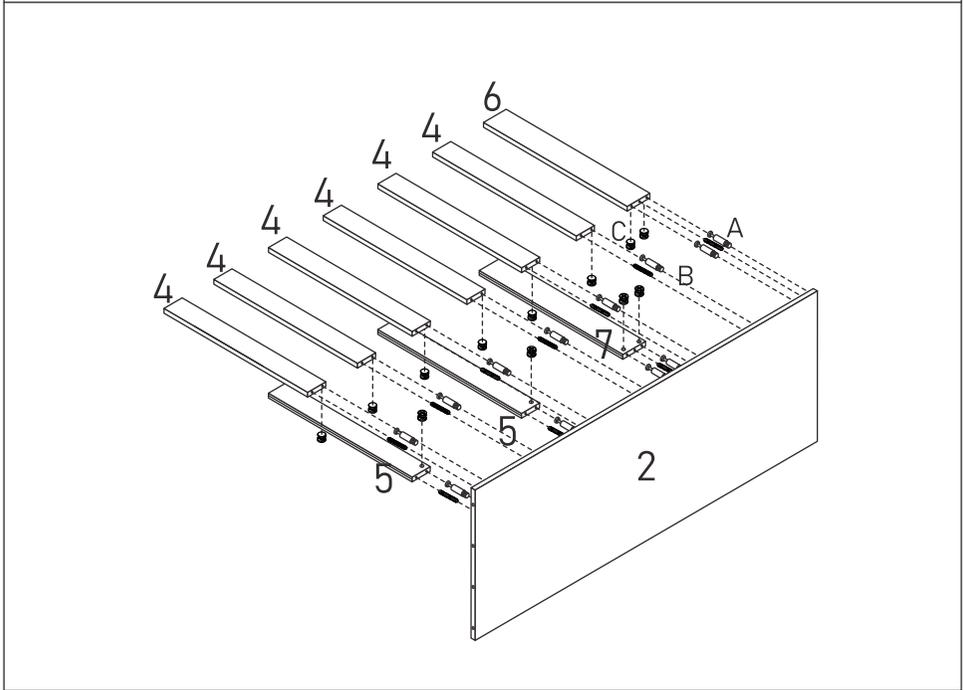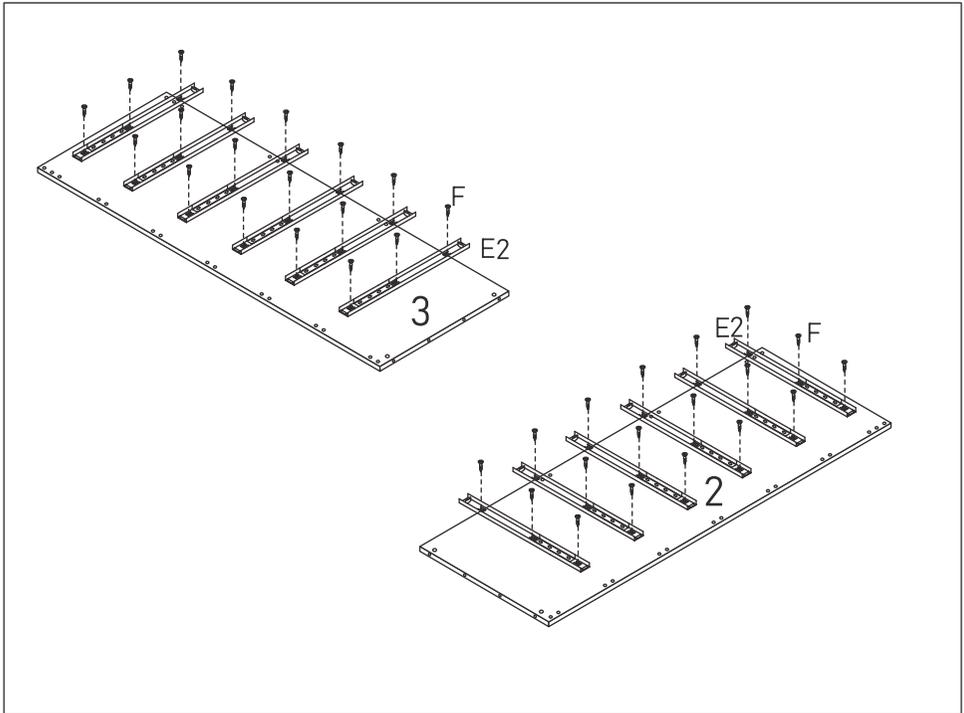

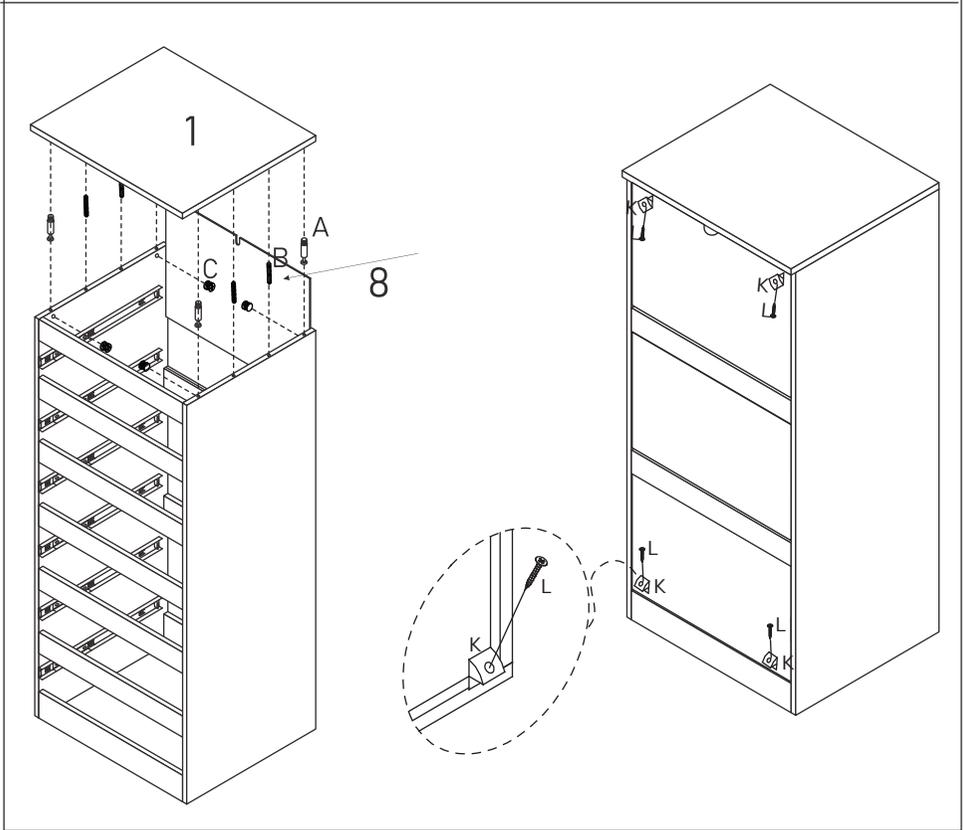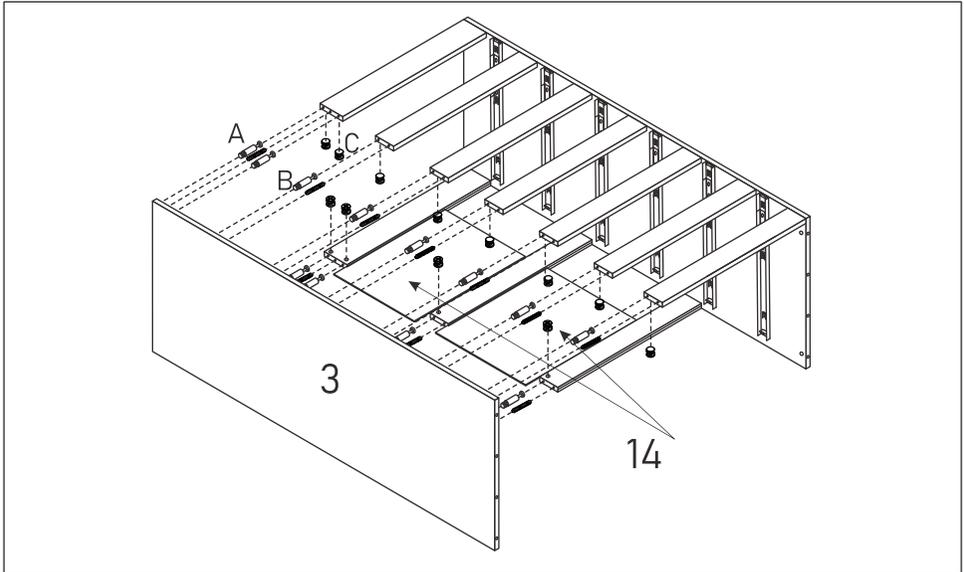


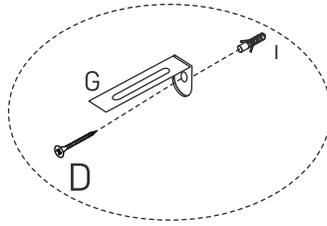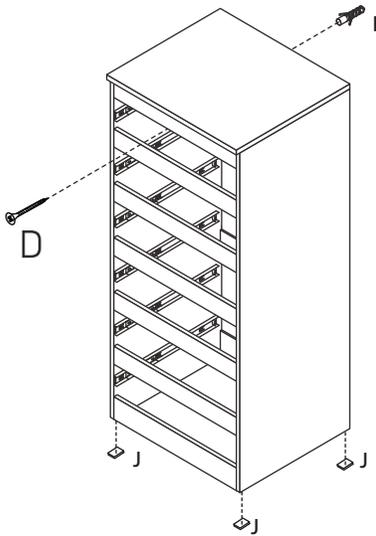

TOPPLING FURNITURE WARNING:

- › It is strongly recommended that this product is permanently fixed to the wall.
- › Please seek professional advice if you are in doubt of what fixing device to use.
- › Regularly check that anchors are securely maintained.
- › Stability of tall items may be affected by thick pile carpet or uneven floors.
- › Do not place unanchored televisions on furniture.

Caution! When attaching the anchor fixings, check for any electrical wires or plumbing behind the wall before drilling any holes (if you are unsure, please seek professional advice from a qualified tradesperson).

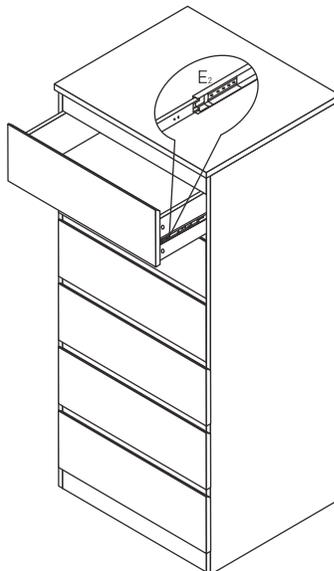



LIVING & CO[®]

Warranty

We pride ourselves on producing a range of quality products that are both packed with features and completely reliable. We are so confident in our products, we back them up with one year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This product is covered by one year warranty when accompanied by proof of purchase.