



CodeRED™

Model: CRL-100

Smoke Alarm Troubleshooting Guide

PROBLEM	CAUSE	SOLUTION
Smoke alarm does not respond when Test button depressed.	Red pin in back of alarm is not positioned and seated correctly.	Remove the alarm from the mounting plate and check that the red pin is in the ON position.
Red LED flashes and the alarm sounds one beep every 40 seconds.	<ol style="list-style-type: none">1. Cold air temperature <math><6^{\circ}\text{C}</math>.2. Battery is low.	<ol style="list-style-type: none">1. Relocate alarm to warmer location.2. The battery is not replaceable. You will need to replace the alarm.
Red LED flashes and the alarm sounds two beeps every 40 seconds.	The alarm is malfunctioning.	Clean the alarm including vacuuming around the exterior and openings. If the malfunction continues, return the alarm to supplier for repair or replacement.
Smoke alarm sounds unwanted alarms intermittently or when residents are cooking, taking showers, etc.	<ol style="list-style-type: none">1. Alarm has dust or insect inside casing.2. Alarm is incorrectly located.	<ol style="list-style-type: none">1. Clean the alarm by gently vacuuming all openings around the outside of the alarm using your household vacuum's soft brush attachment.2. Move alarm away from kitchen or bathroom/laundry areas where cooking fumes or steam can trigger the alarm.

Download User Guide: <https://goo.gl/G2zaGg>

© NEWFIELD GROUP January 2018