



CONVECTOR HEATER 2300W



**User Manual
Model CH-09FLCD**

**PLEASE READ AND SAVE THESE
INSTRUCTIONS FOR FUTURE REFERENCE**

AFTER SALES SUPPORT
☎ 0800 422 274

2

Contents

- 03 General Care and Safety Warnings
- 04 Product Overview
- 05 Before first Use
- 06 Operation Instructions
- 07 Remote Control Battery Replacement
- 08 Important Safety Instructions
- 08 Care and Cleaning



AFTER SALES SUPPORT
☎ 0800 422 274

3

General Care and Safety Warnings:

Thank you for choosing a Kensington Convector Heater. This appliance has been designed and manufactured to high standards of engineering and with proper use and care, as described in this booklet, will give you years of useful service. Please read these instructions carefully and keep for future reference.

1. **WARNING** you must not cover this appliance. Covering this appliance presents fire risk and will activate the safety fuse; permanently disabling the unit.
2. Use only the voltage specified on the rating label of the appliance.
3. Keep all objects at least 1 metre from the front, sides and rear of the appliance.
4. This appliance is intended for household use only and not for commercial or industrial use.
5. Indoor use only.
6. Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
7. The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grilles.
8. Disconnected from the supply, allow to cool down and take care when moving or repositioning the appliance.
9. When the appliance has been unpacked, check it for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact the Customer Services Team.
10. If your appliance does not work, or is not working properly, contact the supplier.
11. Do not connect the appliance to the mains electrical supply until completely assembled and adjusted.
12. Do not sit on the appliance.
13. Do not locate the appliance directly below any power socket outlet.
14. Ensure appliance is on a flat, stable, heat-resistant surface.
15. Do not operate with the supply cord set coiled up as a heat build up is likely, which could be sufficient to become a hazard.
16. Carry out regular checks of the supply cord to ensure no damage is evident.
17. Do not operate the appliance with a damaged cord, plug or after the appliance malfunctions or has been dropped or damaged in any manner. Return to a qualified electrical person for examination, electrical service or repair.
18. Do not remove plug from power socket by pulling cord; always grip plug.
19. There are no user serviceable parts installed in the unit.
20. It is strongly recommended that this appliance is plugged directly into the wall socket. The use of power boards (multi-boards) is not recommended as many power boards are not designed to supply power to high wattage appliances.
21. A correctly specified, undamaged extension cord may be used with this appliance provided it is used in a safe manner.
22. For additional safety, it is recommended to use the appliance with a residual current device (RCD) with a rated operating residual current not exceeding 30mA.
23. Use the appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electric shock or injury.
24. Do not remove plug from power socket until the appliance has been switched off.
25. Do not place supply cord under carpet or cover with rugs or furniture. Arrange the cord so that it does not present a trip hazard.
26. Do not place appliance on bedding or on thick & long carpet where the openings may get blocked.
27. Always unplug the appliance when not in use.
28. Do not place appliance close to radiant heat sources.
29. Never use the appliance to dry clothes.
30. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
31. Ensure hands are dry before handling or operating.
32. Do not operate in areas where petrol, paint or other flammable liquids are used or stored.
33. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the appliance by a person responsible for their safety.
34. Children should be supervised to ensure that they do not play with the appliance.
35. Do not use this appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids. The appliance must not be immersed in any liquids.
36. Do not place the unit in wardrobes or other enclosed spaces as this may cause fire hazards.
37. Never leave the heater unattended while it is in use. Always turn the product to the OFF position and unplug from the electrical outlet when not in use.
38. This heater is hot when in use. To avoid burns or personal injury, do not let bare skin touch hot surfaces.
39. Ensure the supply cord is away from heated surfaces.
40. Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split.


YOUR SAFETY IS IMPORTANT TO US. PLEASE ENSURE YOU TAKE NOTE OF THE INSTRUCTIONS AND WARNINGS OUTLINED IN THIS MANUAL.



AFTER SALES SUPPORT
☎ 0800 422 274

4

Product Overview:

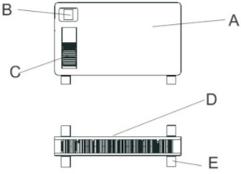

Control Panel / LCD Display



Remote Control





AFTER SALES SUPPORT
☎ 0800 422 274

5

Before First Use


ATTACHMENT OF SUPPORT FEET

1. Invert the enclosure, so you are looking at the underside.
2. Align the two plastic support feet so the mounting holes align with the body and use the four screws provided to secure the feet to the body.
3. Tighten the screws using a screw driver.

WARNING: DO NOT ATTEMPT TO OPERATE THE HEATER WITHOUT ATTACHING THE SUPPORT FEET.

• Ensure all packaging material has been removed from the heater and inlet / outlet grilles are unobstructed.

NOTE 1: The heater may emit a small amount of smoke and odour when used for the first time. This is normal and caused by the lubricant on the heating element during the production process. It is non-toxic. If the smoke and odour are excessive, use the heater in a ventilated area. The smoke and odour should disappear after a few minutes of use.

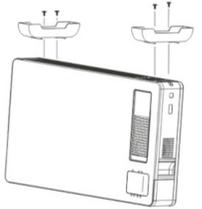



AFTER SALES SUPPORT
☎ 0800 422 274

6

Operating Instructions

- Locate the heater on a stable / level and secure surface well clear from external items including walls / curtains / furniture etc
- Make sure the appliance, including the plug and cord are not damaged.
- Insert power plug into a wall socket with a socket voltage rating of 220-240V 50Hz and switch the socket outlet on.
- An audible beep will be heard when the power switch is turned on.
- The ambient temperature (TEMP) and a default set temperature (SET) of 25 degrees Celsius will be displayed at start-up.
- Before any function can be selected, press the standby button first ().
- Set your desired room temperature by pressing the up () or down buttons (). The temperature is selectable from 5° Celsius to 37° Celsius.

NOTE: The heater must be 3 degrees above ambient temperature before the heating element will turn on. Once the ambient reaches the set temperature it will automatically switch off and then regulate to maintain this temperature.

- Select low (1000W), medium (1300W), high (2300W) heat level by pressing the heat button (). If the elements fail to turn on, increase the set temperature by pressing the up button ().
- Fan function
To heat the room faster, press the fan button () to switch the fan on. Press it again, to switch the fan off.
- °F/C (temperature unit)
Press °F/C button to display the temperature in degrees Fahrenheit or Celsius.
- Timer
Your heater is equipped with a timer. Operation time is selectable from 1-24 hours in one hour increments.
- Defrost function
To select, press () until () is displayed. The defrost function has a pre-set operating temperature of 5° Celsius (when the temperature is 6° Celsius or more, it will cease to function). At 5° Celsius, the low heat setting (1000W) will switch on. At 4° Celsius, the medium heat setting (1300W) will switch on. At 3° Celsius or less, the high heat setting (2300W) will switch on.




AFTER SALES SUPPORT
☎ 0800 422 274

7

Remote Control Battery Replacement

If the battery in the remote control is flat, insert a new 3V CR2032 size button cell following the instructions below.

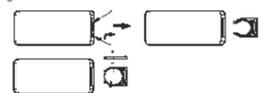

Push the locking tab to one side and pull out the battery compartment at the back side of remote control. Remove the old battery from the remote control and insert a new one of the same type, observing the polarity, as illustrated above. Insert the battery compartment cover back into the remote control.

Battery precautions

WARNING! Keep batteries out of reach of children. Swallowing may lead to serious injury or death in as little as 2 hours due to internal burns. If swallowed, go straight to a hospital emergency room. Dispose of used batteries immediately.

DANGER if swallowed

- Do not open the batteries or short-circuit them.
- Do not mix different types of batteries. Due to increased risk of leakage, empty batteries should be removed. The batteries should also be removed from the remote control if it is not being used for long periods.
- Only dispose of batteries when they are fully discharged.
- **WARNING: Danger of explosion!** To prevent a risk of explosion, batteries must not be charged, heated or disposed of by burning. Never throw batteries into a fire or subject batteries to high temperatures.
- Used batteries should not be disposed of in household waste. Dispose of them in accordance with statutory regulations.

SPECIFICATIONS

Product Model NO.	CH-09FLCD
Voltage	220-240V~
Frequency	50Hz
Power	2300W



AFTER SALES SUPPORT
☎ 0800 422 274

8

Important Safety Features

Your heater is equipped with an Overheat Protection System. When the threshold temperature has been reached, your heater will turn off automatically.

To reset your heater when the Overheat Protection System has been activated, perform the following steps:

- Switch the main power switch to the off position.
- Disconnect the power cord from the mains electrical power outlet.
- Ensure that all vent grilles are clear from obstructions.
- Allow your heater to cool down for approximately 30 minutes.
- Plug your heater back into mains power and switch the power socket switch on, the heater will resume normal operation.

Care and Cleaning

CLEANING AND MAINTENANCE

- Switch off the appliance, unplug from the socket outlet and allow the appliance to cool down.
- The external surface can be gently wiped down with a soft dry or damp cloth. Do not use detergents or abrasive cleaners.
- Dust deposits / cobwebs etc, should be regularly removed from the surface in particular the ventilation grilles.
- Never attempt to insert any object within the heater.

STORAGE

- Switch off the appliance, unplug from the socket outlet and allow the appliance to cool down. Ensure completely cool (this may take approximately 2 hours).
- Follow the instructions given for cleaning and maintenance.
- Keep the appliance in a dry / cool and low humidity location.
- The appliance can be stored in the original packaging box or other suitable location, protected from impact.



AFTER SALES SUPPORT
☎ 0800 422 274

9



AFTER SALES SUPPORT
☎ 0800 422 274

10



AFTER SALES SUPPORT
☎ 0800 422 274

11



AFTER SALES SUPPORT
☎ 0800 422 274



Read the manual.
It will help you get the best out of your product.
STOP BEFORE YOU THINK OF DISPOSING IT.
Still have questions? Call After Sales Support 0800 422 274



AFTER SALES SUPPORT
☎ 0800 422 274