

living & co.

CERAMIC TOWER HEATER



INSTRUCTION MANUAL ZFH011M

AFTER SALES SUPPORT

☎ NZ 0800 422 274


Contents

	Page
Important Safety Instructions	2-3
Product Overview	3
Getting Started	4
Operating Instructions	4
Other Useful Information	5-6
Warranty	7

Important Safety Instructions

READ CAREFULLY AND KEEP FOR FUTURE REFERENCE


Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Make sure you understand all instructions and warnings. **Keep the manual in a safe place for future reference**, along with any warranty information, your purchase receipt and the original packaging carton. If you sell or transfer ownership of this product, pass on these instructions to the new owner. **Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:**

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- CAUTION - Some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Warning: In order to avoid overheating, do not cover the heater. The meaning of figure  in marking is "DO NOT COVER".
- The heater must not be located immediately below a socket-outlet.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- This appliance is only for household use.
- WARNING: Do not use this heater in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
- Do not use this heater if it has been dropped.
- Do not use if there are visible signs of damage to the heater.
- Use this heater on a horizontal and stable surface.
- WARNING: To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1m from the air outlet.
- Do not attempt to repair, disassemble or modify the appliance. There are no user-serviceable parts inside.

Important Safety Instructions (Continued)

- CAUTION – if using an extension lead please ensure you do not exceed the maximum rated running wattage/load of the extension lead.
- Disconnect from mains when not in use or when moving or cleaning.
- The heater is hot when in use .To avoid burns, do not let bare skin touch hot surface.

Product Overview

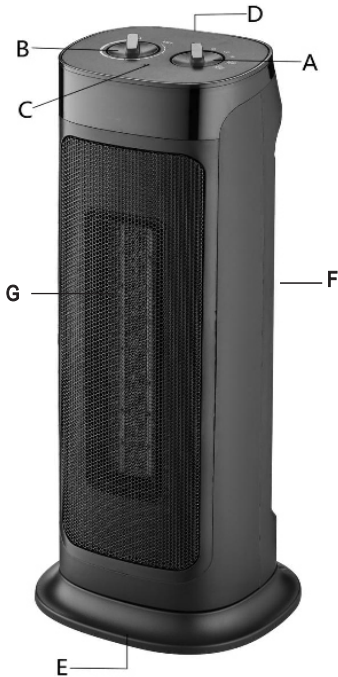

- A -Power&Oscillation switch
- B -Adjustable thermostat
- C -Pilot indicator light
- D -Handle
- E -Oscillation base
- F -Air inlet grille
- G -Air outlet grille


NOTE: The heater may emit small amount of smoke and odour when used for the first time. This is normal and caused by the lubricant on the heating element during the production process. It is non-toxic. If the smoke and odour are excessive, use the heater in a ventilated area. The smoke and odour should disappear after a few minutes of use.

Getting Started

Before first use

- **Unpacking:** This product has been packaged to protect it against transportation damage. Unpack the appliance and keep the original packaging carton and materials in a safe place. It will help prevent any damage if the product needs to be transported in the future, and you can use it to store the appliance when it is not in use. In the event it is to be disposed of, please recycle all packaging materials where possible.
- **Inspection:** Unwind the cord to its full length and inspect it for damage. Do not use the appliance if the appliance or its cord have been damaged or are not working properly. In case of damage, contact our after sales support centre for advice on examination, repair or return of the damaged product.

Operating Instructions

- Place the product in an upright position on a flat, stable, heat-resistant surface. Make sure there is nothing flammable or heat sensitive within 1 meter (40 inches). Operating the product in any other position could cause a hazard.
- Insert the plug into a suitable wall outlet after turning the thermostat knob counter-clockwise to the minimum position and setting the power switch to the OFF position.
- The heater is suitable for operation on an A.C. electricity supply having the same voltage as that show on its rating label.
- To activate the heater, turn the power & oscillation switch to below position for required function:
OFF: Off
 : Fan only
LO : Warm air -Low power
HI : Hot air -High power
LO&OSC: Oscillation under Low power
HI&OSC: Oscillation under High power
- Turn the thermostat switch clockwise or anti-clockwise to set the desired temperature you require. The thermostat switch will keep the room temperature at the desired level automatically.
NOTE: The pilot indicator light will be on when heating element in is on and will be off when element is off, cycling on the thermostat which regulates the ambient temperature.
- To completely shut the heater off, turn all the switches to off, and remove plug from the socket-outlet when not in use.
Note: Do not force knob beyond its normal stop position.

Other Useful Information

Safety features:

Tip-over protection

This heater is protected with a safety switch that turns off the appliance automatically when the heater falls over, or is at an excessive angle from the horizontal. This helps prevent accidents, and the heater will resume operation when it is put back upright.

Overheat protection

This heater is protected with overheat protection that switches off the appliance automatically in case of severe overheating. In this case, unplug the appliance, wait about 30 minutes for it to cool and remove any possible cause of overheating, eg. something covering the heater. Check for damage to the appliance, the cord and the plug. If there is no damage, plug the unit back in and switch it on as described above. If the heater still does not turn on, please contact Customer Service for assistance.

Technical Specification:

- 220-240V~50Hz,2000W, Class II

MAINTENANCE

- Always remove the plug from the socket-outlet and allow the heater to cool down before clean the heater.
- Wipe the heater with a soft damp (not wet) cloth.
- Use a vacuum cleaner with a soft brush attachment to periodically vacuum the air inlet and outlet grilles to remove dust or foreign objects.
- **WARNING:**
- Do not immerse the heater in water.
- Do not use any cleaning chemicals such as detergents and abrasives.
- Do not allow the interior to get wet as this could create a hazard.

Store the heater in a clean dry place.

In case of malfunction or doubt, do not try to repair the heater yourself, it may result in a fire hazard or electric shock.

Other Useful Information (Continued)

Compliance

This appliance has been fully tested and meets all requirements as set out by standard AS/NZS 60335.2.30 in conjunction with AS/NZS 60335.1.



The RCM Mark (Regulatory Compliance Mark) indicates that the product complies with the National requirements for the safety and EMC requirements of electrical devices.

Responsible disposal

- At the end of its working life, make the appliance unserviceable by unplugging it from the power outlet and cutting the power cord.
- Do not throw this appliance out with your household rubbish. Electrical and electronic products contain substances which can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local council for advice on recycling facilities in your area.



living & co.

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are confident in our products, we back them up with a 2 year warranty. Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This product is covered by 2 year warranty when accompanied by proof of purchase.

IM Version 1.0 November 2025