



Faux Fur fleece+Sherpa fleece Heated Throw

Model:TK(160×120)/1.3m²-22S-DT-ST



INSTRUCTION MANUAL- IMPORTANT
INSTRUCTIONS RETAIN FOR FUTURE USE-
READ FULLY BEFORE USE

SAFETY INSTRUCTIONS



Carefully read this manual in full before using this heated throw.

Ensure that you know how the heated throw functions and how to operate it. Maintain the heated throw in accordance with the instructions to ensure that it functions properly.

Keep this manual with the heated throw. If the heated throw is to be used by a third party, this instruction manual must be supplied with it.

The safety instructions do not by themselves eliminate any danger completely and proper accident prevention measures must always be used.

No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

WARNING! Do not use this heated throw if it has been damaged in any way, if it is wet or moist or if the supply cord is damaged. Return it immediately to the retailer.

Warning! The heated throw should be checked annually for electrical safety in order to limit the risk of electric shock or fire. Read safety instructions fully.

PACKAGE CONTENTS

1 x Heated throw
Single Detachable Controller
1 x Instruction Manual

CAUTION. Confirm all parts before disposing of packaging. Safely dispose of all plastic bags and other packaging components. They may be potentially dangerous to children.

Warning! This heated throw must only be used with the heat control supplied. The heat control must be marked with the make and model number corresponding to those marked on this heated throw.

LOCATION AND SAFE USE OF YOUR HEATED THROW

Location and Use

Your blanket is designed to be used as over-blanket or wrap only.

Spread the blanket out over yourself while lying in the bed or sitting on the sofa.

The blanket can be wrapped around you but do not fold, do not sit on the blanket or wrap tightly when blanket is turned on. This may lead to the overheat protection system being activated. Please chose the lowest 2 heat settings for wrap use.

When the blanket is in use, ensure the connecting plug remains on the upper surface.

Leave your blanket unfolded when you leave temporarily, but the blanket is left turned on.

Ensure that you have read all the safety instructions carefully before use.

Controller

The controller has the following settings. **Warning!** Ensure heat control is correctly attached before connecting to the mains supply. Input plug and connecting socket must be secured and locked under the locking flap.



- Plug into a mains outlet.
- Press the power button to turn on the device. The default setting is setting 0, and the digital display flashes. If there is no operation for 5 seconds, it will automatically shut off.
- Then, press the "+" or "-" buttons to change from setting 0 to setting 6. Sequential presses will cycle through the heat options ("-" from 6 - 5 - 3 - 2 - 1 or "+" for 1 - 2 - 3 - 4 - 5 - 6). After initial selection setting 0 will no longer be displayed, and timing sequence will commence.

WARNING! To avoid any skin injury, please use level "4" heat setting for normal use.

WARNING! DO NOT sleep with the control set to the highest setting 6.

WARNING:! The highest temperature setting 6 can be used only for preheat for a maximum of 1hr and is not for continuous operation.

CAUTION: We recommended that only setting 1-2 be selected for whole night use.

NOTE: The default setting for the controller is 0 heat setting.

LOCATION AND SAFE USE OF YOUR HEATED THROW (continued)

Caution: First Time Use

For first time use it is recommended that the throw be set on 6 setting for 2 hours using as an heated throw. Ignore any initial small odour that may occur with first time use.

For normal use select the desired heat on the controller. **Warning! Do not sleep with the controller set to the higher settings.** Use 6 only to pre heat the heated throw then reduce the heat setting to 2 or 1 Set to OFF before going to sleep or when the heat is no longer required.

Warning! Remember to turn off the controller at the end of use and disconnect from the mains supply, do not leave on indefinitely. There may be a risk of fire.

Warning! For added safety it is recommended that this blanket be used with a residual current safety device (safety switch) with a rated residual operating current not exceeding 30 mA.

IMPORTANT SAFETY INFORMATION



When using electric appliances always observe safety regulations where applicable to reduce the risk of fire, electric shock and personal injury. Always check that the power supply corresponds to the voltage on the rating plate.

Warning. Do not use the heated throw folded. Do not use the heated throw rucked. Avoid creasing the blanket. Do not insert pins into the heated throw. Do not use this heated throw if it is wet or has suffered water splashes.

During use, do not place lots of heavy blankets, heavy items (such as a full laundry basket) or pets on top of it. This can trap heat resulting in overheating and potential damage.

AFTER SALES SUPPORT

  0800 422 274

living & co. 4

IMPORTANT SAFETY INFORMATION (continued)

Warning .This blanket is not recommended to be used on an adjustable bed. If used on an adjustable bed, check that the blanket or cord can not become trapped or rucked, for example in hinges.

Warning. Do not use this heated throw with an infant or child, or any other person insensitive to heat. Do not use with a helpless or incapacitated person or any person suffering from medical illness such as high blood circulation, diabetes or high skin sensitivity.

Warning. Avoid extended use of this heated throw at a high setting. This may result in skin burns.

Avoid creasing the heated throw. Examine the heated throw frequently for signs of wear or damage. If there are such signs or if the appliance has been misused, return it to the supplier prior to any further use.

This heated throw is not intended for medical use in hospitals.

Warning. Do not use this heated throw on or under any waterbed or mechanically adjustable type of bed such as a bunk or sofa bed. Check to ensure that the controller and supply cord cannot become trapped in any bed or bedding. Keep controller outside of the bedding, as much as possible.

Supply

This heated throw must be connected to a suitable 220-240 V ~ 50Hz power supply. If using an extension cord, ensure that the extension cord is of a suitable 7.5-amp power rating. Fully unwind the supply cord when in use as a coiled cord may overheat. **Warning! Always unplug from the mains supply when not in use.**

Supply cord and plug.

If the supply cord or controller is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

Children.

This blanket is not to be used by young children unless the controls have been preset by a parent or guardian or unless the child has been adequately instructed on how to operate the controls safely.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

CLEANING

Warning! Before cleaning.

When not in use or before cleaning, always disconnect the blanket from the mains supply.

Detachable Cord.

Disconnect the heat control supply cord from the blanket. To remove, lift the locking flap located on the side and pull outwards.

Cleaning.

Warning! Do not dry clean this heated throw. This may damage the heating element or control. Do not iron this blanket. Do not tumble dry.

Hand Washing.

Immerse the blanket only in lukewarm neutral detergent or mild soapy water solution.

Soak for five minutes, remove and gently squeeze the liquid from the blanket as much as possible (**DO NOT WRING THE BLANKET**). Rinse the blanket only in clean water.

NOTE: DO NOT ALLOW CONTROLLER TO BE IMMERSSED IN ANY LIQUID – DISCONNECT FIRST.

Spot Cleaning.

Sponge the area with a neutral wool detergent or mild soap solution in lukewarm water. Sponge with clean water and dry completely before re-use.

Line Drying.

Drape the blanket over several lines of your clothesline. Do not use pegs to secure. Do not use any appliance such as a hairdryer or heater. Allow the blanket to dry naturally.

Do not tumble dry.

Stretching

The blanket must be stretched back to approximately its original size during the drying process. This is best done while damp. Working from side to side, stretching a strip at a time. This procedure may need to be repeated a few times until fully dry.

Inspect the blanket to ensure that none of the wires have formed loops or become twisted back on themselves.

Note: Holding the blanket up to the light will make it easier to inspect the wires

CLEANING (continued)

Damage check.

Always check that the blanket is in good working order before use. Check the controller, power supply cord and plug regularly for cuts or damage.



Water.

Do not dry clean this blanket. Follow cleaning instructions carefully. Do not immerse the controller or supply cord in water.

Service

Do not attempt to service this blanket. There are no user serviceable parts. If it is faulty in any way, return it to the retailer immediately.

Safety Check

This blanket should be checked annually by a suitably qualified person to ensure its safety and suitability for use. Examine the blanket frequently for signs of damage. If there are such signs or if the blanket has been misused, return it to the supplier prior to any further use.

Store in a safe place

When storing the appliance allow it to cool down before folding. When not in use store your blanket and instruction manual in a safe and dry place. Roll or gently fold the blanket. Do not crease the appliance by placing items on it during storage. Store in a bag for protection. Do not place heavy items on the blanket when storing. Before re-use after storage it is recommended that the blanket is checked by a suitably qualified person to eliminate the risk of fire or electric shock through a damaged blanket.

WARNING! Before reconnecting the heat control cord input plug to the blanket input socket ensure that the input socket attached to the blanket is completely dry.

TECHNICAL SPECIFICATIONS

220-240VAC 50Hz

1 x Heated Throw

Single Detachable Control

Size: 160cm x 120cm

RESPONSIBLE DISPOSAL

At the end of its working life, do not throw this appliance out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area



AFTER SALES SUPPORT

  0800 422 274

living & co. 8



Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products.

We back them up with a 2 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This product is covered by 2 year warranty when accompanied by proof of purchase



AFTER SALES SUPPORT

  **0800 422 274**