

Navigator South Lantern Instructions

**READ ALL INSTRUCTIONS BEFORE FIRST USE.
KEEP THIS MANUAL FOR REFERENCE.**

The lantern can be placed on a flat surface or hung by the folded handle or base clip.

To Operate

Push the on/off button to operate and cycle the 5 modes:

White light Mode	Red Light Mode
1 st Push operates the lantern on low-level (mode 1)	1 st Push operates the lantern with low white light
2 nd Push operates the lantern at mid-level (mode 2)	Push and hold for 3 seconds and the lantern switches to Red light (mode 4)
3 rd Push operates the lantern at high-level (mode 3)	2 nd Push operates the lantern with Red flash (mode 5)
Off	Off

NOTE: The lantern if on one of the modes above is left, the next time the on/off is pushed it will switch off.

Charging

1. Turn off the lantern.
2. Open rear rubber charging cover.
3. Plug the Micro USB plug into the lantern.
4. Plug the USB into a USB port (PC or laptop) / USB wall charger.
5. Charge 6-8 hours.

Note: Red light will flash inside the USB port. Once LED turns solid red it is fully charged.

Warning:

- Do not place near open fires or immerse in water.
- Please use responsible battery disposal at products end of life.
- Do not open, no serviceable parts.
- If the USB charging cable, USB plug or lantern body is damaged DO NOT USE
- Never short circuit the terminal of the battery and the plug of the USB charging cable. It may cause the battery to overheat, resulting in fire or damage of the components.
- Charge the battery every month to maintain battery charge, even if not used.

Customer Service – 0800 422 274