


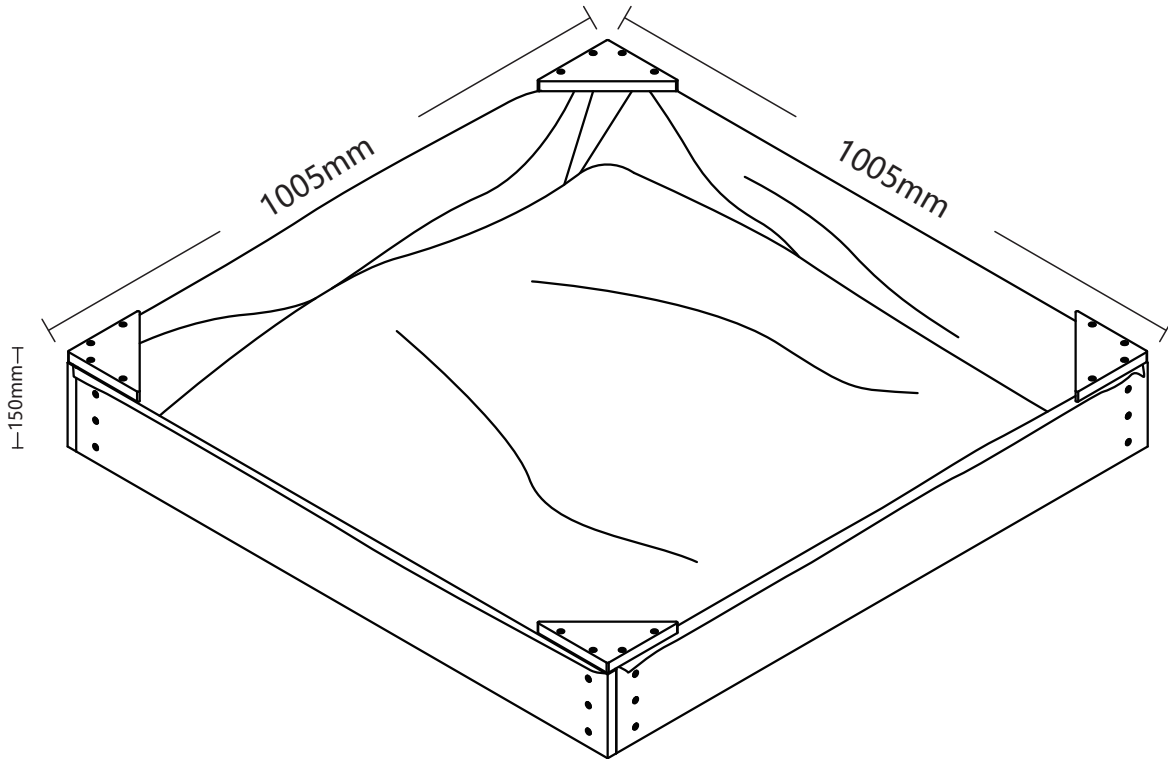

ACTIVE INTENT  
PLAY

3+  
years

# OUTDOOR WOODEN SAND PIT



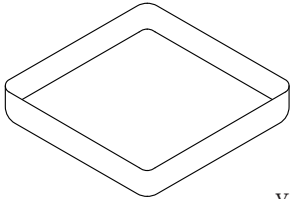
 
 


*This item must be assembled by an adult.*

## SAFETY INFORMATION

• Children must be supervised by an adult while using this sandpit.


## PARTS LIST
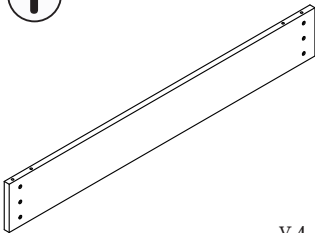
<p>①</p>  <p>X4</p>	<p>②</p>  <p>X4</p>	<p>③</p>  <p>X1</p>
<p>④</p>  <p>X4</p>	<p>⑤</p>  <p>X40</p>	<p>Sand not included, please purchase separately.</p>

# ASSEMBLY INSTRUCTIONS


## Step 1

Screw the four Boards (1) to the Corner Posts (2) using the Woodscrews (5) to form the Frame of the Sandpit.

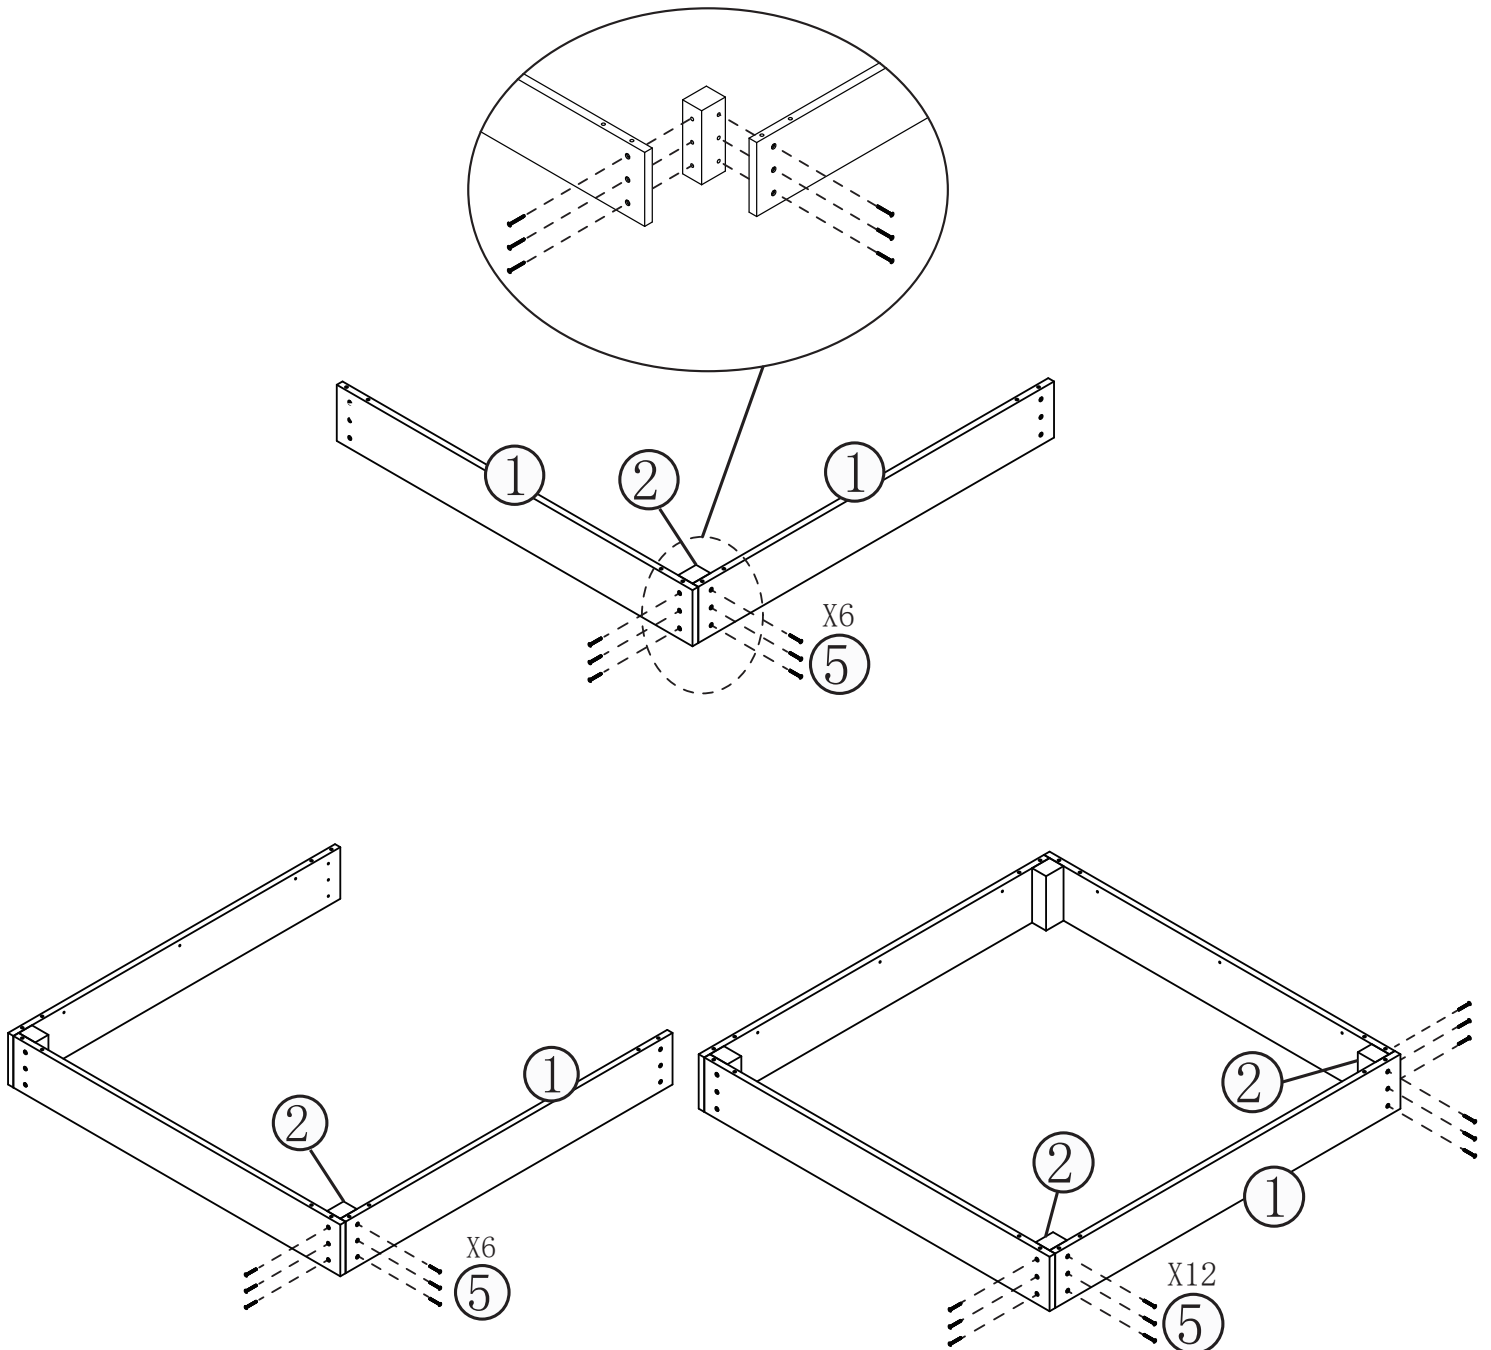


## Step 2

Place the Liner (3) into the frame, with the outer edge over-lapping the top of the Boards.

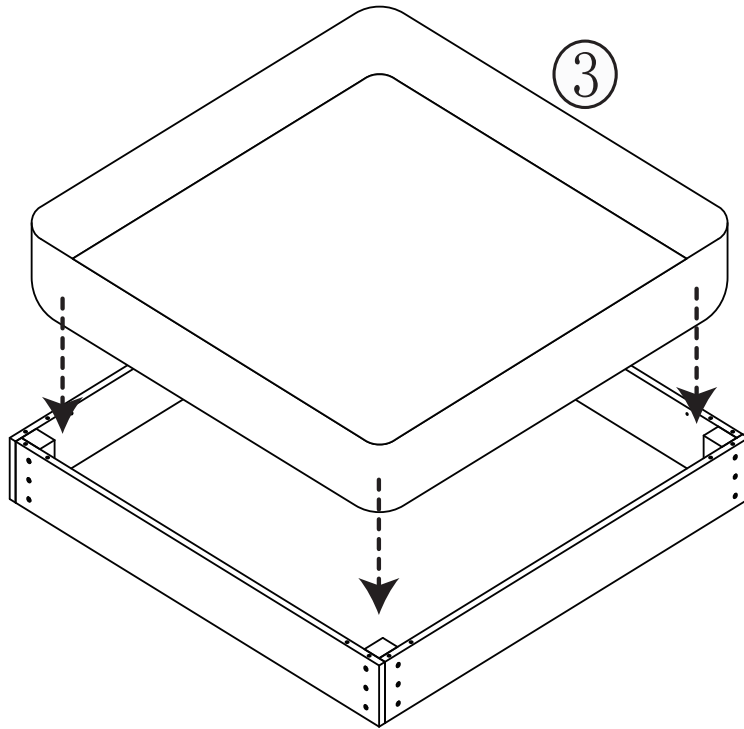

## Step 3

Screw on the four Corner Plates (4) to clamp the Liner in place on the frame, using Woodscrews (5).

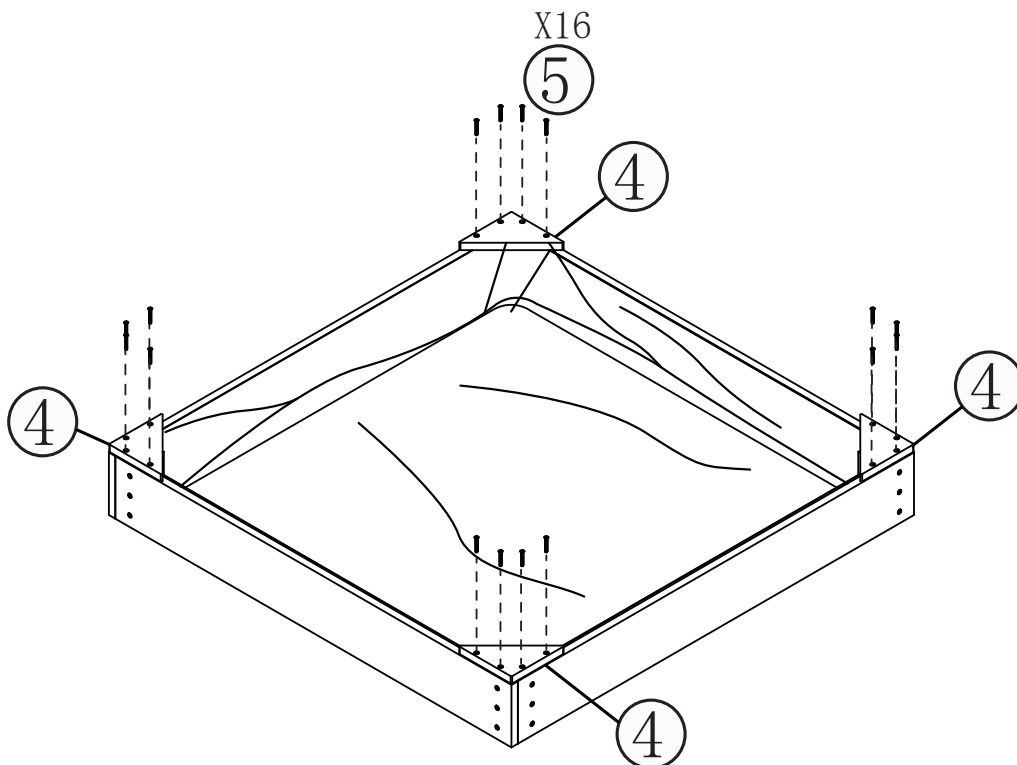



## ACTIVE INTENT PLAY

### Warranty

We pride ourselves on producing a range of quality products that are both packed with features and completely reliable. We are so confident in our products, we back them up with one year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274  
This product is covered by one year warranty  
when accompanied by proof of purchase.