

LIVING & CO[®]

Stick Mixer White 250W



INSTRUCTION MANUAL

MODEL: LSM250W

AFTER SALES SUPPORT

 **NZ** 0800 422 274

Read these instructions carefully before using your stick mixer, and keep it carefully. If you follow the instructions, your stick mixer will provide you with many years of good service.

SAVE THESE INSTRUCTIONS CAREFULLY

IMPORTANT SAFEGUARDS

1. Read all instructions before using.
2. Before using, check that the voltage of wall outlet corresponds to the one shown on the rating plate.
3. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
4. If the supply cord is damaged it must be replaced by the manufacturer or an authorized service agent or a qualified technician in order to avoid a hazard.
5. Unplug from outlet when not in use, before putting on or taking moving component, and before cleaning.
6. Do not let cord hang over edge of table or hot surface.
7. Do not immerse upper part of blender into water as this would give rise to electric shock.
8. Close supervision is necessary when your appliance is being used near children or infirm persons.
9. Ensure fingers are kept well away from moving parts.

10. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper must be used only when the blender is not running.
11. The use of accessory not recommended by the manufacturer may cause injuries to persons.
12. Do not operate the appliance for other than its intended use.
13. Do not use outdoors.
14. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
15. Children should be supervised to ensure that they do not play with the appliance.
16. Be care of potential injury from misuse.
17. Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.
18. Be careful if hot liquid is poured into the food processor or blender as it can be ejected out of the appliance due to a sudden steaming.

19. Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning;

20. Do not allow children to use the blender without supervision.

21. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.

22. This appliance is intended to be used in household and similar applications such as:


- Staff kitchen areas in shops, offices and other working environments;
- Farm houses;
- By clients in hotels, motels and other residential type environments;
- Bed and breakfast type environments.

23. Save these instructions.

24. Never operate the appliance with wet hands.

25. It is recommended to have a residual current device (safety switch) installed by qualified electrician to provide additional safety protection when using all electrical appliances.

KNOW YOUR STICK BLENDER

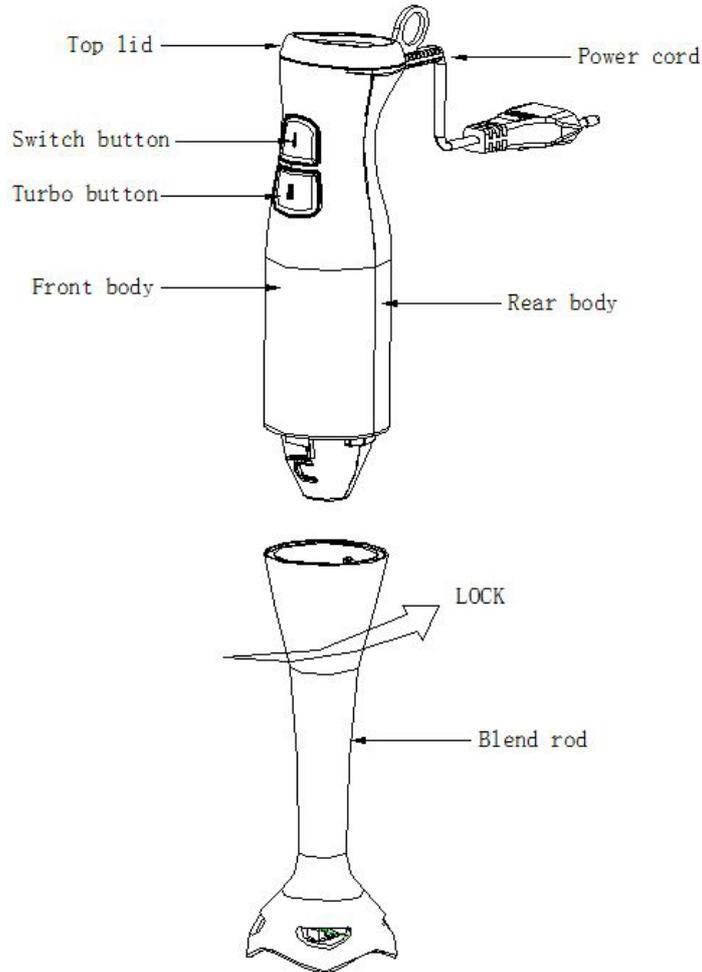

USING YOUR STICK BLENDER

Important: Ensure that the stick blender is unplugged from the power outlet before assembling or removing attachments.

Note: The time running unit without load can't exceed 15s. Max operation duration under high speed per time less than 1 minute. Minimum 3 minutes rest time shall be maintained between two continuous cycles; Proportion of food: 400g carrot and 600g water.

1. Simply plug the stick blender to power outlet.

2. Lower the stick blender into food and depress the speed switch at the top of the motor unit.
3. To stop the stick blender take your fingers off the switch button.
4. The appliance cannot be used for blending hard and dry substance, and cannot be used for breaking ice.
5. When blending vegetable or fruit, usually certain amount of purified water has to be add to facilitate the smooth running of appliance.

CLEANING AND MAINTENANCE

1. Unplug the appliance and remove the chopper lid.
Note: Do not immerse the detachable shaft of the blender and chopper lid in water because overtime the lubrication on the bearings may wash away.
2. Wash the detachable shaft under running water, without the use of abrasive cleaner or detergents. After finishing cleaning the detachable shaft, place it upright so that any water which may have got in, can drain out.
3. Wash the cup and blade in warm soapy water. The cup is not recommended to place in dishwashing machine as the plastic component deteriorated through prolonged use of dishwasher cleaning.
4. Wipe the motor unit with a damp cloth. Never immerse it in water for cleaning as an electric shock may occur.
5. Dry thoroughly.

Caution: Blades are very sharp, handle with care.

For a quick wash up

Between processing tasks, hold the stick blender in the cup half filled with water and turn on for a few seconds.

ENVIRONMENT FRIENDLY DISPOSAL



You can help protect the environment!
Please remember to respect the local regulations:
hand in the non-working electrical equipments to
an appropriate waste disposal center.

LIVING & CO[®]

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with a 1 year warranty. Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274
This Product is covered by 1 year warranty when accompanied by proof of purchase.

LIVING & CO[®]

AFTER SALES SUPPORT
☎ NZ 0800 422 274