

# LIVING & CO<sup>®</sup>

## Induction Cooker



### INSTRUCTION MANUAL

MODEL: SRO8321

---

**AFTER SALES SUPPORT**

 **NZ** 0800 422 274

# CONTENT

|                                |    |
|--------------------------------|----|
| IMPORTANT SAFEGUARDS .....     | 1  |
| Product Introduction .....     | 7  |
| Operation Instructions .....   | 9  |
| Compatible Cookware .....      | 12 |
| Cleaning And Maintenance ..... | 12 |
| Troubleshooting .....          | 13 |
| Environmental protection ..... | 14 |

# IMPORTANT SAFEGUARDS

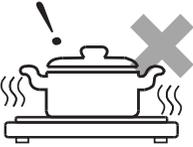
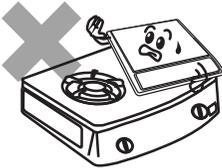
For safety reasons and to avoid damage to the appliance or injuries to people, please abide by all the safety instructions below.

Ignoring safety warnings may result in injuries.

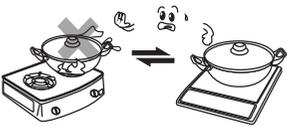
This appliance does not take into consideration the following situations:

- use by children or disabled people without supervision;
- children treating it as a toy.

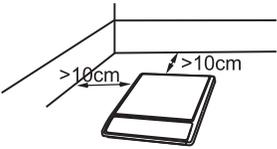
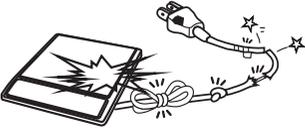
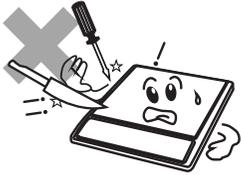
Symbols:  Forbidden  Mandatory  Warning  Attention

|   |   |
|---|---|
|    | <p> Never heat foods in sealed containers, such as compressed products, cans, or coffee pots, to avoid explosion caused by heat expansion.</p>   |
|    | <p> Do not directly rinse this induction cooker under water. Do not spill water or soup into the internal parts of the induction cooker.</p>   |
|   | <p> To avoid affecting product performance and to prevent injury, do not heat empty pots. When in use, do not leave the appliance without supervision for a long time. When leaving the appliance without supervision, make sure there is enough water in the pot.</p> |
|  | <p> To avoid accidents, do not place the induction cooker, when in use, on a gas stove (the magnetic lines can heat the metal parts of the gas stove).</p>   |
|  | <p> Do not heat iron items on the induction cooker heating plate to avoid danger caused by high temperatures.</p>  |

# IMPORTANT SAFEGUARDS

|   |   |
|---|---|
|     | <p>⚠ The utensils provided for the induction cooker can only be used for cooking with it. These cooking utensils cannot be used on both induction cooker and gas stove.</p>                   |
|    | <p>⚠ To avoid injuries such as scalding, do not let children operate the appliance alone.</p>   |
|     | <p>⚠ To avoid danger, do not insert any foreign object, such as iron wire, nor block the air ventilation opening or air entry port.</p>   |
|    | <p>⚠ To avoid danger, do not place paper, aluminium foil, cloth or other unsuitable articles onto the induction cooker heating plate for indirect heating.</p>                                |
|   | <p>⚠ When using the induction cooker, do not put it on any metal platform (such as iron, stainless steel, aluminium), or place a non-metal pad less than 10cm thick on the heating plate.</p> |
|  | <p>⚠ Unplug the power cord from the outlet after use to avoid fire and/or damaging the electronic components, caused by prolonged electrical connection.</p>                                  |
|  | <p>⚠ People with heart pacemakers should consult a doctor. Only use the appliance after confirming that it does not affect the pacemaker.</p>   |

# IMPORTANT SAFEGUARDS

|   |  |
|---|--|
|    | <p>❗ To avoid damage, avoid causing impacts on the heating plate. If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.</p>  |
|     | <p>❗ When using the induction cooker, place it horizontally and allow at least 10cm of free space between the sides and back of the induction cooker and the wall. Do not use the induction cooker in narrow spaces. To avoid hindering release of heat, do not cover the ventilation opening.</p> |
|     | <p>❗ To avoid danger, if the power cord is damaged, have it replaced by agents of the manufacturer, its maintenance department or specialized personnel from a similar department.</p>   |
|   | <p>⚠ Do not touch the cooker plate with sharp Tools, to avoid cracking or damaging the plate. If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.</p>  |
|  | <p>⚠ The cooker cannot be overloaded. Overloading the plate may damage the plastic cover and cooker plate.</p>   |
|   | <p>⚠ Do not use the induction cooker near a gas stove, kerosene stove, gas cooker or in any space with an open fire or an environment with high temperature.</p>   |

# IMPORTANT SAFEGUARDS



⚠ Please use a dedicated and high quality power outlet, with high power rating, equal to or above 10A. Do not use poor quality outlets. Do not share the power outlet with electrical appliances with high power ratings, such as air conditioners, electrical stoves etc. to avoid fires caused by overburdening the outlet.



⚠ When using the induction cooker or after use, please keep it clean. Protect the induction cooker from bugs, dust and humidity. Avoid letting cockroaches etc. fall into the internal parts of the induction cooker and causing a short circuit of the electrical board. When not in use for a long period, please clean it and put it into a plastic bag to store it.



⚠ Metal objects, such as knives, forks, spoons and lids, should not be put on the surface of the cooking area, since they can become heated.



⚠ Do not use the induction cooker by putting it onto a carpet, tablecloth or thin paper to avoid blocking the air inlet opening or air outlet opening, which results in influencing heat emission.

# IMPORTANT SAFEGUARDS



**⚠** Always clean the induction cooker to prevent mess from getting into the fan, which could influence the normal operation of the appliance.



When operating the appliance or after moving the pot, the cooking area will remain hot for a period of time. Do not touch it, be careful of scalding caused by the high temperature.

## ! Mandatory

- This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, office and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Never have the induction cooker to work without food inside, otherwise its operational performance may be affected and danger may happen.

## IMPORTANT SAFEGUARDS

### Warning

- We suggest that you should periodically check that there are no object (glass, paper, etc.) that could obstruct the inlet under your induction cooker.
- Keep electrical appliance out of reach from children or inform person. Do not let them use the appliances without supervision.
- Children should be supervised to ensure that they do not play with the appliance.
- The instructions shall state that appliances are not intended to be operated by means of an external timer or separate remote-control system.
- This appliance is for household use only. Do not use outdoors.  
Please turn off and unplug the appliance before cleaning, maintenance or relocation and whenever it is not in use.

## Product Introduction

The induction cooker is able to meet various kinds of cooking demands by electromagnetic heating, high thermal efficiency, is safe and reliable, easy to clean.

## Technical Data of the Product

| Model No. | Rated voltage     | Rated power | Dimension     | Weight |
|-----------|-------------------|-------------|---------------|--------|
| SRO8321   | 220-240V~ 50/60Hz | 2000W       | 350X280X68 mm | 2.8 kg |

## Product Fiche

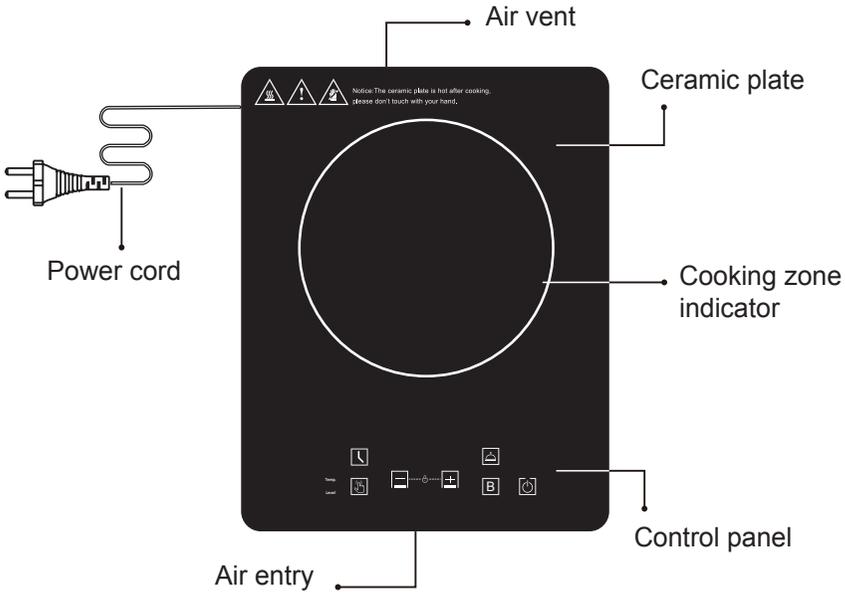
|   | Symbol              | Value                  | Unit  |
|---|---------------------|------------------------|-------|
| Model   |                     | SRO8321                |       |
| Type of hob   |                     | Freestanding           |       |
| Number of cooking zones and/or areas  |                     | 1                      |       |
| Heating technology(induction cooking zones and cooking areas, radiant cooking zones, solid plates)                                |                     | Induction cooking zone |       |
| For circular cooking zones or area: diameter of useful surface area per electric heated cooking zone, rounded to the nearest 5 mm | Ø                   | 19.5                   | cm    |
| Energy consumption per cooking zone or area calculated per kg   | EC electric cooking | 199.5                  | Wh/kg |
| Energy consumption for the hob calculated per kg  | EC electric hob     | 199.5                  | Wh/kg |

It is recommended to select power setting level 2 to achieve maximum energy efficiency.

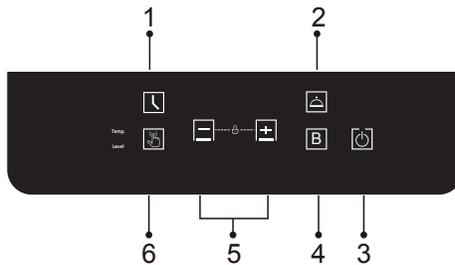
The energy consumption of a domestic electric hob (EC electric hob) is measured in Wh per kg of water heated in a normalised measurement (Wh/kg) considering all cookware pieces under standardised test conditions and rounded to the first decimal place. Standard EN 60350-2:2013 was used as reference for the measurement and calculation.

# Product Introduction

## Product Sketch Map



## Control Panel



- |               |              |
|---------------|--------------|
| 1. Timer      | 2. Keep warm |
| 3. ON/STANDBY | 4. Boost     |
| 5. Lock       | 6. Function  |

## Product Introduction

### Before using New Induction cooker

- Read this guide, taking special note of the "Safety Warnings" section.
- Remove any protective film that may still be on your ceramic plate.

### Using the Touch Controls

- The controls respond to touch, so you don't need to apply any pressure.
- Use the ball of your finger, not its tip.
- You will hear a beep each time a touch is registered.
- Make sure the controls are always clean, dry, and that there is no object (e.g. a utensil or a cloth) covering them.

Even a thin film of water may make the controls difficult to operate.



## Operation Instructions

### Put the pot on the ceramic plate

- Make sure the air vents are not blocked and keep utensils away from the immediate surrounds of the ceramic plate.
- Make sure the cookware which has food or liquid is placed in the center of ceramic plate.

### Plug in

- After the power supply is connected, a beep will be heard. The display shows "L", indicating that the induction cooker is in standby mode.

## Operation Instructions

### Turn on

- After pressing the “ON/STANDBY” button, the induction cooker is ready for heating. Press the “Function” button, the induction cooker enters heating mode.
- After pressing the “ON/STANDBY” button, if no function button is pressed for 10 seconds, the induction cooker will switch off automatically.
- After pressing the function button, if there is no proper pot on the ceramic plate, the induction cooker will not heat up and the alarm will sound to indicate that a pot is required. One minute later, it will switch off automatically.

### Function

- After switching on the induction cooker, press “Function” button to enter the temperature or level mode.
- You can adjust the power level by pressing “+” or “-” button. You can adjust the temperature by pressing “+” or “-” button.

### Timer

- Press the “Timer” button to enter the timer mode. When the timer indicator lights up and the numbers blink on the display, press the “+” or “-” button to adjust the time duration. Adjustable timer from 1 minute to 3 hours.
- When the adjustment is finished, the number on the display will be shown after blinking for several seconds. The induction cooker starts counting down.
- When the counting down is over, the induction cooker automatically stops heating and switches off.
- The induction cooker will shut down when the default timer is reached unless the user sets the timer himself.

## Operation Instructions

### Keep Warm

- Press the “Keep warm” button to maintain warmth. Under this mode, the induction cooker heats the ingredients with gentle power to maintain a certain temperature inside the pot.

#### **Note:**

Under this mode, the power cannot be adjusted.

### Boost

- The Boost button allows obtaining directly the highest power level. By pressing again the Boost button the appliance will go back to the power of origin.

### How To Lock

- Press the “+” and “-” button to start lock function. The lock indicator lights up. Now only the “ON/STANDBY” button can be used to switch off the induction cooker, all the other operations are forbidden.
- Press the “+” and “-” button for 3 seconds to quit the lock function. The lock indicator turns off.

### Switch Off

- When the operating time is over, the induction cooker switches off automatically.
- Press the “ON/STANDBY” button to turn off the appliance.

#### **Note:**

Do not touch the surface of the ceramic while “H” is displayed, it means the temperature high. While “L” is displayed, it means the temperature low.

## Compatible Cookware

|   |   |   |   |
|---|---|---|---|
| Iron oil frying pan   | Stainless steel pot   | Iron pan  | Iron kettle   |
|   |  |  |  |
| Enamel stainless steel kettle   | Enamel cooking utensil  | Iron plate  |   |
|  |  |  |   |

- Requirement for pot materials: containing magnetic inducting materials.
- Shape requirement: flat bottom, with the diameter more than 15 cm and less than 20 cm.
- After the first use, some white spots would appear at the bottom of the pot. This is normal.
- Please pour some vinegar into the pot, heat it at about 60-80 °C, then wipe the spots away with brush.
- Incompatible pots material: glass, ceramic, aluminium, copper and other non magnetic material.
- If the pot removed, the induction cooker will stop heating immediately. After the buzzer sounds for 1 minute, it will go into standby mode automatically.

## Cleaning And Maintenance

- Before cleaning, please switch off the appliance first and then disconnect the power plug from the power outlet. Wait till the cooker plate of the induction cooker is not hot and start cleaning.
- After using the induction cooker for a long time, the opening of air inlet/air outlet will pile up with dust or other dirt, please wipe it with a soft dry cloth. Dust in the air inlet and outlet can be cleaned by using a soft brush or a mini vacuum cleaner.

### Note:

Please do not rinse it with water.

## Cleaning And Maintenance

- For oil spots on the cooker plate, wipe the cooker plate by using a soft moist cloth with a little tooth paste or mild detergent. And then use a soft moist cloth to wipe it until no stain remains.
- When not using it for a long time, please disconnect the power plug from the power outlet and protect the induction cooker from any dust or bugs.

## Troubleshooting

| Abnormalities   |                   | Key checking points and trouble shooting  |
|---|-------------------|---|
| After plugging in the power cord and pressing the e “ON/STANDBY” button, the indicator and display do not light up. |                   | <ul style="list-style-type: none"> <li>• Is the power plug properly connected?</li> <li>• Is the switch, power outlet, fuse or power cord damaged?</li> </ul>   |
| The “ON/STANDBY” indicator lights up and the display works normally, but heating does not start.                    |                   | <ul style="list-style-type: none"> <li>• Is the pot material proper?</li> <li>• Is the appliance in a “Preset” working status?</li> <li>• For other causes, please take the appliance to a repairing and maintenance site to be fixed.</li> </ul>   |
| Heating suddenly stops during the process.  |                   | <ul style="list-style-type: none"> <li>• Is the temperature of the oil too high when frying dishes?</li> <li>• Is the temperature of the surroundings very high?</li> <li>• Is the air inlet or air outlet of the induction cooker blocked?</li> <li>• Is the default heating time of the induction cooker over?</li> <li>• The self-safety protection of the induction cooker starts, wait for several minutes and connect power to use it.</li> </ul> |
| Code of failure   | E3 E6             | <ul style="list-style-type: none"> <li>• Wait a moment and press the “ON/STANDBY” button when the temperature of the hotplate becomes normal, the induction hotplate will operate as usual.</li> </ul>  |
|   | E7 E8             | <ul style="list-style-type: none"> <li>• Turn off the hotplate, when the voltage becomes normal, and then turn on the hotplate, it will operate as usual.</li> </ul>  |
|   | E1 E2 E4<br>E5 Eb | <ul style="list-style-type: none"> <li>• Please contact the special maintenance department.</li> </ul>  |

### Emergency

During using, if there are some abnormal cases, please unplug immediately and disconnect power.

For any failure of the product, please contact the special maintenance department or the customer service center.

## Environmental protection

### Responsible Disposal

At the end of its working life, do not throw this product out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.



# LIVING & CO<sup>®</sup>

## Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with a 3 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This Product is covered by 3 year warranty when accompanied by proof of purchase.