

LIVING & CO[®]

VACUUM CLEANER



Instruction Manual

LUVC700R

AFTER SALES SUPPORT

  0800 422 274

Contents

- 03 Important Safety Instruction
- 05 Product Overview
- 06 INSTRUCTIONS
- 08 CLEANING AND MAINTENANCE
- 10 Other Useful Information
- 11 TROUBLESHOOTING
- 11 Changing the Drive Belt

Important Safety Instruction

IMPORTANT SAFETY INSTRUCTIONS READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed reduce the risk of fire, electric shock and injury when correctly adhered to. Keep the manual in a safe place for future reference, along with the completed warranty card, purchase receipt and carton.

Always follow basic safety precautions and accident prevention measures when using an electrical appliance, including the following:

READ ALL INSTRUCTIONS


1. Before turning on, ensure the electrical voltage and frequency of the circuit corresponds to those indicated on the rating label.
2. Do not leave the vacuum cleaner when plugged in. Unplug from outlet when not in use and before cleaning or servicing.
3. Do not use outdoors or on wet surfaces.
4. Young children should be supervised to ensure they do not play with the appliance.
5. Do not insert any objects into the appliance.
6. Use only as described in this manual, use only manufacturers recommended attachments.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
8. Do not pull or carry by cord, use cord as a handle, close a door on cord or pull cord around sharp edges or corners. Do not run the vacuum cleaner over cord.
9. Keep cord away from heated surfaces.
10. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
11. To reduce the risk of electrocution never operate the product with wet hands, submerge in water or spill liquids into the product.
12. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
13. Turn off all controls before unplugging.
14. Do not use to vacuum flammable or combustible liquids, such as gasoline, matches, or use in areas where they may be present.
15. Do not vacuum anything that is burning or smoking, such as cigarettes, matches, or hot ashes.

16. Do not use without the filter in place.
17. This appliance is intended for normal household use only.
18. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety;
20. Children should be supervised to ensure that they do not play with the appliance.
21. This Appliance should not be used by children or people who are physically challenged.
22. This appliance is not a toy, and if not used in the correct manner, can lead to unnecessary damage or failure to perform.

WARNING!

- Do not run the appliance over the power cable.
- Do not use the appliance to pick up burning or hot objects (e.g. coal, ash, cigarettes etc) of any kind.
- Do not use the appliance to pick up any liquids or use on wet surfaces.
- Do not cover the appliance or restrict air vents.
- Do not use the appliance to pick up sharp objects (e.g. pins, nails, tacks, staples etc) or string.


Product Overview

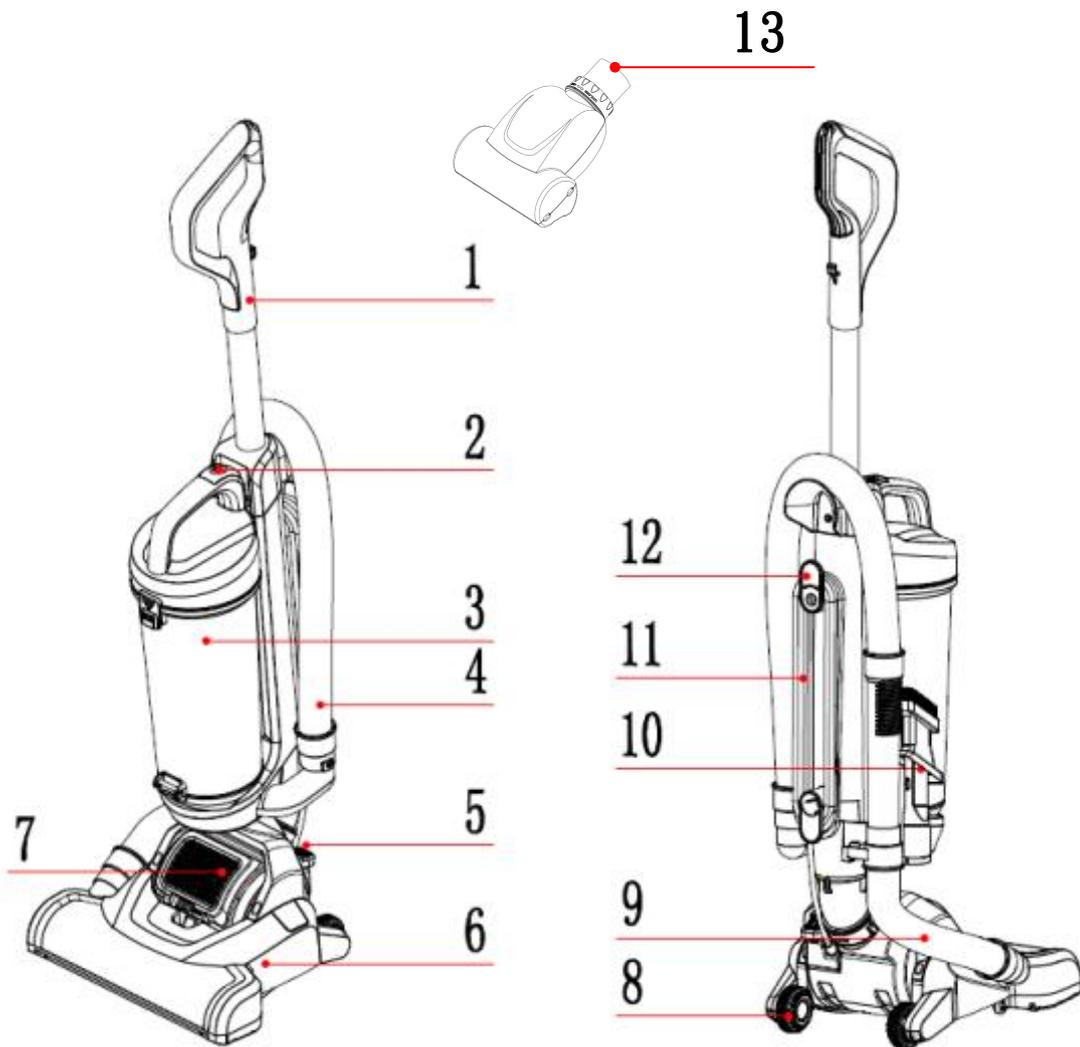


1	Handle	8	Wheel
2	Dust cup release button	9	Brush hose
3	Dust cup	10	3 in 1 brush
4	Handle hose	11	Power cord
5	Switch pedal	12	Power cord holder
6	Brush assembly	13	Turbo brush
7	Air outlet plate		

INSTRUCTIONS


Assembling your upright

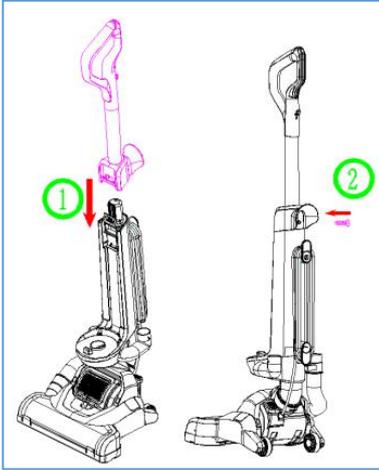


Insert the handle into the body, fasten the screw into body through the handle.

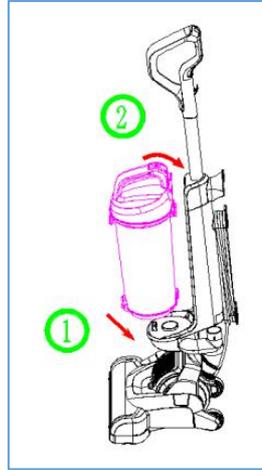

Place the dust container onto the machine and push until it clicks into place.

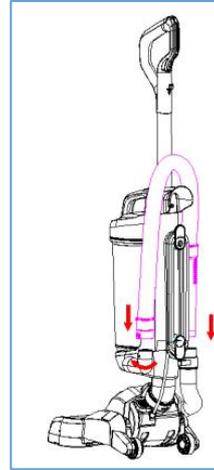


Insert the handle hose end into the connector hose and rotate the joint clockwise. Then insert the handle onto the other hose of the body.

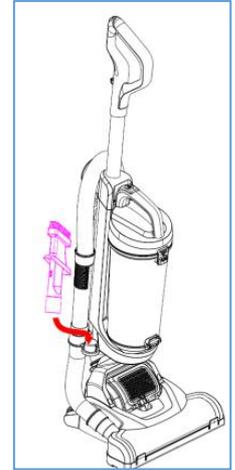


Insert the crevice tool onto the machine.


How to use

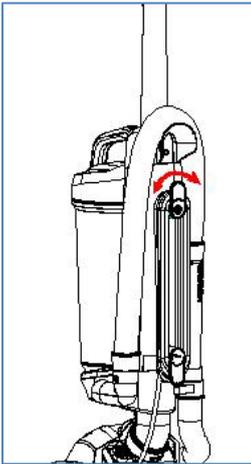


Twist the quick release cord hook to release the power cord

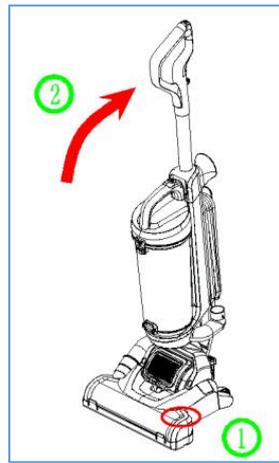

Hold down the brush cover with your foot and push back on the handle.

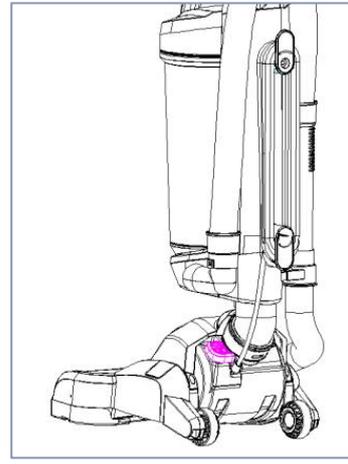


Plug in your machine and push ON/OFF button to switch on.

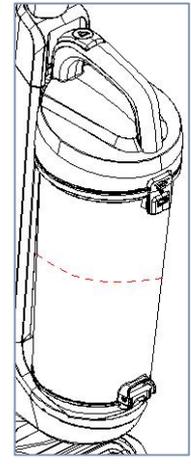


Do not over fill the dirt container to avoid clogging your filter.


Using the Turbo brush

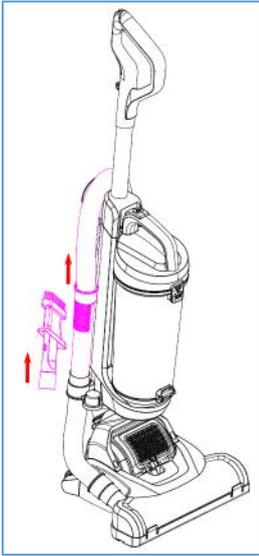

Remove hose handle and 3 in 1 brush from the machine.

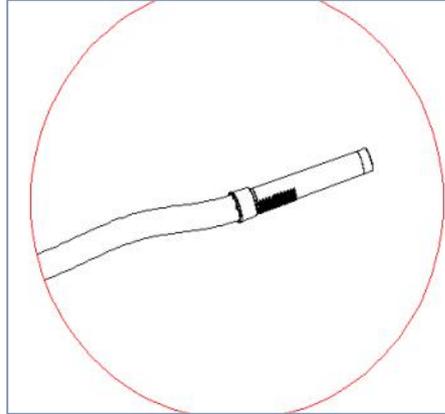

The handle hose can be used directly from the machine

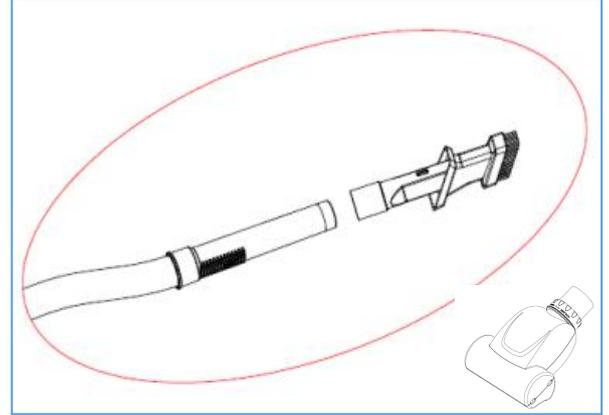


Or you can insert the 3 in 1 brush or the turbo brush into the hose handle.

Using the Hard Floor Adaptor

Apply the Hard Floor Adaptor for optimum results on hard floors. The Hard Floor Adaptor can be used on any floor setting.


1. Place the vacuum cleaner on its back exposing the brush bar.
2. Align the Hard Floor Adaptor with the base of the vacuum cleaner, push until its clicks into place

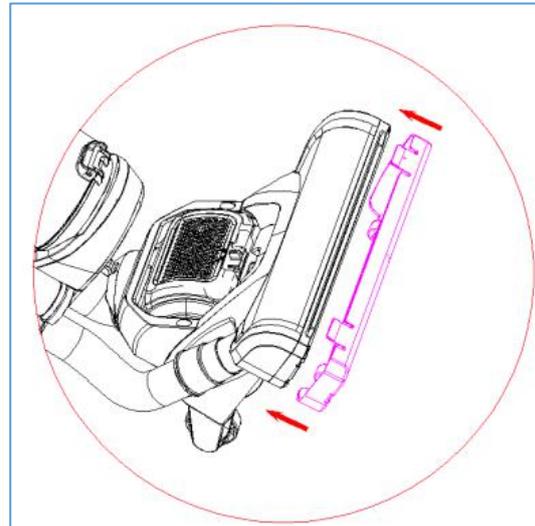


CLEANING AND MAINTENANCE

Always switch off the appliance and unplug from the mains socket before carrying out any maintenance or cleaning. Clean the outside of the appliance with a slightly damp cloth. Dry thoroughly before use.


Emptying and cleaning the dust cup

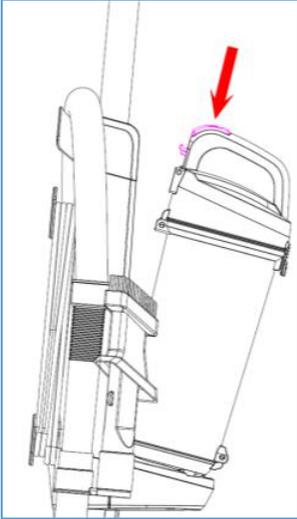

Press the dust container release button to remove the dust container.

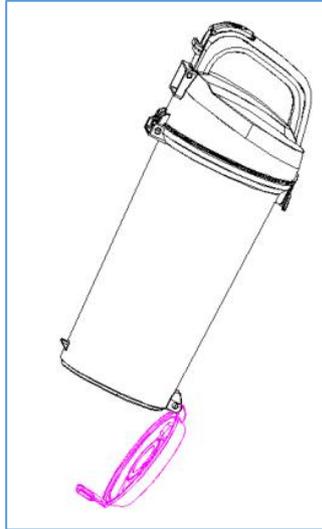


Hold the dust container over a bin and press the lock on the bottom of the dirt container, allowing the dust to fall out.

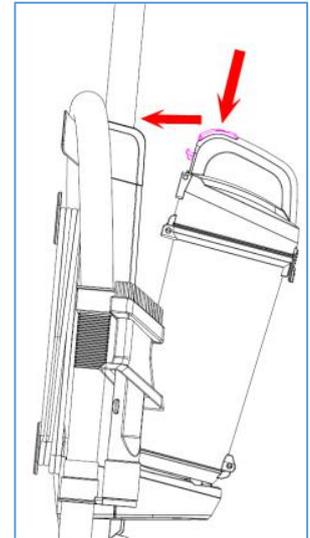


Close the base of the dust container, align the dust container base back onto the machine and push until it clicks back into place.

Cleaning the Dust Filter (1)

Remove the dust cup as per above before the following instructions

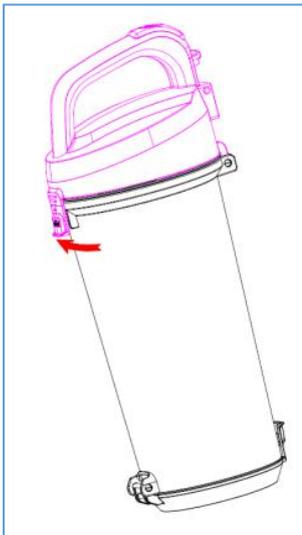


Pull the dust handle lock to open the filter cover.

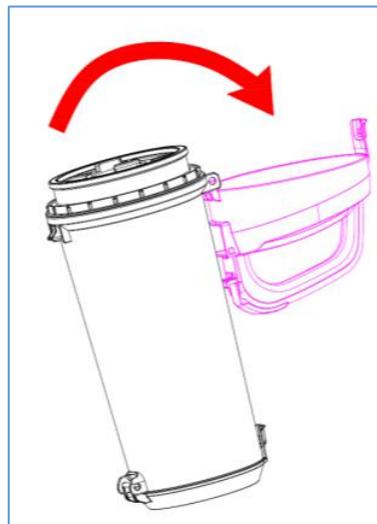


Turn the dust handle to remove.




Tap the filter to remove the dust cup.

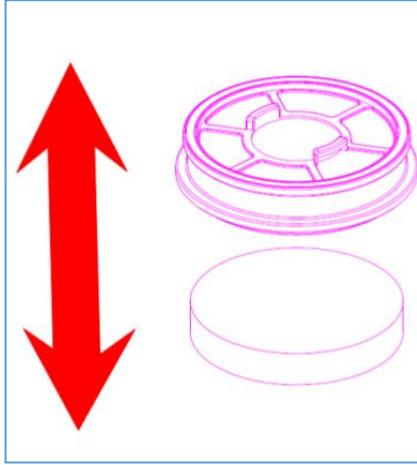


Tap the filter Holder to remove the inner filter.

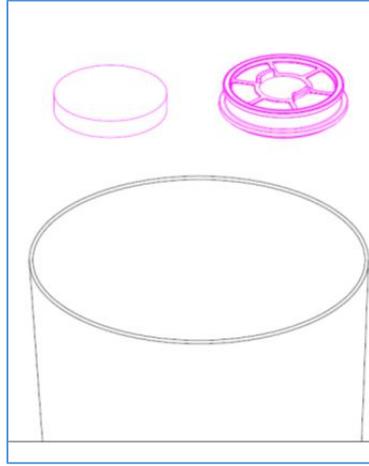

Tap the filter over a bin to release any dirt and dust. Note this should be performed in a ventilated area.

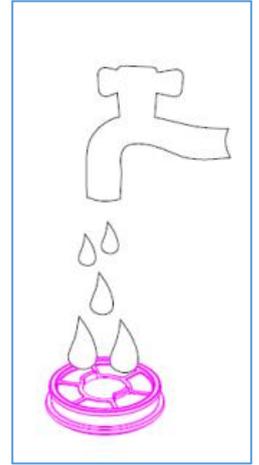


Wash the filter and the filter holder under running water(40°C max)

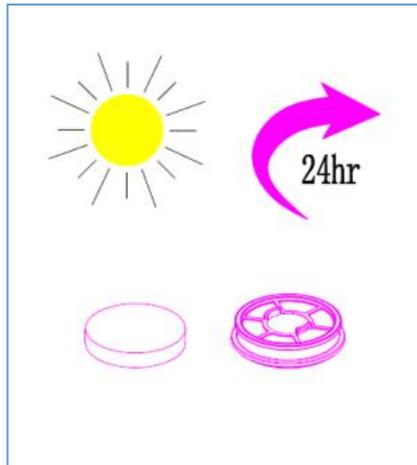


Leave to fully dry for a least 24 hours before placing back in the machine

Cleaning the Dust Filter (2)


Remove the dust cup as per instructions before this step:

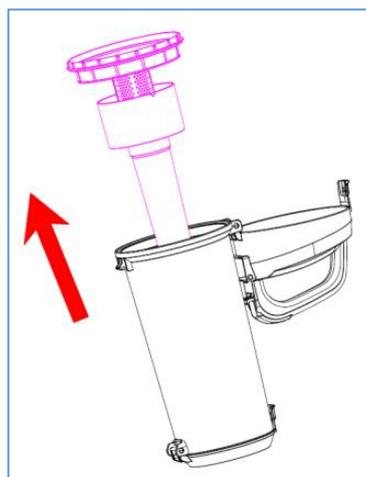


Empty the dust container over a bin to remove the contents.

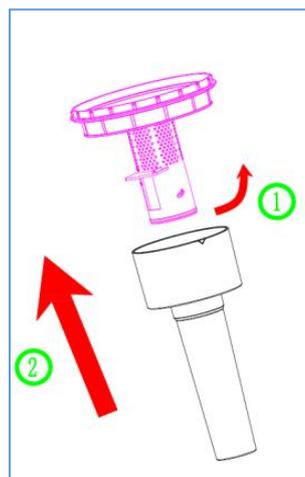

Turn the dust filter and hold, then tap it to remove.

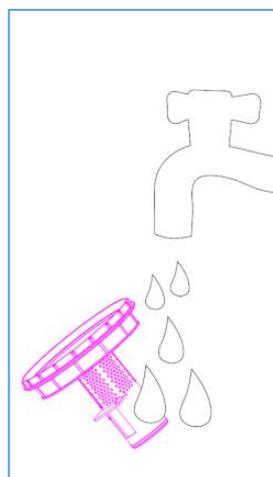

wash the dust filter under running water.

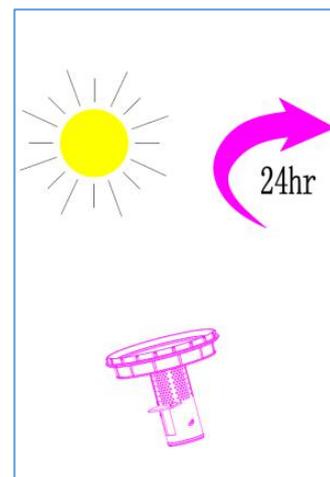

Leave to fully dry for a least 24hours before placing back into the machine

Other Useful Information

Note:

The filter cannot be cleaned in the washing machine. It will reduce the suction power and damage the motor if you use a wet filter.

Power cord rewinding

When not in use, unplug the appliance from the mains socket and wind the power cord around the power cord caddy at the rear of the machine.

TROUBLESHOOTING

Please check the following details before you have your appliance repaired by an authorised servicing agent.

Problem	Possible Cause	Possible Solution
Vacuum cleaner does not work.	<ol style="list-style-type: none"> 1. Check if the power plug is firmly inserted into the power outlet. 2. Check if the power switch of the appliance is on. 	<ol style="list-style-type: none"> 1. Insert the plug back into the power outlet and ensure it is switched on. 2. Then turn the vacuum cleaner power switch on.
Suction power becomes weak	<ol style="list-style-type: none"> 1. Check if the hose, floor brush or tube is clogged or damaged 2. Check if the dust cup is full. 3. Check if the filter is clogged and if the tube is correctly attached. 	<ol style="list-style-type: none"> 1. Immediately remove the obstruction. 2. Empty the dust cup. 3. Clean the filter or reassemble the tubes
No suction power regulation	The suction power regulation device may be faulty	Restart the appliance several times. If it still does not work, contact an authorised servicing agent.

Changing the Drive Belt

Sluggish speed and loss of suction may be caused by a worn or slack belt. A spare belt is provided. DO NOT replace this components yourself unless you are confident that you can carry out this procedure satisfactorily.

Make sure the cleaner is switched off and unplugged from the mains before you start work. Protect the work surface if necessary.

You need a No2 Phillips screwdriver to carry out this procedure.

Stage 1. Remove the Cover Plate

Remove the Dust Cup.

Angle the cleaner fully back.



Turn the cleaner over and place it on a stout work bench

The cover plate is attached to the cleaner with six screws.

There are identified below (you can only access the centre screw by first lifting up the deflection plate).

1: Remove all six screws and keep them safe

2: Ease the cover plate off to expose the brush and roller

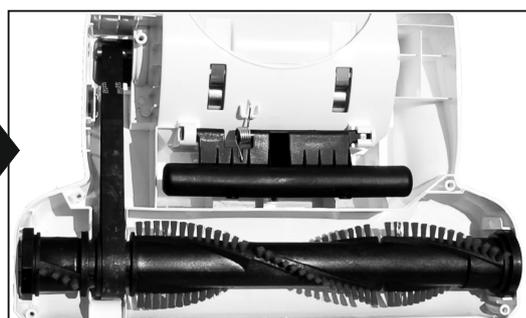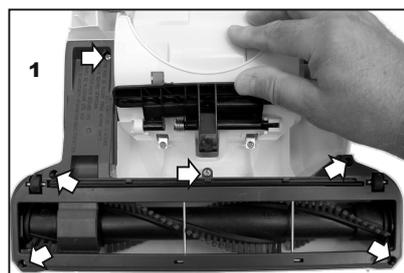


Stage 2. Remove the Brush

Ease the Right end of the brush out of its bearing.

Repeat for the Left edge.

Now lift out the brush with both hands. Be careful as the belt is still under tension.

Pull out the brush from the belt.

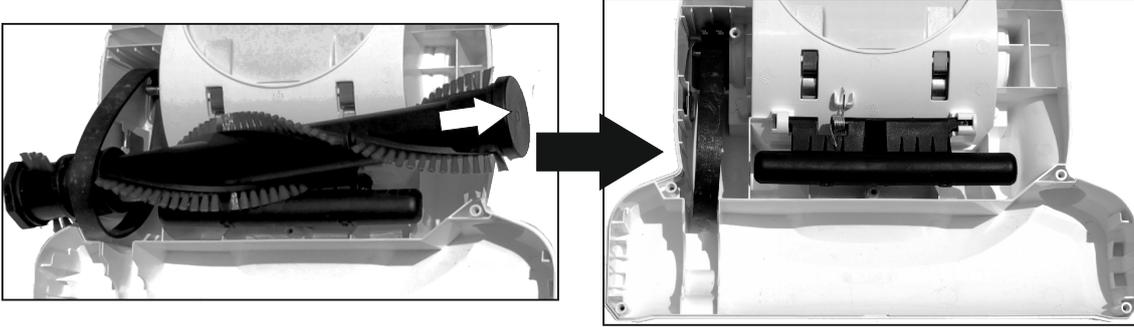


Stage 3. Remove the Belt

Inspect the belt for wear. If the inside of the belt is very shiny but otherwise unworn and free from nicks or tears, you may be able to extend its useful life by turning it inside out.

If you are not replacing the belt, clean it carefully with a dry cloth to remove any residue but do not remove the belt..

When you are removing or replacing the belt, twist the belt on its side and slide the edge of the belt around the end of the spindle.

(You may find it easier to cut the belt off with a pair of sharp scissors.)

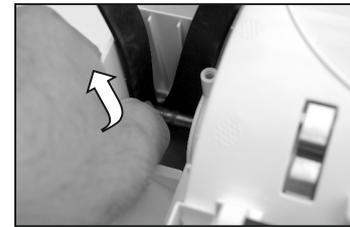


Stage 4. Replace the belt

Manoeuvre the belt over the spindle, straighten it out and lay the belt flat on the spindle.

Thread the brush through the belt.

Position the belt over the convex section of the brush . Make sure the belt is not twisted

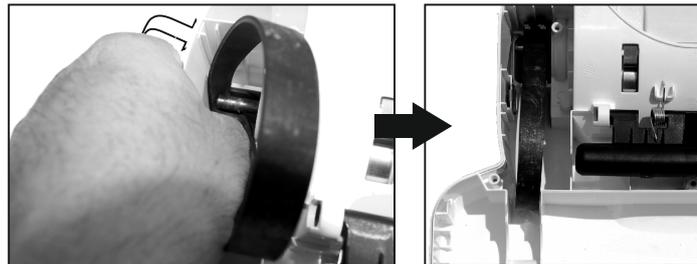

Stage 5. Replace the brush


Insert the brush into the belt.

A: Hold the brush in both hands. Pull the brush towards you and partially insert the left hand side bearing of the brush into its socket with your thumb. (This will place the belt under tension, so you may have to use moderate pulling force.)

B: Align the Right Hand side of the Brush over the Bearing and pressthe brush into place.

Press sides of the brush fully home.

Finally, rotate the brush by hand to ensure that the mechanism moves freely and that the belt does not foul the guides and is central on the motor spindle.

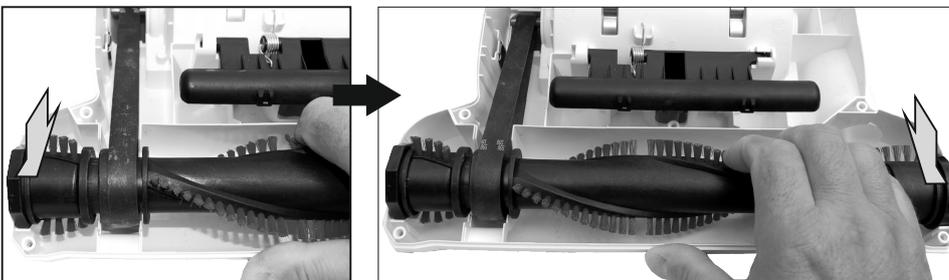


Stage 6. Re-assembly

Rotate the brush by hand to ensure that the mechanism moves freely and that the belt does not foul the guides and is central on the motor spindle.

Now replace the cover plate .

Place the cover plate into position and press the plate to the cleaner body all round to ensure a good fit. Screw the plate to the cleaner body. Remember the screw under the deflection plate.

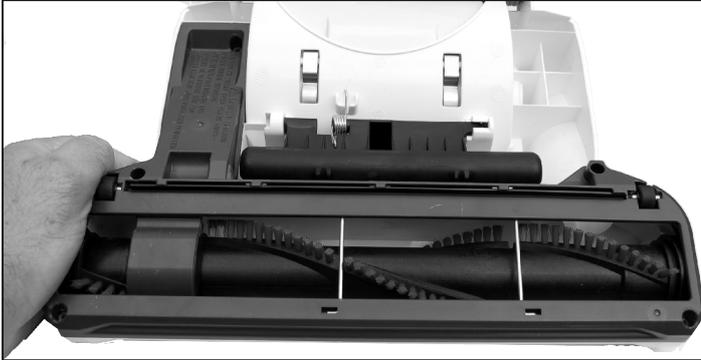

Before using the cleaner, switch it on and confirm that the brush rotates freely and that the brush height mechanism operates properly

Technical Specifications

220-240V 50/60Hz 900W

Dust canister capacity: 2L

Customer Service Number: 0800 422 274

MON – FRI: 8AM – 5PM

SAT – SUN: 9AM – 4PM

Responsible disposal

At the end of its working life, do not throw this appliance out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.



LIVING & CO[®]

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with a 1 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This Product is covered by 1 year warranty when accompanied by proof of purchase.

IM Version 1.0 - September 2017