



**VEON™**

# USER MANUAL

**VN40E202019**  
40" FHD LED LCD TELEVISION

**freeview**  
LIVE TV

for UHF Aerial



To obtain the best performance and safety, please read this manual carefully.  
Please keep this manual for future reference.

# Content

Content .....	2
Preparation .....	3
Warning and Precaution .....	4
TV Control Button .....	7
Terminal Connection .....	8
Remote Control Function .....	9
Basic Operations .....	10
Main Menu .....	11-12
Menu Operation .....	11
CHANNEL .....	11
PICTURE .....	11
SOUND .....	12
TIME .....	12
OPTION .....	12
LOCK .....	12
Media Player .....	13-15
Media Operation .....	13
Gentle Reminder .....	13
Media Control Bar .....	14
Troubleshooting .....	16
Specifications .....	17
License .....	17

 
 
 
 
*Note:*

- 1. The graphics in this manual are only for reference.*
- 2. Your TV's OSD may be slightly different from that shown in this manual.*
- 3. The information in this document is subject to change without notice. The manufacturer accepts no liability for damage resulting directly or indirectly from faults, incompleteness or discrepancies between the user manual and the product described.*
- 4. In dry environment due to static electricity, the product may restart and return to the main OSD interface, USB player interface or the previous source mode. It is normal and please continue to operate the TV as you will.*

# Preparation

## Unpacking and Installation


*Note: The pictures are only for reference.*

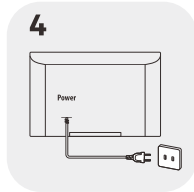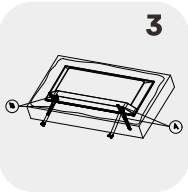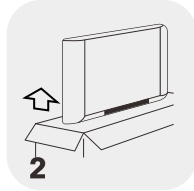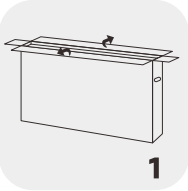

1. Open the package.
2. Take out the TV.
3. Install the TV stands.
4. Connect the power cord.

## Standard Accessories

 *Note: The pictures are only for reference.*

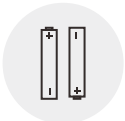

Batteries/2



Remote Control



Base Stands/2



Screws/4



User Manual

# Warning and Precaution

Read all of the instructions before operating the set.  
Keep these instructions well for later use.


## Important Safety Instructions

- Read these instructions – All the safety and operating instructions should be read before this product is operated.
  - Keep these instructions – The safety and operating instructions should be retained for future reference.
  - Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
  - Follow all instructions – All operating and use instructions should be followed.
  - Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
  - Clean only with dry cloth.
  - Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
  - Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
  - Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
  - Unplug the apparatus during lightning storms or when unused for long periods of time.
  - Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
  - Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions at open site. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
  - Please refer the information on rear enclosure for electrical and safety information before installing or operating the apparatus.
  - To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
  - The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
  - For the terminals marked with symbol of “ $\frac{1}{2}$ ” may be of sufficient magnitude to constitute a risk of electric shock. The external wiring connected to the terminals requires installation by an instructed person or the used of ready-made leads or cords.
  - To prevent injury, use the stand/wall-mount bracket to securely install this apparatus on the table/wall in accordance with the installation instructions.
  - Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
  - The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
  - Excessive sound pressure from earphones and headphones can cause hearing loss. Listening to music at high volume levels and for extended durations can damage one's hearing. In order to reduce the risk of damage to hearing, one should lower the volume to a safe, comfortable level, and reduce the amount of time listening at high levels.
  - The appliance coupler is used as disconnect device, the disconnect device shall remain readily operable.
  - When not in use and during movement, please take care of the power cordset, e.g. tie up the power cordset with cable tie or something like that. It shall be free from sharp edges and the like that can cause abrasion of the power cordset. When put into use again, please make sure the power cordset being not damaged. If any damages found, please look for the service person to replace the power cordset specified by the manufacturer or have the same characteristics as the original one.

# Warning and Precaution

- Attention should be drawn to environmental aspects of battery disposal.

- No naked flame sources, such as lighted candles, should be placed on the apparatus. To prevent the spread of fire, keep candles or other open flames away from the apparatus at all times.

- If the apparatus have the symbol  in its rating label and the power cord has two pins, it means that the equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.(Only for Class II appliance)

- The following information are recommended to be included as far as applicable where applicable:

~ Refers to alternating current(AC).

— Refers to direct current(DC).

 Refers to ClassII equipment.

 Refers to stand-by.

I Refers to power ON.

 Refers to dangerous voltage.

- Warning for Apparatus containing COIN / BUTTON CELL BATTERIES (Below instruction only used for the apparatus containing a user-replaceable coin/button cell battery)

WARNING:

Do not ingest the battery, Chemical Burn Hazard (The remote control supplied with) this product contains a coin/button cell battery.If the coin/button cell battery is swallowed, it can cause severe Internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children.

If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

- WEEE Directive



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



 
- This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

- To reduce the risk of electric shock. Do not remove cover (or back). No user serviceable parts inside. Refer to qualified service personnel.

- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

## Positioning the TV

- Install Display on solid horizontal surface such as a table or desk. For ventilation, leave a space of at least 10cm free all around the set. To prevent any fault and unsafe situations, please do not place any objects on top of the set. This apparatus can be used in tropical and/or moderate climates. Fixing the rear of enclosure to wall. Below picture is different from actual item, thus it is only for reference. (only for AU market)

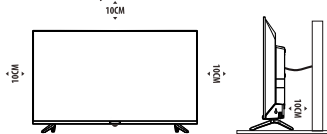

- Warning: Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

# Warning and Precaution

 
- Using cabinets or stands recommended by the manufacture of the television.
- Only using furniture that can safely support the television.
- Ensuring the television is not overhanging the edge of the supporting furniture.
- Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.  
(Only for the TV with mass exceed 7 kg)


- Disconnect the power before moving or installing the TV. Otherwise electric shock may occur.
- Remove the stand before installing the TV on a wall mount by performing the stand attachment in reverse.
- If you install the TV on a ceiling or slanted wall, it may fall and result in severe injury. Use an authorized wall mount and contact the local dealer or qualified personnel. Otherwise it is not covered by the warranty.
- Do not over tighten the screws as this may cause damage to the TV and void your warranty.
- To prevent injury, this apparatus must be securely attached to the floor/wall in accordance with the installation instructions.
- Use the screws and wall mounts that meet the following specifications. Any damages or injuries buy misuse or using an improper accessory are not covered by the warranty.

## Wall-hanging bracket

● An optional wall mount can be used with your television. Consult with your local dealer to purchase the recommended wall mount bracket. Carefully attach the wall mount bracket at the rear of the TV. Install the wall mount bracket on a solid wall perpendicular to the floor. If you are attaching the TV to other building materials, please contact qualified personnel to install the wall mount. Detailed instructions will be included with the wall mount. Please use a wall mount bracket where the devices is adequately secured to the wall with enough space to allow connectivity to external devices.

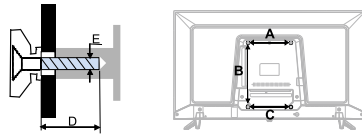

Model Size: 40"			Top	Down
Screw	Diameter(mm) * E"		M6	M6
	Depth(mm) "D"	Max	30	20
		Min	20	6
	Quantity		2	2
VESA (A*B*C)			200*300*200	

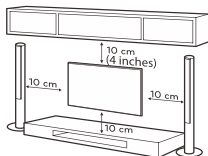 

### Note:

- 1) The pictures are for reference only.
- 2) For the TV sets with terminals towards the wall, in order to leave enough space to use the terminals, a rubber cushion is needed together with the screw to fix the wall mount. It is a small hollow pillar whose internal diameter is 8mm, external diameter is 18mm and height is  $\geq 30$ mm.

# Warning and Precaution

## Operating Environment

- . Do not install this equipment in a confined space such as a bookcase or similar unit.
- . Do not use the set near damp, and cold areas.
- . Keep away from direct sunlight, and protect the set from overheating.
- . Do not use the set near dust place.
- . Do not attach candle to accessible opening area, to avoid flammable foreign material from entering the TV.

## Precautions For Using Remote Control

- . Use the remote control by pointing it towards the remote sensor. The items between the remote control and the remote sensor will interfere the normal operation.
- . Do not make remote control vibrate violently. Also, do not splash liquid on the remote control, also do not put the remote control in high humidity place.
- . Do not place remote control under direct sunlight which will cause deformation of the unit by heat.
- . When the remote sensor is under direct sunlight or strong lighting, the remote control will not work. If so please change the lighting or TV's position, or operate the remote control closer to the remote sensor.

 
## Precautions For Using Battery

Improper using of the battery will cause leakage. So please do as the following methods and use carefully.

1. Please note the batteries' polarity, to avoid short circuit.
2. When the battery's voltage is insufficient which affect the use range, you should replace new battery. Remove the batteries from the remote control unit if you do not intend to use it for a long time.
3. Do not use different types of batteries (for example, Manganese and Alkaline batteries) together.
4. Do not put the battery into fire, and charge or decompose the battery.
5. Please dispose batteries abide by relevant environmental protection regulation.
6. **WARNING:** The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

## Install Remote Control Battery


Place two AAA size batteries in the remote controls battery compartment, making sure to match the polarity markings inside the compartment.

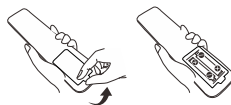

*Note: The picture is only for reference.*

## TV Control Button

 *Note: The pictures are only for reference.*

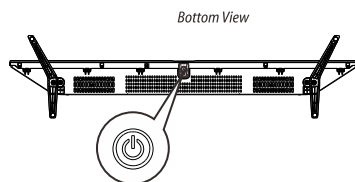

- Turn on the TV:  
In standby mode, short press TV control button to turn on the TV.
- Turn off the TV:  
In working mode, short press TV control button to turn the TV standby.

# Terminal Connection

 
## DIGITAL AUDIO OUT

Use a optical cable to output your TV audio signal to a compatible audio receiver.



## AV IN

Receive audio and video signal from signal source such as DVD.

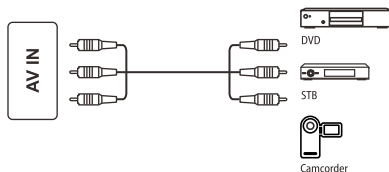

## HDMI

 
Receive HDMI input signal from signal source such as DVD.



Note: HDMI 1 port with ARC function.


## USB

USB port.



## ANTENNA IN

 Connect a coaxial cable to receive signal from the antenna or cable.

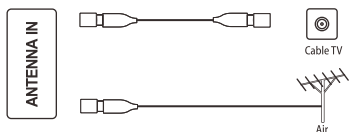

## EARPHONE

Speakers will be muted when earphone is plugged in.



### Note:

 
- 1) The pictures are only for reference.
- 2) External equipments and cables shown herein are not supplied with the TV.
- 3) Some terminals may differ by different regions or models, and please take your actual TV set as the standard.



# Remote Control Function

**Note:**

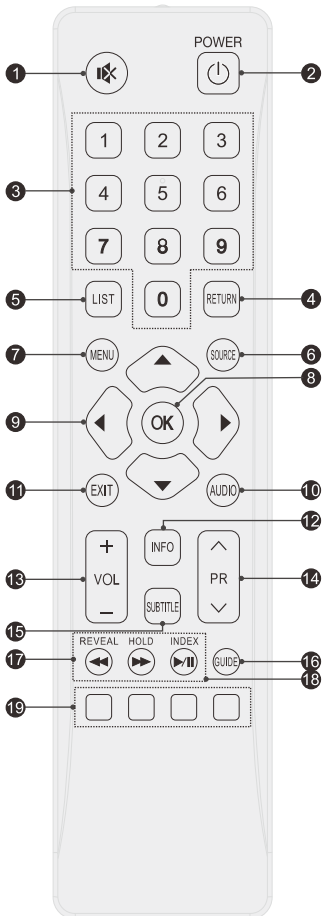

- 1) The picture is only for reference.
- 2) Button names and functions may vary depending on the region, model or source..



1. **MUTE**(🔇): Mute or restore the TV sound.
2. **POWER**(⏻): Turn the TV on or standby.
3. **Number buttons (0~9)**: Choose the channel directly, or input a number.
4. **RETURN**: Switch to the previously-viewed channel.
5. **LIST**: Access the channel list.
6. **SOURCE**: Select the input source.
7. **MENU**: Access or exit the main menu settings, or return to the upper-level menu.
8. **OK**: Confirm, enter or execute the selected item, or access the channel list.
9. **UP/DOWN/LEFT/RIGHT (▲/▼/◀/▶)**:  
Navigate the menu to select what you need.
10. **AUDIO**: Setup the audio language in DTV mode, or select the sound track in ATV mode.
11. **EXIT**: Exit the current operation.
12. **INFO**: Check the detailed information of current program.
13. **Volume Up/Down(VOL+/VOL-)**:  
Adjust the sound volume.
14. **Program Up/Down(PR^/PRv)**:  
Change Channels.
15. **SUBTITLE**: Setup the subtitle languages.
16. **GUIDE**: Access the electronic program guide in DTV mode.
17. **USB Play Control Buttons**
  - Fast Backward (◀◀)**: Fast backward the playback.
  - Fast Forward (▶▶)**: Fast forward the playback.
  - Play & Pause (▶||)**: Start or pause the playback.
18. **REVEAL/HOLD/INDEX**: No functions.
19. **Color Buttons (RED/GREEN/YELLOW/BLUE)**:  
Execute the prompt function in specific mode.


# Basic Operations
 
## Turn on or turn off the TV

- Step 1.** Connect the AC power cord to power outlet, then the TV goes to standby mode, press **POWER**  button on the remote control to turn on the TV, and you will be ready to use its features.
- Step 2.** When the TV is turned on, press **POWER**  button to turn off the TV, and it will go to standby mode.
- Step 3.** If you want to power off the TV completely, please pull out the power plug from the power outlet.

## Input Source

- Step 1.** Press **SOURCE** button to enter the list of input sources.
- Step 2.** Press **▲/▼** button to select the desired source.
- Step 3.** Press **OK** button to enter the selected source.

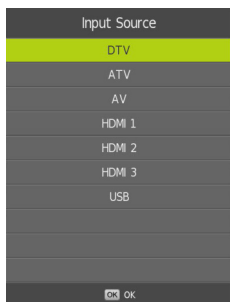

*Note: The picture is only for reference.*

## Initial Setup

 
When you turn on the TV for the first time, there will show a setup wizard on the screen to guide you to finish the initial setup.

- Step 1:** Select the OSD language.
- Step 2:** Select your country.
- Step 3:** Search for channels automatically.

*Note: If you want to restart the initial setup after first time, please select <MENU → OPTION → First Time Installation>.*

## Electronic Program Guide (New Zealand)

While watching a DTV program, please press **GUIDE** button to enter Electronic Program Guide, where you can check program information of 8 days including the current day for all available channels.

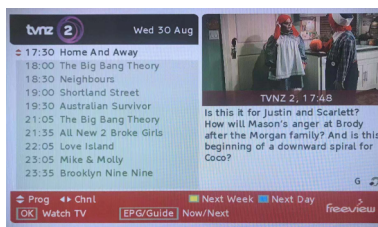

*Note: The picture is only for reference.*

- **YELLOW:** Check the program list of next week or previous day.
- **BLUE:** Check the program list of next day or today.
- **GUIDE:** Check the current and next programs of all channels.
- **▲/▼/◀/▶:** Move to select the desired channel or program.

## Electronic Program Guide (Other Countries)

While watching a DTV program, please press **GUIDE** button to enter Electronic Program Guide, where you can check program information of 8 days including the current day for all available channels.



*Note: The picture is only for reference.*

- **GREEN:** Check the detailed program information.
- **YELLOW:** Check the list of viewing appointments.
- **BLUE:** Setup a viewing appointment to remind you of watching the selected program.
- **▲/▼/◀/▶:** Move to select the desired channel or program.

# Main Menu

## Menu Operation

- Step 1.** Press **MENU** button to enter the main menu settings.
- Step 2.** Press **◀/▶** button to select a submenu: **CHANNEL, PICTURE, SOUND, TIME, OPTION** or **LOCK**.
- Step 3.** Press **OK/▼** button to enter the selected submenu.
- Step 4.** Press **▲/▼** button to select an item.
- Step 5.** Press **OK** button to enter the selected item.
- Step 6.** Press **▲/▼** or **◀/▶** button to adjust the item.
- Step 7.** Press **MENU** button to return to the upper-level menu or exit main menu setting.



*Note: The pictures are only for references.*

*Note: Settings may vary depending on the region, model or source.*

## CHANNEL (Only for TV mode)

**Auto Tuning:** Search for channels automatically.

**DVB-T Manual Tuning:** Search for DTV channels manually.

**ATV Manual Tuning:** Search for ATV channels manually.

**Program Edit:** Edit the selected program.

- Press **RED** button to delete the program.
- Press **GREEN** button to rename the program in ATV mode.
- Press **YELLOW** button to move the program in ATV mode.
- Press **BLUE** button to skip the program.

**Signal Information:** (Only for DTV mode) Check the detailed information of the current signal.

**LCN:** Turn on the LCN switch to get logical channel number automatically from the program.

**Software Update (USB):** Update the TV software by inserting a USB device with the newest version of software.

*Note: For service use only. If the wrong software is loaded onto the television, it could compromise the functions of television and void the warranty.*

## PICTURE

**Picture Mode:** Select the appropriate picture mode for different purposes. Only when the picture mode is set to be "User", you can adjust "**Contrast**", "**Brightness**", "**Saturation**", "**Tint**" and "**Sharpness**".

**Contrast:** Adjust the differences between light and dark areas of the picture.

**Brightness:** Adjust the lightness of the picture.

**Saturation:** Adjust the color richness of the picture.

**Tint:** (Only for NTSC system) Adjust the color tint of the picture.

**Sharpness:** Adjust the edge of the picture.

**Color Temperature:** Select the overall color temperature of the picture.

**Aspect Ratio:** Select the display mode of the picture.

**Noise Reduction:** Reduce the noise generated with the picture signal.

# Main Menu

---

## SOUND

---

**Sound Mode:** Select the desired sound mode. Only when the picture mode is set to be "User", you can adjust the value of "120Hz", "500Hz", "1.5KHz", "5KHz" and "10KHz".

**Balance:** Control the sound balance between the right and left speakers.

**Auto Volume:** Turn on to adjust the sound volume automatically depending on the input source.

**Surround Sound:** Setup surround sound system to enjoy an optimum sound effect.

**SPDIF Mode:** Select the type of digital audio output.

---

## TIME

---

**Clock:** Show or setup the TV date and time.

**Off Time:** Setup the desired time when you want to turn off the TV.

**On Time:** Setup the desired time when you want to turn on the TV.

**Sleep Timer:** Setup the sleep timer in minute to turn off the TV automatically.

**Auto Standby:** Setup the standby timer in hour to turn off the TV automatically when there is no operation during the selected time duration.

**Time Zone:** Select the time zone.

**OSD Timer:** Setup the time duration to keep OSD displayed on the screen without disappearing.

---

## OPTION

---

**OSD Language:** Select the desired OSD language.

**Audio Languages:** (Only for DTV mode) Select the primary and secondary audio languages.

**Subtitle Language:** (Only for DTV mode) Select the primary and secondary subtitle languages.

**Hearing Impaired:** Turn on to help the hearing-impaired viewers understand and enjoy the programs.

**Reset:** Restore user settings to the factory default values.

**HDMI CEC:** Control the connected HDMI devices.

- HDMI CEC: Turn on or turn off the HDMI link system.
- HDMI ARC: Turn on or turn off the HDMI ARC function.
- Auto Standby: Turn off the connected HDMI device automatically when you turn off the TV.
- Auto TV on: Turn on the TV automatically when you turn on the connected HDMI device.
- Device Control: Turn on to allow TV remote to control the connected HDMI device simultaneously.
- Device List: Show the list of connected HDMI devices.

**First Time Installation:** Restart the initial setup.

*Note: HDMI ARC is only available on HDMI 1 port.*

---

## LOCK

---

Before entering the lock system, you will be asked to input the password firstly. And the initial password is "0000".

**Lock System:** Turn on or turn off the lock system.

**Set Password:** Change the password of lock system as you like. If you forget your password, please try to use the master password "9988".

**Block Program:** Restrict unauthorized access to the specific program based on the program content.

**Parental Guidance:** Restrict unauthorized access to the specific program based on the age rating.

**Key Lock:** Turn on to disable the function of TV control button.

# Media Player

## Media Operation

You can view photo, music, movie and text files from your USB storage devices on the TV.



*Note: The pictures are only for references.*

- Step 1.** Connect your USB storage device to USB terminal of the TV.
- Step 2.** Press **SOURCE** button and select "USB" to enter the USB interface.
- Step 3.** Press ◀/▶ to select the USB file type: **PHOTO**, **MUSIC**, **MOVIE** or **TEXT**.
- Step 4.** Press **OK** button to enter it.
- Step 5.** Press ▲/▼/◀/▶ and **OK** buttons to select the USB file you need.
- Step 6.** Press ▶|| button to start playing.
- Step 7.** Press **RETURN** button to exit playing.

*Note: Please select the USB file of which the type is same as one selected in USB interface. For example, if you select "MOVIE" type in USB interface, you need to select a movie or video in your USB disk to play. Otherwise, you will not find or play it correctly.*

## Gentle Reminder

1. Some USB storage devices may not be compatible to operate smoothly with this TV.
2. Back up all of the data in the USB storage device in case data was lost due to an unexpected accident.  
We do not assume any liability for the losses by misuse or malfunction. Data backup is consumer's responsibility.
3. For large file sizes, the loading speed may be slightly longer.
4. The recognition speed of a USB storage device may depend on each device.
5. When connecting or disconnecting the USB storage device, ensure that the TV is not in USB mode otherwise the USB storage device or the files stored in it may be damaged.
6. Please use only a USB storage device which is formatted in FAT32 (Max. 2TB) or NTFS (Max. 256TB) file system provided with the Windows operating system. In case of a storage device formatted as a different utility programme which is not supported by Windows, it may not be recognized.
7. When using a USB Hard Disk Drive which requires electric power source, ensure its rated current does not exceed the marked one at the USB terminal of the TV. Otherwise, the TV system may be changed into standby mode, you should pull away the USB hard Disk and restart the TV system.
8. FHD big picture needs longer time to process, which is not caused by the TV. Please be patient to wait.
9. This TV may not support some multimedia files changed and upgraded as the change of encoding format or other technical advances.

 
# Media Player

## Media Control Bar

**Note:** The pictures are for references only.


### PHOTO

1. Press **OK** button to show and press **▼** button to exit photo control bar while browsing a photo.
2. Press **◀/▶** button to select an operation, and press **OK** button to enter or execute the operation.

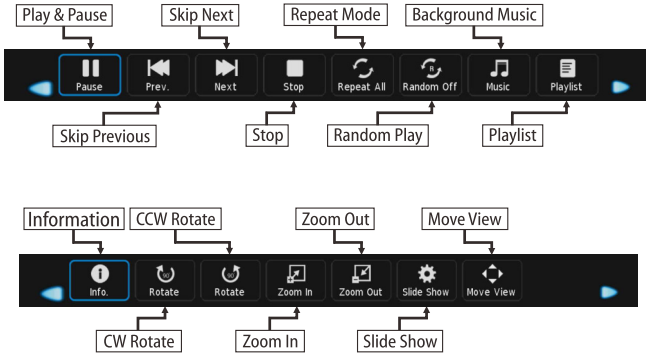

### MUSIC

 1. Music control bar displays on the screen automatically while listening to music.
2. Press **◀/▶** button to select an operation, and press **OK** button to enter or execute the operation.

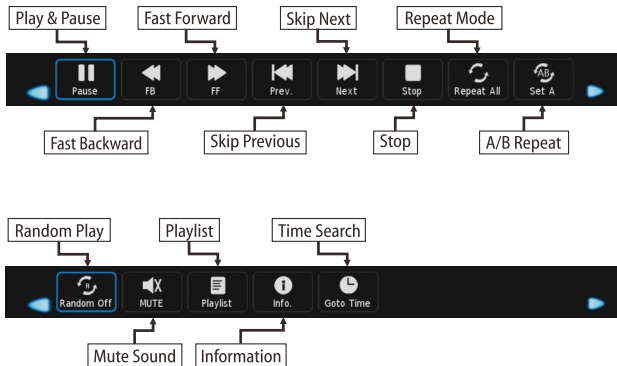



# Media Player

## Media Control Bar

*Note: The pictures are for references only.*


### MOVIE

  1. Press **OK** button to show and press **▼** button to exit movie control bar while watching a movie.
2. Press **◀/▶** button to select an operation, and press **OK** button to enter or execute the operation.

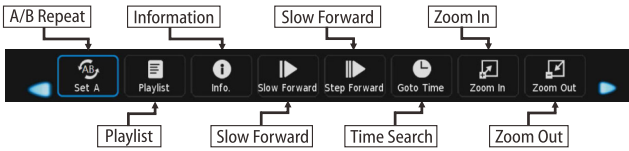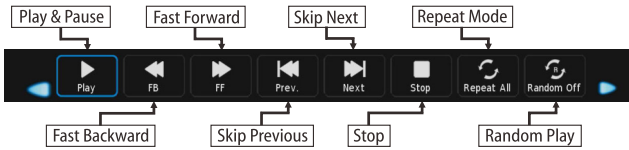

### TEXT

 1. Press **OK** button to show and press **▼** button to exit photo control bar while browsing a photo.
2. Press **◀/▶** button to select an operation, and press **OK** button to enter or execute the operation.

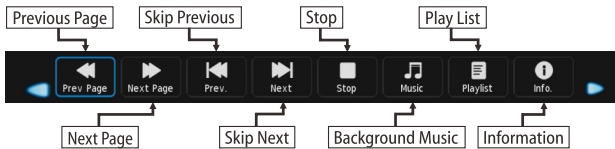

# Troubleshooting

Before calling a service technician, please check the following table for a possible cause of the symptom and some solutions.

## ■ General Problem / Solution

### Remote control does not work

- . Check if there is an obstacle between remote control and TV receiver.
- . Change the batteries.
- . Batteries are not installed correctly.
- . Main power is not connected.

### Poor Signal

This is usually caused by interference from cell phones, walkie-talkie, automotive ignition system; neon, electric drill or other electronic equipment or radio interference sources.

## ■ Picture & Sound / Solution

### No picture, no sound

- . Check the signal source.
- . Plug another electrical device into the outlet to make sure it is working or turned on.
- . Power Plug is bad contact with the outlet.
- . Check the signal.

### No sound, picture OK

- . If no sound, increase or do not mute the sound volume.
- . Open the sound menu and adjust 'Balance'.
- . Check if a headphone has been inserted in, if so, pull out the headphone.

### Abnormal picture

- . For no color or bad picture quality, you may:
  1. Adjust the color option in menu settings.
  2. Keep the TV at a sufficient distance from other electronic products.
  3. Try another channel, maybe broadcasting signal problem.
- . Bad TV signal (Display mosaic or snowflakes)
  1. Check the signal cable and adjust the antenna.
  2. Fine tune the channel.
  3. Try another channel.

## ■ Multimedia Player / Solution

### "This file is invalid" appears or audio is normal but video is abnormal

- . The media file maybe damaged, check if the file can be played on the PC.
- . Check if video and audio codec is supported.

### "Unsupported file" appears or video is normal but audio is abnormal

- . The media file maybe damaged, check if the file can be played on the PC.
- . Check if video and audio codec is supported.

## ■ Network / Solution (May not be available)

### Network failure

- . Check if the router works well.
- . Make sure the TV has connected to the router successfully.

## ■ Browser / Solution (May not be available)

### Web page can not be displayed completely

- . Flash is not supported.

### Browser is forced to be shut down

- . Web page include too many large pictures, thus lead to insufficient memory and close the browser.



## Specifications

<b>Working voltage</b>	100-240V~50/60 Hz
<b>Rated power consumption</b>	74 W
<b>Dimensions (W x H x D) without stand</b>	893.6 X 507.9 X 89.9 mm
<b>Net weight without stand</b>	6.08 Kg
<b>RF aerial input</b>	75 ohm unbalanced
<b>System</b>	DTV: DVB-T/T2 ATV: PAL BG/DK/I/L SECAM BG/DK
<b>Channel coverage</b>	DTV: 47.4MHz~85.8MHz ATV: 43.25MHz~86.25MHz
<b>Environment (only for Tropical climates zone)</b>	Working temperature: 5°C~45°C Working humidity: 20%~80% Storage temperature: -15°C~50°C Storage humidity: 10%~90%
<b>Environment (only for Moderate climates zone)</b>	Working temperature: 5°C~35°C Working humidity: 20%~80% Storage temperature: -15°C~45°C Storage humidity: 10%~90%

*Note: Some specifications may differ by different regions or models, and please take your actual TV set as the standard.*

## License



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.

### Three Year WARRANTY

We pride ourselves on producing a range of quality home products that are both packed with features and completely reliable. We are so confident in our products, we back them up with a three years warranty. Now you too can relax knowing that you are covered. Customer Helpline NZ: 0800 883 301.

This Product is covered by three years warranty when accompanied by proof of purchase.



# WARRANTY CARD

This product is guaranteed against faulty materials and workmanship for a period of **three years** from the date of purchase with proof of purchase. Under this warranty, the warrantor's obligation to the purchaser is to remedy manufacturing faults by repairing or replacing faulty parts or, if unable to be remedied, replacing or refunding the product with proof of purchase. This warranty becomes void if the product has been tampered with or damaged in any other way by improper use. This product has been quality inspected. In the unlikely event of a deficiency, please contact the retailer from which this product was purchased.

## WARRANTY FOR PRODUCTS USED COMMERCIALY LIMITED TO 90 DAYS

Please fill this in upon purchase in case you lose your receipt.

Model Number: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Date of Purchase: \_\_\_\_\_

Receipt Number: \_\_\_\_\_

Store Purchased from: \_\_\_\_\_

## IMPORTANT

Please retain this warranty card along with your purchase receipt. Please do not post to the retailer or importer. If service is required, both of these documents are to be returned with the product to your retailer, otherwise a fee may be charged.

Customer support line 0800 883 301

For assistance during normal working hours  
Monday - Friday, 9am - 5pm, New Zealand local time