 


VEON™

HD LED LCD TELEVISION

VN32ID70

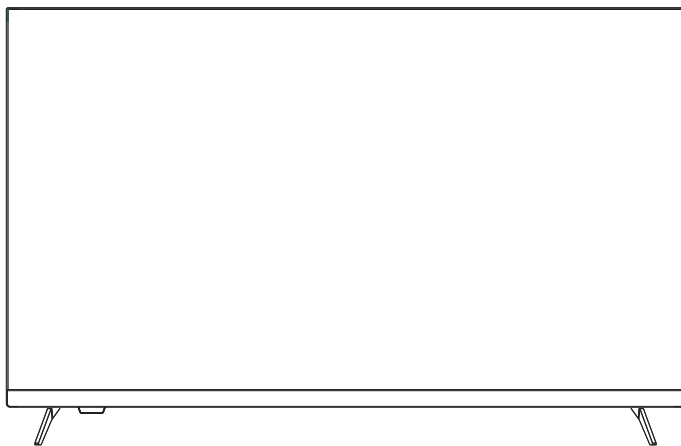

Instruction Manual

Customer Service Line

For assistance during normal working hours(9am-5pm,Mon-Fri,New Zealand local time)
NZ call: 0800 883 301

IMPORTANT INFORMATION

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture(for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If the existing television set is going to be retained and relocated, the same considerations as above should be applied.



WARNING:

TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER(OR BACK).NO USER SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance(servicing) instructions in the literature accompanying the appliance.

REGULATORY INFORMATION

This equipment generates and user can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION

Do not attempt to modify this product in any way without written authorization from supplier. Unauthorized modification could void the user's authority to operate this product.

It is not recommended to keep a certain still image displayed on the screen for a long time as well as displaying extremely bright images on screen.

Figures and illustrations in this User Manual are provided only and may differ from actual product appearance. Product design and specifications may be changed without notice.

WARNING

To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.

Don't use the apparatus in tropical climates.

The ventilation should not be impeded by covering the ventilation openings with items, such as newspapers, table-cloths, curtains, etc.

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

Attention should be drawn to the environmental aspects of battery disposal. Don't throw used batteries in dustbin. Please contact your retailer in order to protect the environment.

Keep minimum distances(5cm) around the apparatus for sufficient ventilation;

(Minimum distance around the apparatus for sufficient ventilation.)

No naked flame sources, such as lighted candles, should be placed on the apparatus;

To prevent the spread of fire, keep candles or other open flames away from this product at all times.

The device may malfunction when under electrostatic discharge. It can be manually resumed by power off and power on again.

CAUTION

Connecting the Power Cord.

Most appliances recommend they be placed upon a dedicated circuit; that is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and have the cord replaced with an exact replacement part by an authorized servicer. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance. The mains plug is used as the disconnect device, and the disconnect device shall remain readily operable.

IMPORTANT SAFETY INSTRUCTIONS

 
1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.




7. Do not block any of the ventilation openings. Install in accordance with the manufacturer's instructions.




5. Do not use this apparatus near water.

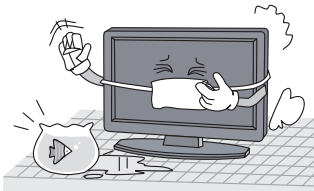

 8. Do not install near any heat source such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

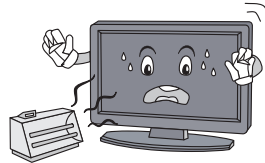

 6. Clean only with a dry cloth.

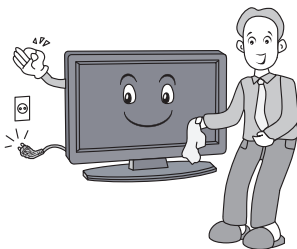


9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.



 13. Unplug power cord and antenna during lightning storms or when unused for long periods of time.

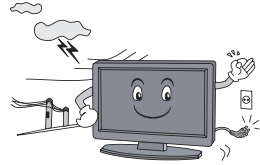

11. Only use the attachments/accessories specified by the manufacturer.

12. Use only with a cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip over.



14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



ON DISPOSAL

- The fluorescent lamp used in this product a small amount of mercury.
- Do not dispose of this product with general household waste.
- Disposal of this product must be carried out in accordance to regulation of your local authority.

NOTE

- If the TV feels cold to the touch, there may be a small "flicker" when it is turned on. This is normal, there is nothing wrong with TV.
- Some minute dot defects may be visible on the screen, appearing as tiny red, green, or blue spots. However these have no adverse effect on the monitor's performance.
- Avoid touching the screen or holding your finger(s) against it for long periods of time. Doing so may produce some temporary distortion effect on the screen.

Fixing the stand

Your TV is packaged with the stand and the cabinet separated. Before using the TV, install the stand as described below, or if you want to mount it to wall, see page 6 for mounting advice; the wall mount itself is not supplied.

IMPORTANT!

- Make sure the TV set is unplugged from the power supply before installing or removing the stand.
- The TV panel may be awkward to install on your own. We recommend you ask someone to help with installation and/or removal of the stand.

 
 
Wall mount installation

1. Fix the wall mount screws (top holes: M4x12mm/2pcs, bottom holes: M4x8mm/2pcs) into the rear side of the LED TV, using the torque of 8kgf.cm.


* The TV appearance subject to material object.

2. Use the wall mount (not included) to mount the TV to the wall.

Warning: the angle between the TV and wall must not be bigger than 3°.

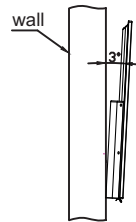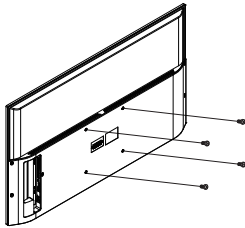

 There are four mounting holes on the back of your TV for mounting a wall mount bracket (not included). Use only mounting screws (not included) that match the length and diameter specified in the instructions.

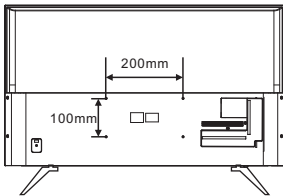



Wall mount dimensions(mm)

200x100


Attaching the stand

1. Place the TV with the display side down on a flat surface. Use a cloth to protect the display. Place the panel side of TV on the platform and insert the two stands into TV, making the screws holes of stands correspond to the right holes of TV.

  2. Fix screws on the bottom of back cover, assembly finished.

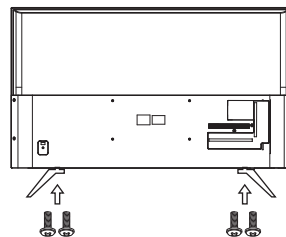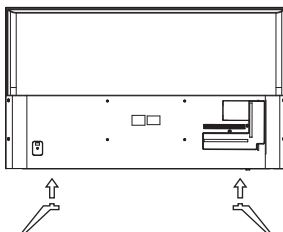

Front/Back panel diagram

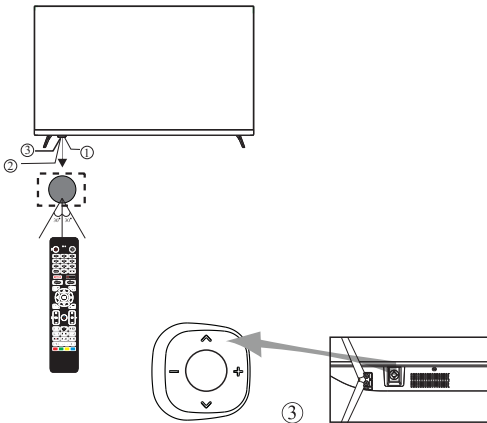 

1. Remote control sensro.

2. Indiator ETD: RED ● STANDBY

3. Decrease the volume level or move left.

Increase the volume level or move right.

Select the next channel or move up.

 
Select the previous channel or move down.

When TV is on standby, press to turn on.

When TV is on, press to enter the menu.

Use the joystick to navigate around the interface and press to enter the highlighted item.

When TV is on, press and hold to put TV on standby.

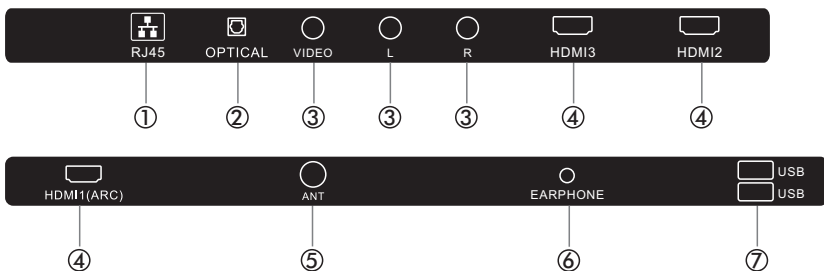

1. RJ45: Internet port

2. OPTICAL Output

3. AV IN: Video input/Audio input.

4. HDMI: Connect to High-definition multimedia signal resource.

5. ANT: connect to TV antenna

6. EARPHONE: Earphone output.

7. USB: Connect USB device.

Getting Started

 
Using the remote control

When using the remote control, aim it at remote sensor on the television. If there is an object between the remote control and the remote sensor on the unit, the unit may not operate.

- ◆ Point the remote control at the REMOTE SENSOR located on the television.
- ◆ When using this television in a very brightly lit area, the infrared REMOTE CONTROL SENSOR may not work properly.
- ◆ The recommended effective distance for using the remote control is about 7 metres.

Installing Batteries in the Remote Control

1. Open the cover at the back of the remote control.
2. Install two AAA size batteries. Make sure to match the "+" and "-" ends of the batteries with the diagram inside the compartment.
3. Replace the cover.

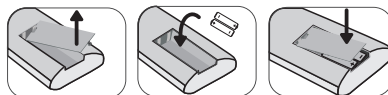

Batteries replacement

You will need to install the batteries into the remote control to make it operate following the instruction below.

When the batteries become weak, the operating distance of the remote control will be greatly reduced and you will need to replace the batteries.

Notes on Using Batteries:

The use of the wrong type of batteries may cause chemical leakage and/or explosion. Please note the following:

- ◆ Always ensure that the batteries are inserted with the + and - terminals in the correct direction as shown in the battery compartment.
- ◆ Different types of batteries have different characteristic. Do not mix different types.
- ◆ Do not mix old and new batteries. Mixing old and new batteries will shorten battery life and/or cause chemical leakage.
- ◆ Replace batteries as soon as they do not work.
- ◆ Chemicals which leak from batteries may cause skin irritation. If any chemical matter seeps out of the batteries, wipe it up immediately with a dry cloth and replace with new battery immediately.
- ◆ The batteries may have a shorter life expectancy due to storage conditions. Remove the batteries whenever you anticipate that the remote control will not be used for an extended period.
- ◆ The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

CAUTION

- ◆ It may result in an explosion if batteries are replaced incorrectly.
- ◆ Only replace batteries with the same or equivalent type.

Cable Installation

Please read the relevant content in "Notice for Maintenance and Safety" carefully before the installation and use.

1. Remove the TV from the retail carton and place on a secure flat surface.

NOTE

- ◆ When you plug or unplug the TV, you must make sure that the AC power has been already shut down; when unplugging the power cable or signal cable, please hold the plug(the insulated part), do not draw the body of the cable.
2. The RF output terminal can be connected with the RF input port of the TV.
 3. The output AV terminal of DVD can be connected with the AV input port of the TV through AV cable.
 4. Connect one end of the HDMI cable with HDMI output port, connect the other end of the HDMI cable with the HDMI port on the TV. **It supports HDCP 2.2 on all HDMI input.**

NOTE

- ◆ While connecting the HDMI, please insert carefully, do not insert overexertedly, for fear the pin might be broken. HDMI cable is not supplied with television.
5. Check and make sure that all AV cables are connected with the corresponding ports correctly.
 6. Connect the AV power cable with 100-240VAC power supply.

NOTE

- ◆ The range of power input for the TV is 100-240V AC 50/60 Hz, do not connect the TV power input port with the AV power out of the above range.
- ◆ Please hold the insulated part of the plug when you are unplugging the power cable, do not touch any metal part of the power cable directly.









QUICK START GUIDE

- Connect

 
1. Connect the mains and antenna.
2. Press the  button on remote control to turn on TV from standby mode.

- Initial Setup

When the TV is initially powered on, a sequence of on-screen prompts will assist in configuring basic settings.

1. Select the desired OSD(On Screen Display) language.
Press the  /  /  /  button, then press the OK button.
2. Select the appropriate country.
Press the  /  /  /  button to select the country, then press the OK button to follow OSD Menu and start channel tuning

REMOTE CONTROL

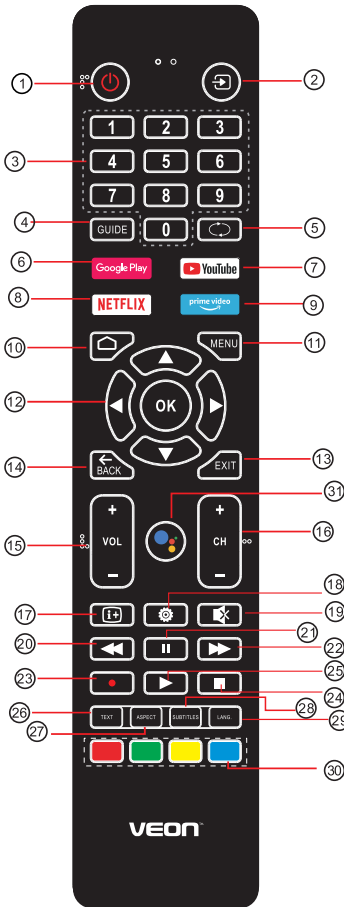


- 1: POWER: To set the TV to Standby or Power On modes.
- 2: : Select among the different input signal sources.
- 3: NUMERIC KEY: For direct access to channels.
- 4: GUIDE: Press to display electronic programme guide in TV mode.
- 5: : Jumps to last viewed channel.
- 6 : **Google Play** : Open Google Play movies.
- 7: : Press to open the YouTube.
- 8 : **NETFLIX**: Press to open NETFLIX.
- 9 : **prime video** : Open Prime Video.
- 10: : Press to open the Home Page.
- 11: MENU: Press to open or close the on-screen menu.
- 12 : OK and Arrow : Confirms selection and Remote control direction.
- 13 : **Exit: Exit menus or Apps.**
- 14 : Back: Return to the previous menu.
- 15: VOL +/- : To adjust sound level.
- 16: CH+/CH-: To access the next or previous channels.
- 17: : Press to display the channel information.
- 18 : Setting : Open setting menu
- 19: MUTE: To disable or enable the speaker sound output.
- 20: : Reverse playback rapidly.
- 21: : Pause playback.
- 22: : Advance playback rapidly.
- 23: PVR : Record function
- 24 : : Press to stop multimedia playback
- 25 : : Start playback.
- 26: TEXT: Teletext Mode.
- 27: ASPECT : Press to change the picture aspect ratio.
- 28: SUBTITLES: To turn on subtitles in DTV mode.
- 29: LANG.: Press to select Mono, Nicam, Stereo for ATV channel, Audio language for DTV channel.
- 30: Coloured buttons: Implement the relevant operations according to the prompt at the bottom of the menu in the text.
- 31: Google Search : Press to open the google assistant or start a voice search

NOTE:


This Remote Control is used across a range of TV models with differing capabilities. Some functions listed above may not be applicable to your TV model.

Turning on and off TV

- Turn on the TV

Connect the Power cable. At this time the TV will enter **standby** mode.
press the  button on remote control to turn on TV from standby mode.

- Turn off the TV

press the  button on remote control to enter standby mode.
Do not leave your set in standby mode for long periods of time. It is best to unplug the set from the mains and aerial.

Program Selection

- Using the CH+/CH- on the panel of TV or on the remote control.

Press CH+ to increase channel number.

Press CH- to decrease channel number.

- Using 0-9 digital buttons.

You can select the channel number by pressing 0 to 9.(In TV, DTV mode)

Volume adjustment


- Press the VOL+/- button to adjust the volume.

- If you want to switch the sound OFF, press the MUTE.

- You can release mute by pressing the MUTE or increase/ decrease the volume.

Changing the Input Source

You can select the input source by pressing the  button on the remote control.

Press the  button to cycle through the input source, and press the OK button to confirm your choice.

Menu Operation

 
INITIAL SETUP

For the first initial setup, on screen setup wizard will guide you through setting up your TV. Please follow the on-screen instructions to setup your TV correctly.

Remote Control Pairing

Be sure to follow the below prompts to pair your Bluetooth remote control. After the pairing is successful, you can now operate the TV.

Use the ▲/▼ buttons to select system language, then press **OK/SELECT** to confirm.

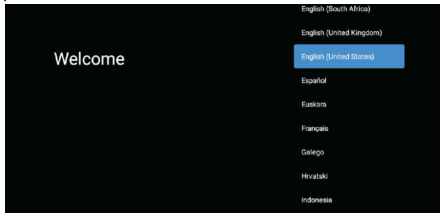

Press **LEFT + MENU** (down) buttons for 3 seconds until red light starts to blink. Select and click OK when the remote control appears on the screen. Once connected, you can use the Bluetooth remote control to operate the TV.



If you just want to use your TV normally, please select **"SKIP"**

To connect your Android™ smartphone to your TV, Select **"Continue"**.

 


Press ▲/▼ to select your Wi-Fi network you wish to connect to, enter the password and then confirm to connect.







If using the Ethernet connection, you can skip this step.


Accept the Google Terms of Service to improve the product experience, Select **"ACCEPT"** to proceed with this condition.

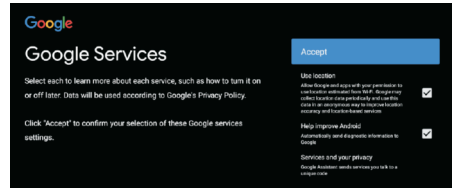

    Informational screens will now appear, you can scroll through steps by pressing **"RIGHT"** directional button to continue.

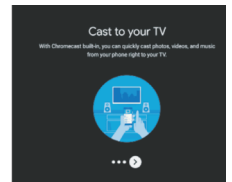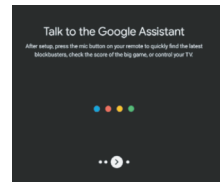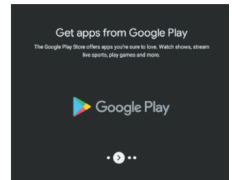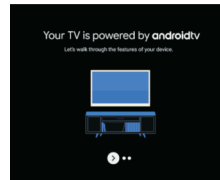

 Select the country you are using the device in with the ▲/▼ directional buttons.

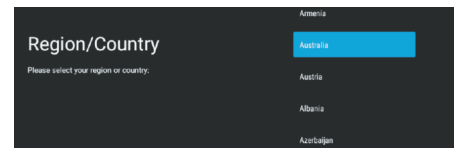


Set a password of your TV for security purposes.

NOTE: make sure to note down or remember the password, as you can then refer to password when required.




Menu Operation

 
Please be sure in this step, select **"HOME"** if you are using this TV for use at home.
Make sure to confirm once you have selected **"HOME"**.



 Make sure to set Chromecast built-in™ to ON, so you can cast all your favorite movies, shows, apps, games, and more directly to your TV.

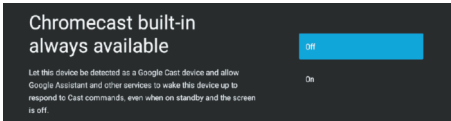

 
Make sure to select **"DIGITAL"** to auto tune your TV.

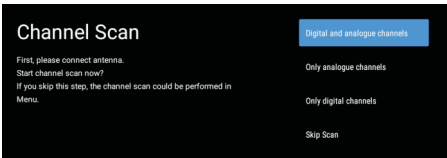

NOTE: Please make sure **Antenna (RF) cable** is plugged into the **ANT. IN** port located on back of TV.

Android TV™ - HOME SCREEN

 Once you have completed initial setup, you will now enter the Android TV home screen.

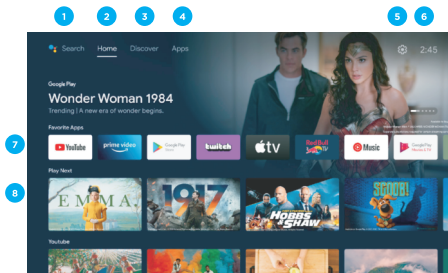

1. Press the Google Assistant button on your remote to do more on your TV with your voice.
2. **HOME** - Main page to enter Live TV, view your pre-installed and downloaded applications.

3. **DISCOVER** - Sign into your Google Account to get recommendations from your streaming services - organized into topics and genres based on what you watch.

Go to Page 14 to learn more.

4. **APPS** - Apps you have downloaded and apps you can search for to install.
5. **SETTINGS:** Select this if you want to access TV settings.
6. **TIME:** Displaying current time.
7. Each row past this point will display recommended content from the apps you already have installed.

Add Apps

At the end of this row of apps, Select the + box and add your app that you have downloaded and installed to the home screen of your Android TV.

 
8. Movies or Shows available to play next.

GOOGLE PLAY




To have access and to download applications from **Google Play**, you must sign in with a Google Account.

Once you open **Google Play**, you will be prompted to sign in or create a new account.

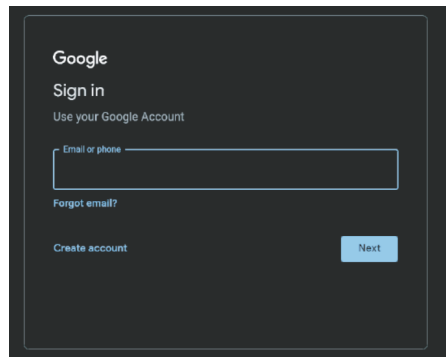

Menu Operation

 Once you have signed in, you will be brought to the below page, scroll through the list of applications available for download OR go to the search button, and search via entering text or pressing the Google Assistant button on the remote control.

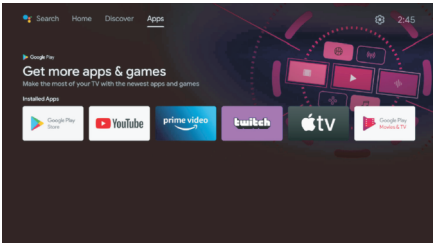

GOOGLE ASSISTANT

Do more on your TV with your voice. Press the Google Assistant button on your remote to quickly search 400,000+ movies and shows, get recommendations to match your mood, control smart home devices, and more.



 
Ask Google to search for the latest blockbuster, stream shows, or open multiplayer games. Have it dim the lights by connecting smart home devices. Manage tasks and see your calendar. Or ask it questions and see the answers on your TV.



“What’s the weather today?”

DISCOVER

Discover new movies and shows from the services you already have access to. Suggestions based on what you’ve watched and what interests you make it easier to find your next favorite.

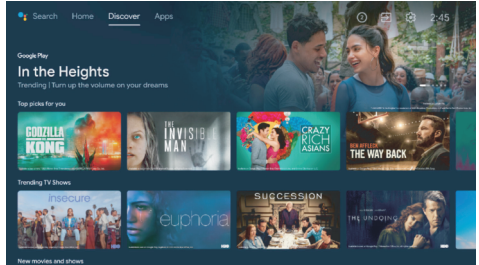

If you haven't already signed into Google Play using your Google Account. When selecting **DISCOVER** tab on the top of home page, you will be prompted to sign in.

 
Note: if already signed in, your Google Account will already appear.

1. Once signed into Google, you can select the apps you want recommendations for within the **DISCOVERY** section of Android TV.
2. Select (Tick) the apps you would like recommendations for.
3. Allow up to 10 seconds for Android TV to gather recommendations.
4. **DISCOVER** section will now display Movies or TV Shows recommended for you to watch.

INPUT MENU

To access **INPUT** menu, press the **INPUT** button on your remote control to have quick access to **INPUT** menu.


The options that are **AVAILABLE** will be highlighted, You will not be able to access INPUTS/PORTS that are not in use.

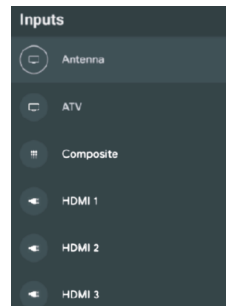

Menu Operation


SETTINGS

 To access **SETTINGS** menu, select **SETTINGS** via the HOME screen or press the Settings button on your remote control.

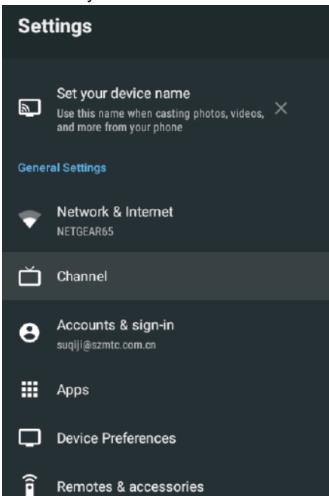


NETWORK & INTERNET

 To access **NETWORK** menu, select **Settings (#5 on page 13)** menu and go down and select **Network & Internet**.

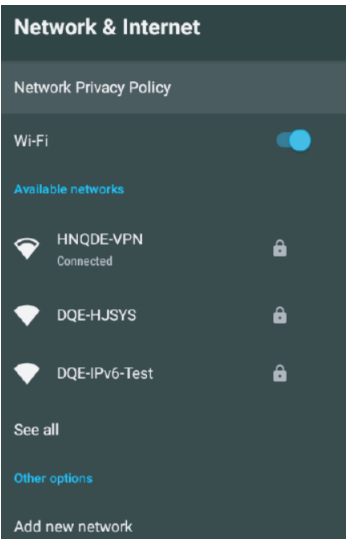


CHANNEL MENU

 
To access **CHANNEL** menu, select **SETTING icon (#5 on page 13)** via the HOME screen. Then go down and select "**CHANNEL**".

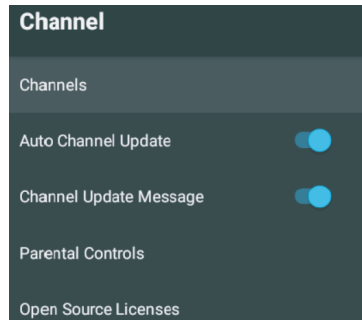

 Channels: Display the scan sub-menu based on different channel installation models.

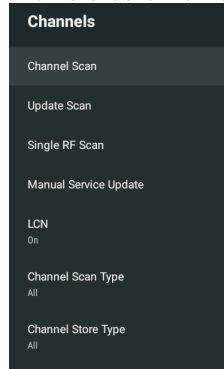

 Antenna: Select the Antenna channel on the INPUT interface the TV can receive digital (DVB-T/DVB-T2) broadcasting signals.

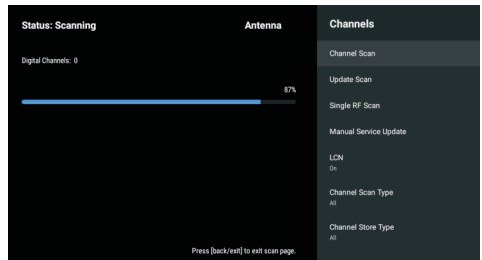


Menu Operation

FAVOURITE CHANNELS


Once Channel Scan is completed, press the **OK/Enter** Button at any time when watching TV to access the channel information and to add channels to favourite list.

 Note: This adjustment can be done only when watching live TV.

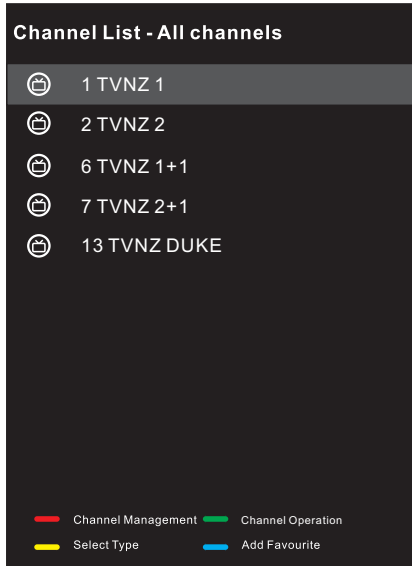



Add Favorite

 When the Channel List is displayed, press the Blue Button on your remote control to add the selected channel to the favorites list.

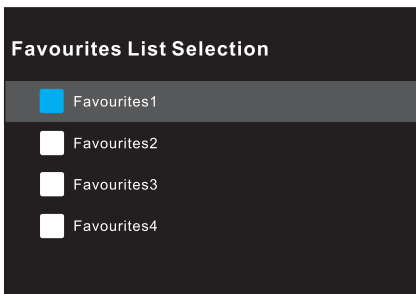

View favorites list

  
When the Channel List is displayed, press the Yellow Button on the remote control to select Type of Channels. Here scroll down and select Favorites to view the channels added to the Favorite list.

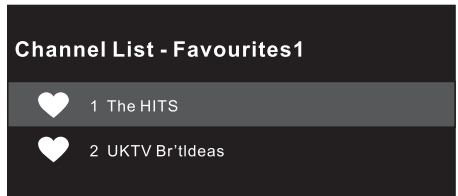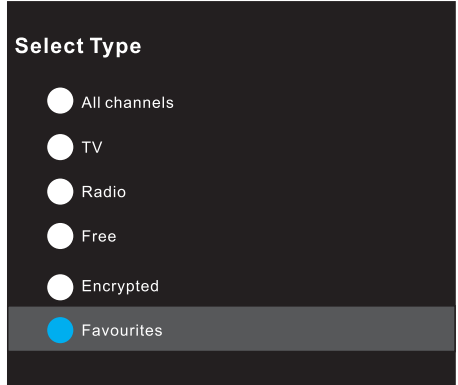

DEVICE PREFERENCES - ABOUT

To access **ABOUT** menu,

 1. Select **SETTING** icon (#5 on page 13) via the HOME screen.
2. Select “**Device Preferences**”
3. Then go down and select “**ABOUT**”.

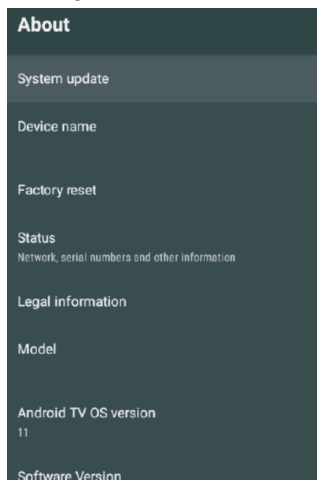


Menu Operation

Factory Reset

Select "Factory reset", The system will be restored to factory settings, and the current system data will be cleared.

TIME


 
1. To access **DATE & TIME** menu, select **SETTING icon (#5 on page 13)** via the HOME screen.
2. Select "**Device Preferences**"
3. Then go down and select "**DATE & TIME**".

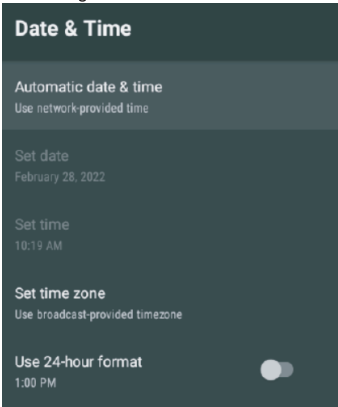

INPUT SETTINGS MENU

To access **INPUT SETTINGS** menu,

  
1. Select **SETTING icon (#5 on page 13)** via the HOME screen.
2. Select "**Device Preferences**"
3. Then go down and select "**INPUTS**".

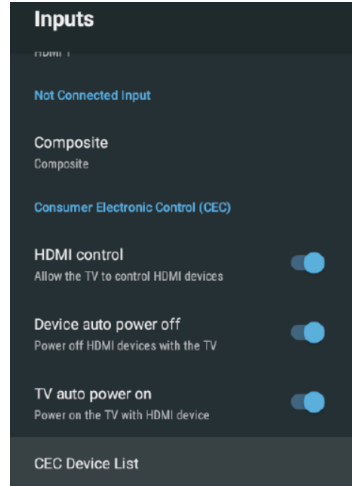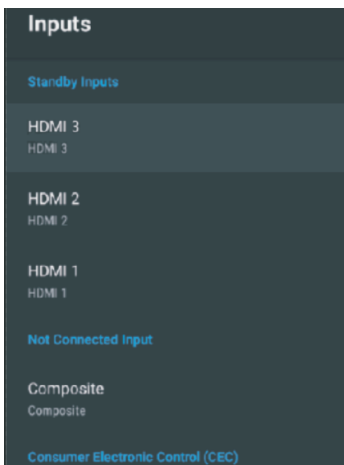

POWER SETTINGS MENU

To access **POWER SETTINGS** menu,

 1. Select **SETTING icon (5)** via the HOME screen.
2. Select "**Device Preferences**"
3. Then go down and select "**POWER**".

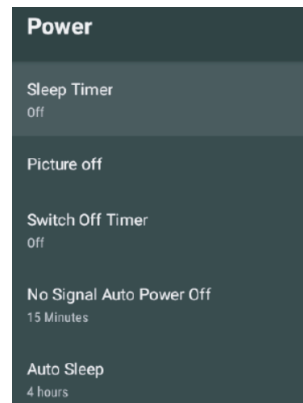

Menu Operation

Sleep Timer - Options of Off, 10 mins, 20 mins, 30 mins, 40 mins 50 mins, 60 mins, 90 mins and 120 mins to auto turn off your TV.


Picture Off - Turn off your display (recommended not to select this option.)

No Signal Auto Power Off - Turns your TV off if no signal is detected.

PICTURE SETTINGS MENU

To access **PICTURE SETTINGS** menu,

 1. Select **SETTING icon (5)** via the HOME screen.
2. Select "**Device Preferences**"
3. Then go down and select "**PICTURE**".


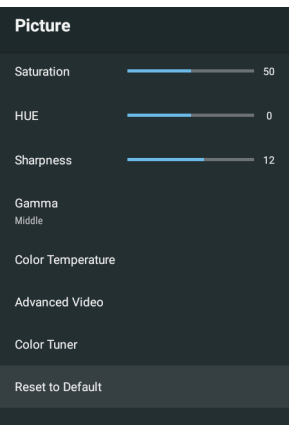


Picture Mode - Options to choose from - Standard, Vivid, Sport, Movie, Game, Energy Saving, User.

SOUND SETTINGS MENU

To access **SOUND SETTINGS** menu,

  1. Select **SETTING icon (5)** via the HOME screen.
2. Select "**Device Preferences**"
3. Then go down and select "**SOUND**".

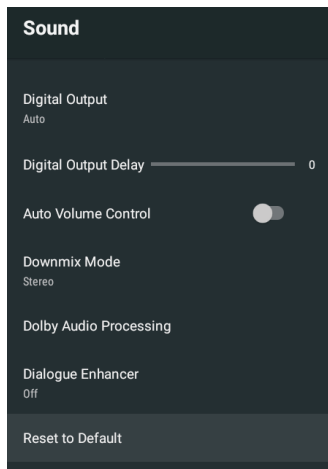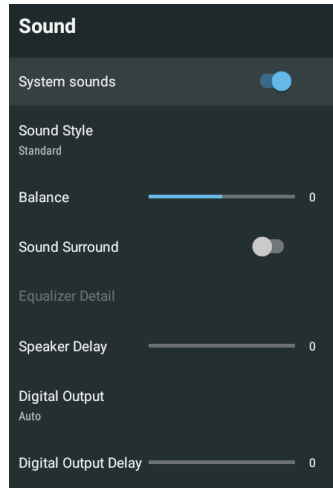

Sound Style - Options to choose from - Standard, Vivid, Sports, Movie, Music, News, User.

Digital Output - Auto, Bypass, PCM, Dolby Digital Plus, Dolby Digital.

 
(It is recommended to select **AUTO**, as this will automatically detect quality of sound being produced by content).

Menu Operation

HOME SCREEN

To access **HOME SCREEN** menu,


1. select **SETTING** icon (#5 on page 13) via the HOME screen.
2. Select “**Device Preferences**”
3. Then go down and select “**HOME SCREEN**”.

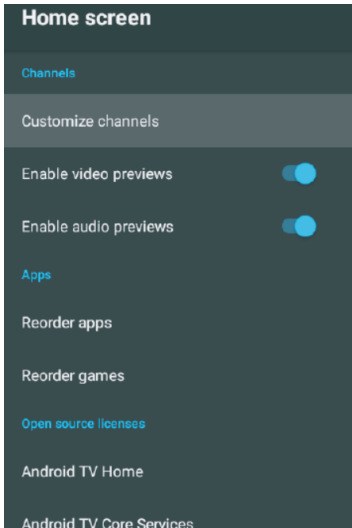

SCREEN SAVER

To access **SCREEN SAVER** menu,

 
1. select **SETTING** icon (#5 on page 13) via the HOME screen.
2. Select “**Device Preferences**”
3. Then go down and select “**SCREENSAVER**”.

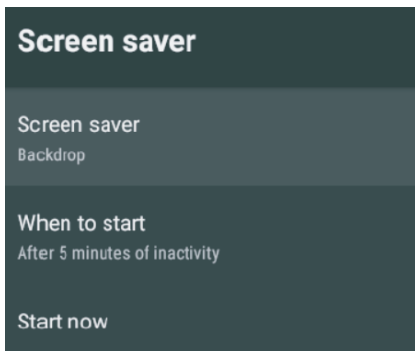

GOOGLE ASSISTANT

To access Google Assistant in the Settings menu

 1. select **SETTING** icon (#5 on page 13) via the HOME screen.
 2. Select “**Device Preferences**”
 3. Then go down and select “**Google Assistant**”.
- Accounts will only be accessible if you have connected a Gmail account on Google Play.
A Gmail account is needed in order to download and install applications on Google Play.

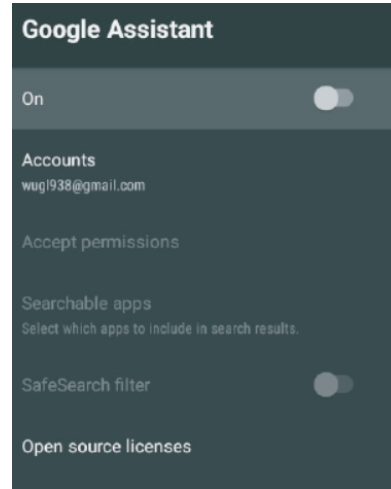

PARENTAL CONTROL

To access **PARENTAL CONTROL** menu,

1. Select **SETTING** icon (#5 on page 13) via the HOME screen.
2. Then go down and select “**CHANNEL**”.
3. Select “**Parental Control**”

From here you have the option to select and create a new password to lock the channels you want to lock.
Note: please make sure to store/save password somewhere you can access at a later date.

If you forget the password, you will need to factory reset TV to use again.

 
 
Channels Blocked - Block specific channels to restrict use.

Program Restrictions - You can restrict specific programs on a TV channel to be blocked

Inputs Blocked - Block a TV port input to restrict use.


Change PIN - Change existing PIN selected when first entering this menu.

Menu Operation

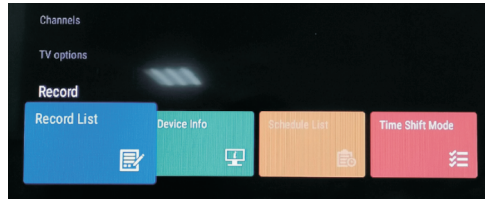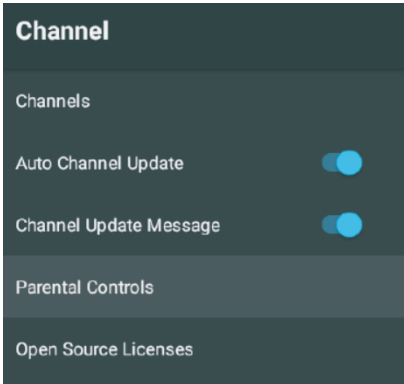

GUIDE/EPG

 - When watching live TV, press GUIDE button on the remote control to open EPG interface.
- Program information will be displayed, and you can operate the EPG menu using the colour buttons.
- Press PVR button to set up a recording schedule.

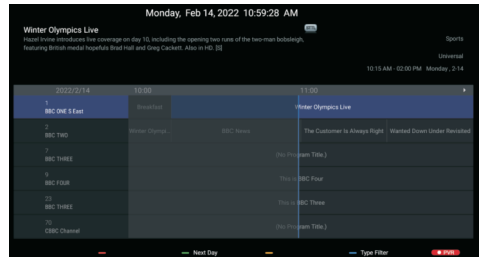


PVR (PERSONAL VIDEO RECORDER)

To access **RECORDING** menu, (PVR)

1. While watching Live TV, press **"MENU"** on remote control.
2. **"TV Options"** will appear, Press **"DOWN"** arrow on remote control to go to **"RECORD"** menu (as image shown below)

IMPORTANT - You must have a **USB Drive** inserted into the USB Port of the TV in order to use any of these **"RECORD"** functions. (Must be FAT32 format)

 Start record- press the remote Record button (#23 on page 10)

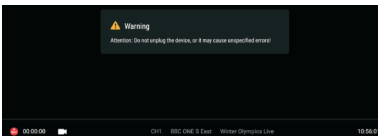

Stop record-press the remote Stop button (#24 on page 10)

Record List - Select **"Record List"** to view all previous recordings.

Device Info - Select **"Device Info"** to view information about your storage device.

Schedule List - Select **"Schedule List"** to see future programs you have scheduled to record.

Multimedia Formats

Photo format	JPEG、JPG、PNG、BMP、GIF
Movie format	AVI、MKV、MP4、MOV、VOB、DAT、FLV、MPG、WMV、TP、TRP、M2T、M2V、M4V、MPEG、3GP、MJPEG、TS
Music format	MP3、AC3、AAC、WAV、OGG、FLAC、M4A、AMR
Text format	TXT

For DTV PVR

USB stick: Format: FAT32, max 64G

HDD: Format: FAT32, max 2T

For media playback

Format: FAT32, max 2T

Specifications

Viewing PictureSize(diagonal)	32" class (31.5" diagonal)
Resolution:	1366 x 768
AspectRatio:	16:9
Multimedia Playback Format under USB Mode	Photo : JPEG.JPG, PNG,BMP,GIF Movie: TP TRP M2T M2V M2TS.M4V MPEG.3GP..... Music : MP3.AC3.AAC WAV.OGG.FLAC M4A AMR Text : TXT
Power Consumption:	48W
Input Power Voltage:	100-240V~ 50/60Hz
Audio OutputPower(THD≤ 10%):	2 x 8W
High-Definition Multimedia Interface(HDMI)Input	x 3
Composite Input	x 1
Headphone Output	x 1
Optical Output	x 1
LAN	x 1
USB 2.0 Input	x 2
Dimensions (approx) with stand fitted(WxDxH)	722x180x466mm

Note: The LED/ LCD panel is an advanced technological product, giving you finely detailed pictures. Occasionally, a few non active pixels may appear on the screen as a fixed point of colour. This does not affect the performance of your product.

Note: This user manual is for reference only. Specifications are subject to change without notice.

Accessories

Remote Controller	1 pc
Battery(AAA)	2 pcs
User's Manual	1 pc
Quick Start Guide	1 pc

Troubleshooting

Before contacting the service technician, perform the following simple checks. If any problem persists ,unplug the TV and call for service:

PROBLEM	POSSIBLE SOLUTION
No sound and picture	<ul style="list-style-type: none"> - Check whether the main plug has been connected to a wall outlet. - Check whether you have pressed the POWER button on the TV set. - Check the picture contrast and brightness setting.
Normal picture but no sound	<ul style="list-style-type: none"> - Check the volume. - Sound muted? Press the MUTE button. - Try another channel, the problem may be with the broadcast. - Are the audio cables installed properly?
The remote control does not work	<ul style="list-style-type: none"> - Check to see if there any object between the product and remote control causing obstruction. - Are batteries installed with correct polarity(+ to +, - to -)? - Correct remote operating mode set: TV, VCR etc.? - Install new batteries.
Power is suddenly turned off	<ul style="list-style-type: none"> - Is the sleep timer set? - Check the power control settings. Power interrupted. -No broadcast on station tuned with auto activated.
Picture appears slowly after switching on	<ul style="list-style-type: none"> - This is normal, the image is muted during the product startup process. Please contact your service center, if the picture has not appeared after five minutes.
No or poor color or poor picture	<ul style="list-style-type: none"> - Adjust the color in menu option. - Keep a sufficient distance between the product and the VCR. - Try another channel, the problem may be with the broadcast. - Are the VIDEO cables installed properly? - Activate the any function to restore the brightness of the picture.
Horizontal/vertical bars or picture shaking	<ul style="list-style-type: none"> - Check for local interference such as an electrical appliance or power tool.
Poor reception on some channels	<ul style="list-style-type: none"> - Station or cable product experiencing problems. Tune to another station. - Station signal is weak, reorient antenna to receive weaker station. - Check for sources of possible interference.
Lines or streaks in pictures	<ul style="list-style-type: none"> - Check the antenna(Change the direction of the antenna).
No output from one of the speakers	<ul style="list-style-type: none"> - Adjust balance in menu option.

Maintenance

Early malfunction can be prevented. Careful and regular cleaning can extend the amount of time you will have your new TV. Be sure to turn the power off and unplug the power cord before you begin any cleaning.

Cleaning the screen

1. Here's a great way to keep the dust off your screen for a while. Wet a soft cloth in a mixture of lukewarm water and a little fabric softener or dish washing detergent. Wring the cloth until it's almost dry, and then used it to wipe the screen.
2. Make sure the excess water is off the screen, and then let it air-dry before you turn on your TV.

Cleaning the cabinet

To remove dirt or dust, wipe the cabinet with a soft, dry, lint-free cloth. Please be sure not to use a wet cloth.

Extended Absence



If you expect to leave your TV dormant for a long time (such as a vacation), it's a good idea to unplug the power cord and antenna to protect against possible damage from lightning or power surges.



The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, INC. and any use of such marks by TWG. is under license. Other trademarks and trade names are those of their respective owners and all rights are acknowledged.

WARRANTY CARD

This product is guaranteed against faulty materials and workmanship for a period of **three years** from the date of purchase with proof of purchase. Under this warranty, the warrantor's obligation to the purchaser is to remedy manufacturing faults by repairing or replacing faulty parts or, if unable to be remedied, replacing or refunding the product with proof of purchase. This warranty becomes void if the product has been tampered with or damaged in any other way by improper use. This product has been quality inspected. In the unlikely event of a deficiency, please contact the retailer from which this product was purchased.

WARRANTY FOR PRODUCTS USED COMMERCIALY LIMITED TO 90 DAYS

Please fill this in upon purchase in case you lose your receipt.

Model Number: _____

Serial Number: _____

Date of Purchase: _____

Receipt Number: _____

Store Purchased from: _____

IMPORTANT

Please retain this warranty card along with your purchase receipt. Please do not post to the retailer or importer. If service is required, both of these documents are to be returned with the product to your retailer, otherwise a fee may be charged.

Customer support line 0800 883 301

For assistance during normal working hours
Monday – Friday, 9am – 5pm, New Zealand local time



4 0 3 1 Q3 2 7 2 6 0