

145.00 mm 黑白 20201223

210.00 mm

living & co.



4 SLICE SANDWICH PRESS

Instruction Manual

Model: LW-8031

AFTER SALES SUPPORT
☎ (NZ) 0800 422 274

Contents

	Page
IMPORTANT SAFEGUARDS	3
PRODUCT OVERVIEW	4
BEFORE FIRST USE	4
GETTING STARTED	5
HOW TO USE	5
CLEANING AND CARE	6
STORAGE	6
WARRANTY	7

IMPORTANT SAFEGUARDS


When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury to persons, basic safety precautions should always be followed, including:

1. Read all instructions before operating and save for future reference
2. This appliance is for household use only. Do not use this appliance for other than its intended use. Do not use outdoors.
3. Do not touch hot surfaces, use the handle to lift the top plate.
4. Do not place this appliance on or near a hot gas or electric burner, or where it could touch a heated oven.
5. Do not let the cord hang over the edge of a table or counter, touch hot surfaces or become knotted.
6. Do not immerse cord, plug or appliance in water or any other liquid.
7. Do not use harsh abrasives, caustic cleaners or oven cleaners when cleaning this appliance.
8. Avoid touching hot surfaces during use as they may become hot and could cause burns. Allow to cool before cleaning.
9. The appliance should always be operated on a level, heat resistant surface. Operating the appliance on sinks, drain boards, uneven or inclined surfaces should be avoided.
10. Switch off and remove the plug from the power outlet before cleaning or when not in use.
11. If the supply power cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
12. The use of attachments or accessories not recommended or sold by this appliance manufacturer may result in fire, electric shock or personal injury.
13. Close supervision is necessary when any appliance is used by or near children.
14. This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
15. Children should be supervised to ensure that they do not play with the appliance.

CAUTION:

- To avoid a circuit overload when using this product, do not operate another high-wattage product on the same electrical circuit.
- A short power supply cord is provided with this product to minimise the risk of potential hazard from inadvertent placement of the cord on hot surfaces or trip hazards. An extension cord is not recommended for use with this product, but if one must be used:
 - The marked electrical rating of the cord must be at least as great as that of the product.
 - Arrange the extension cord so that it does not hang where it can be tripped over or pulled unintentionally.

PRODUCT OVERVIEW

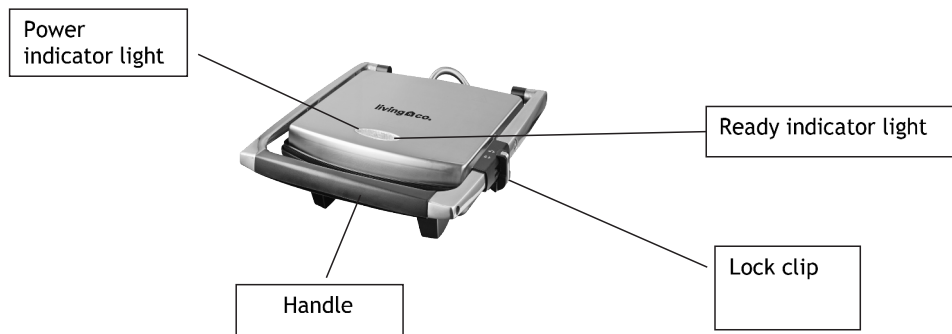

Specifications

Model	LW-8031
Power Consumption	2000W
Rated Voltage	220-240VAC 50Hz

BEFORE FIRST USE

- Read all instructions carefully and keep them for future reference.
- Remove all packing materials.
- Clean the cooking plates by wiping with a sponge or cloth dampened in warm water.

DO NOT IMMERGE THE UNIT AND DO NOT RUN WATER DIRECTLY ON THE COOKING SURFACES.

- Dry with a cloth or paper towel.
- For best results, lightly coat the cooking plates with little cooking oil or cooking spray.

Note: When your appliance is heated for first time, it may emit slight smoke or odour. This is normal with many heating appliances. This does not affect the safety or your appliance.

GETTING STARTED

- Place the product on a flat level cooking surface, and unclip the lock on the side of the unit.
- Wipe the surface of the cooking plates with a damp cloth and then dry the plates with a soft dry cloth.
- Ensure the unit is closed, and then insert the supply plug into the power outlet, the power indicator (orange light) will come on to indicate that the unit is on and heating.
- Preheating will take approximately 3-5 minutes to reach cooking temperature, the 'ready' indicator light (green) will switch on, at which point the appliance is ready for use. The 'ready' indicator light may cycle on/off during cooking (temperature regulation). The power indicator light (orange) will remain on until you unplug the appliance.

WARNING: The heated plates are extremely hot when in use. To avoid burn risk, avoid contact or wear heat resistant gloves. Only contact the black handle portion directly.

HOW TO USE

1. Wipe the cooking plates with cooking oil, butter or margarine. This will protect the non-stick surface of the plates during the pre-heating time. Once the unit reaches cooking temperature, the green light will turn off. Should you wish to do so, you can wipe off the excess oil, butter or margarine with a kitchen towel, please take care though, as the cooking plates will be hot.
2. Wait about 5 seconds, then lift the top cooking plate using the handle, and place the sandwich on the bottom cooking plate.
3. Lower the top cooking plate slowly. The top cooking plate is on floating hinge and will automatically adjust to the thickness of the sandwich in the unit.
4. Wait until the sandwich is toasted, usually about 6-8 minutes depending on how well browned you want your sandwich.
5. When the sandwich is cooked as desired, lift the top cooking plate using the handle and remove the sandwich cooked. Always use wooden or plastic cooking utensils to remove the sandwich, as this will extend the life of the non-stick coating on the plates.
6. Close the top cooking plate. Should you wish to make more sandwiches, allow the unit to re-heat to cooking temperature and follow the same procedure. When complete, remove the plug from the electrical socket.

CAUTION:

Do not use metal utensils on this product, as they will scratch and damage the Plates' non-stick coating.

Do not use this product to cook or defrost frozen food. All food must be completely defrosted before cooking it with this product.

NOTES:

- The cooking time for different foods depends on the type and thickness of the foods.
- Raw foods should be cooked thoroughly before consumption.

CLEANING AND CARE

- Always unplug the appliance and allow it to cool before cleaning. The unit is easier to clean when slightly warm. There is no need to disassemble your appliance for cleaning.
- Never immerse your sandwich press in water.
- Wipe cooking plates with a soft cloth or paper towel to remove food residue. For baked on food residue squeeze some warm water mixed with detergent over the food residue, then clean with a non-abrasive plastic scouring pad or place wet paper towels over the grille to moisten the food residue.
- Do not use anything abrasive that can scratch or damage the non-stick coating.
- Wipe the outside of the appliance with a damp cloth only. Do not place under running water
- Do not clean the outside with any abrasive scouring pad or steel wool, as this will damage the finish. Do not immerse in water or any other liquid.
- Do not place in the dishwasher.

STORAGE

- Always unplug your sandwich press before storage.
- Always make sure your sandwich press is cool and dry before storage.
- Never wrap the power cord around the appliance.



living & co.

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with 2 years warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This Product is covered by 2 years warranty when accompanied by proof of purchase