


**重点
校对项**


- 1. 版面尺寸
- 2. 材质标注
- 3. 物料编码
- 4. 颜色标注
- 5. 客户型号
- 6. 产品名称
- 7. 重量标注
- 8. 电压功率

	1	2	3	4	5	6
A	项目					
	库					
	文件名					
B						
C						
D						
E	技术要求(版本号: A, 2017-01)					
F	<p style="color: red;">备注: 此说明书英文第一、二、三页的警告大写字母字高大于3mm</p> <p>1、颜色: 单黑Pantone Black C印刷 2、尺寸(mm): 145x210, 采用钉装 3、此页仅做技术要求示意, 印刷内容从下一页开始</p>					
G	/					
H				慢炖锅 THB60		
				使用说明书		材料: 100克双胶纸
	标记	处数	更改文件号	签字	日期	
	制图	邹兰	审核	容培旺	图样标记	重量
	设计	-----	标准化	古广君	K	比例
	校对	-----	审定	古广君		1:1
	会签	-----	日期	20171205	共 页	第 页
	1	2	3	4	5	6

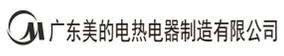

LIVING & CO[®]

Slow Cooker

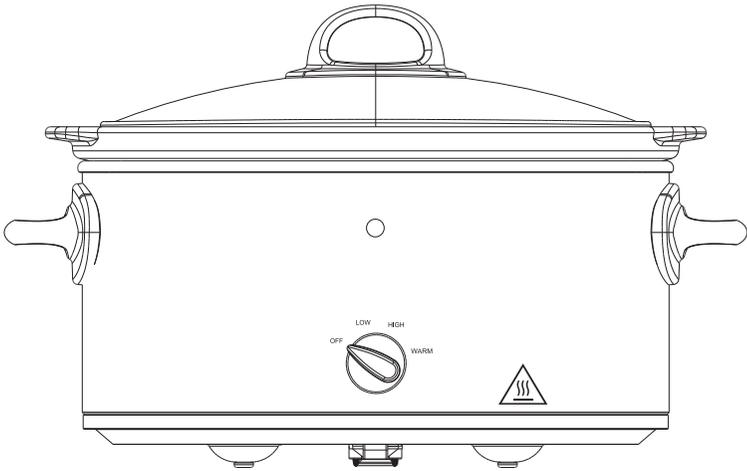

INSTRUCTION MANUAL

MODEL: SRO8320

AFTER SALES SUPPORT

 **NZ** 0800 422 274

CONTENT

IMPORTANT SAFEGUARDS..... 1

Part Name 3

Operating 4

General Cooking Advice 5

Cleaning & Maintenance 6

Product Specification 6

IMPORTANT SAFEGUARDS

Caution

For safety reasons and to avoid damage to the appliance or injuries to people, please abide by all the safety instructions below. Ignoring safety warnings may result in injuries.

This appliance does not take into consideration the following situations:

- Use by children or disabled people without supervision;
 - children treating it as a toy.
1. Read all instructions.
 2. This appliance is for household use only. Do not use outdoors.
 3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 4. Unplug from outlet when not in use and before cleaning. Allow to cool before cleaning.
 5. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 6. Children should be supervised to ensure that they do not play with the appliance
 7. The use of accessory attachments not recommended by the appliance manufacturer may cause injury.
 8. Please turn off and unplug the appliance before cleaning, maintenance or relocation and whenever it is not in use.
 9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
 10. Do not place on or near a hot gas or electric burner, or in a heated oven.

IMPORTANT SAFEGUARDS

Caution


11. Extreme caution must be used when moving an appliance containing hot food, water or other hot liquids.
12. Do not use the appliance for other than intended use.
13. Lift and open cover carefully to avoid scalding, and allow water to drip into unit.
14. To disconnect turn the control to OFF, then remove plug from wall outlet.
15. Containers are designed for use with this appliance only. They must never be used on a range top. Do not set a hot container on a wet or cold surface. Do not use a cracked container.
16. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
17. Do not immerse the appliance in water or any other liquid.
18. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
19. Children shall not play with the appliance. The surfaces of the appliance are liable to get hot during use.
20. To protect against electrical shock, do not immerse cord, plug or appliance in water or other liquid.
21. The heating element surface is subject to residual heat after use, do not touch.

IMPORTANT SAFEGUARDS

⚠ Caution

22. Warning: Misuse may cause potential injury
23. Do not touch hot surfaces. Use handles or knobs. Use potholders when removing cover or handling hot containers.
24. Do not place on or near a hot gas or electric burner, or in a heated oven.

Part Name

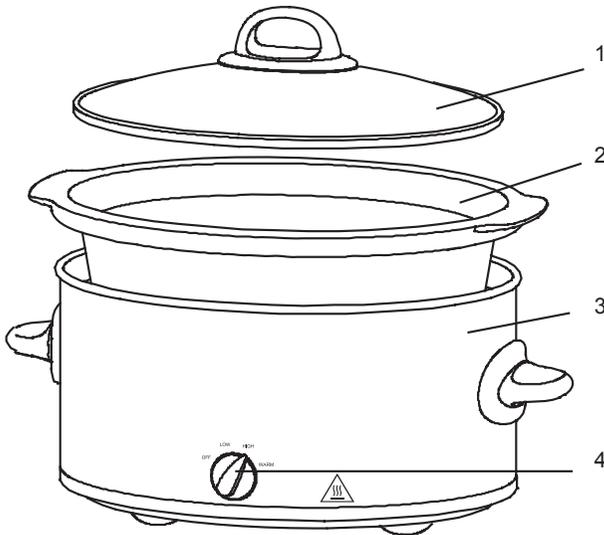

No.	Description
1	Glass Lid
2	Removable Bowl
3	Cooker housing
4	Function Switch

Operating

When using the slow cooker for the first time, wipe the Stainless Steel Body with a warm Damp cloth. Wash the Ceramic Pot and Glass Lid in warm soapy water.

Note:

- Do not use abrasive cleaners.

Using your slow cooker

1. Place the slow cooker on a flat surface.
2. Ensure the OFF position is selected on the function switch. Plug the power cord into the power outlet. Prepare the food to be cooked and place inside the removable bowl. Place the lid on the unit.
3. Note: Do not overfill the slow cooker. The bowl should never be more than two thirds full.
4. There are 4 operation settings.
 - OFF:Power off
 - LOW:Cooking time is 9-10 hours
 - HIGH:Cooking time is 7-8 hours
 - WARM:Keep warm
5. Select the desired heat setting: LOW,HIGH or WARM
Note: We do not recommend using the WARM setting for more than 4 hours.
6. When the food is ready to serve, turn the function switch to "OFF", then unplug from the wall outlet.

Caution: The temperature rise of a slow cooker is not fast enough to reheat cooked food.

Caution: All frozen meat, fish or poultry should be completely thawed before placing into the slow cooker. Otherwise the slow cooker will not reach the correct cooking temperature and the food will be under cooked.

General Cooking Advice

1. Cut root vegetables into small size as possible, preferably 5mm. as vegetables take a longer time to cook in a slow cooker. Vegetables should be placed on the bottom or against the sides of the bowl. Ensure that they are in the hottest part and are completely immersed during cooking. You may like to saute or partly boil root vegetables before cooking them in the slow cooker.
2. Trim excess fat from meat before cooking as the slow cooking method does not extract fat away from the meat.
3. As a general guide, "HIGH" temperature requires 7 to 8 hours and "LOW" temperature requires from 9 to 10 hours.
4. Browning food must be done in a separate pan before putting them to the slow cooker. This helps to lock in juices and improves the color of the food.
5. Use hot liquid when adding stock to the slow cooker as this will reduce the heating time.
6. Do not lift the glass lid to view the food. This will break the condensation seal around the lip of the bowl by releasing the heat, and the seal will take some time, 20 minutes (approximately) to form again thus making cooking time longer.
7. Ensure that the food or liquid is only until half of the bowl.
8. When braising meat or vegetables in liquid (for example pot roasting), ensure that the liquid completely covers the food.
9. Be conservative when adding strong flavored herbs and spices. The slow cooking process retains most flavors and makes the taste very concentrated.
10. If you need to speed up the cooking process, select HIGH and it will reduce to half of the recommended cooking time.
11. During cooking, start with a thicker sauce, the juices from the meat and vegetables will make it thin. Alternately, turn the unit to HIGH and stir in a mixture of corn flour and water 30 minutes before the cooking time is completed. Stir continuously until thickened. Be careful to avoid steam burns in doing this.
12. When the cooking is finished, switch the control knob to the OFF position and disconnect the plug from the power supply.
13. The slow cooker has a residual heat even if the switch is turned to OFF. If some of the food is to be eaten at a later time, turn the control knob to WARM and leave the cooker on.

General Cooking Advice

14. Transfer leftover food to a clean container and refrigerate. Never leave food to cool slowly in the slow cooker as the ceramic pot retains heat for many hours.
15. Cold leftover food should not be reheated in the slow cooker as the temperature is not fast enough to reheat food.

Cleaning & Maintenance

1. Before cleaning, ensure that the Slow Cooker is unplugged from the power outlet and has cooled sufficiently for safe handling. Remove the glass lid and the ceramic pot and wash in hot soapy water. If any food has stuck to the bottom, soak the ceramic pot in warm water and then scrub gently with a plastic scourers or brush. Rinse and dry thoroughly.
2. Do not immerse the outer body in water or any other liquid.
3. Wipe the outside of the body with a damp cloth and use a dry cloth to wipe the inside part.

Note: Do not use abrasive cleaners.

Warning: Do not fill the ceramic pot with cold water if the bowl is still hot, it will damage the pot. To wash the removable bowl right after cooking, use hot water.

Product Specification

Product name	Model No.	Rated voltage	Rated frequency	Rated power	Capacity
Slow Cooker	SRO8320	220 - 240V~	50/60Hz	200 - 240W	5.7L

Environmental protection

Responsible Disposal

At the end of its working life, do not throw this product out with your household rubbish. Electrical and electronic products contain substances that can have a detrimental effect on the environment and human health if disposed of inappropriately. Observe any local regulations regarding the disposal of electrical consumer goods and dispose of it appropriately for recycling. Contact your local authorities for advice on recycling facilities in your area.

Please keep the original packaging carton and materials in a safe place. It will help to prevent any damage if the product needs to be transported in the future. In the event it is to be disposed of, please recycle all packaging material where possible.



LIVING & CO[®]

Warranty

We pride ourselves on producing a range of quality home appliances that are both packed with features and completely reliable. We are so confident in our products, we back them up with a 3 year warranty.

Now you too can relax knowing that you are covered.

Customer Helpline NZ: 0800 422 274

This Product is covered by 3 year warranty when accompanied by proof of purchase.