NOSTALGIA™



MY-C007

Cotton Candy Maker

Instructions and Recipes

Marketed by:
The Warehouse Ltd.
26 The Warehouse Way,
Northcote,Auckland 0627
0800 422 274

Make every day a party!
Visit **www.nostalgiaproducts.com** for more fun products.

Contents

SAFETY	2
IMPORTANT SAFEGUARDS	3
PART & ASSEMBLY	5
OPERATING INSTRUCTIONS	6
CLEANING AND MAINTENANCE	8

SAFETY

Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can cause serious injury to you and others.

All safety messages will follow the safety alert symbol.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Appliance Specifications:
220-240Volts, 50/60 Hz
500 Watts

THIS PRODUCT IS FOR USE IN 220-240V AC OUTLET ONLY.

IMPORTANT SAFEGUARDS

Read this manual thoroughly before first use, even if you are familiar with this type of product. The safety precautions enclosed herein reduce the risk of fire, electric shock and injury when correctly adhered to. Please keep this user manual in a safe place along with your purchase receipt and carton for future reference. If applicable, pass these instructions and packaging on to the next owner of the appliance. Always follow basic safety precautions and accident prevention measures when using an electrical product.

1. Before turning on the Cotton Candy Maker, ensure the electrical voltage and frequency of the circuit corresponds to those indicated on the rating label of the product.
2. To protect against fire and electric shock, do not immerse the product, cord set or plug in water or any other liquid.
3. Do not use an extension cord unless completely necessary with the Cotton Candy Maker. If an extension cord is used, please ensure that it has a rating equal or exceeding the rating of this product.
4. Do not pull or carry by the cord, use the cord as a handle, close a door on the cord, or pull the cord around sharp edges or corners. Keep the cord away from heated surfaces.
5. Do not bend or damage the power cord.
6. Never force the plug into an outlet.
7. Always unplug the Cotton Candy Maker when not in use. To disconnect from the power supply, grip the plug and pull from the power socket. Never pull by the cord.
8. The plug must be removed from the power outlet before cleaning, servicing or maintaining the Cotton Candy Maker.
9. To avoid a hazard, do not use the Cotton Candy Maker if the plug, cord or the Cotton Candy Maker itself is damaged. Please return to your place of purchase along with your receipt for a refund or exchange.
10. Do not operate or place any part of the Cotton Candy Maker on or near any hot surfaces (such as a gas or electric burner, or a heated oven).
11. Do not use the Cotton Candy Maker in the immediate surrounds of a bath, shower or swimming pool.
12. The Cotton Candy Maker is intended for indoor household use only and not for commercial purposes.
13. This appliances is intended to be used in household and similar applications such as:
    a. staff kitchen areas in shops, offices and others working environments;
    b. farm houses;
    c. by clients in hotels, motels and other residential type environments;
    d. bed and breakfast type environments.

IMPORTANT SAFEGUARDS (CONT.)

14. Do not use the Cotton Candy Maker for any purpose other than its intended use.
15. **Close supervision** is necessary when any appliance is used by or near children. The Cotton Candy Maker is not a toy. Supervise young children to ensure they do not play with this product.
16. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety.
17. Do not leave the Cotton Candy Maker unattended when plugged in. Always switch off and unplug when you are not using the Cotton Candy Maker.
18. The use of attachments not sold or recommended by the manufacturer may cause fire, electric shock or injury.
19. Improper installation may result in the risk of fire, electric shock and/or injury to persons.
20. The Cotton Candy Maker is not intended to be operated by means of an external timer or any type of separate remote control system.
21. To reduce the risk of electrocution, never operate this product with wet hands, submerge in water or spill liquids into the product.
22. Do not use the Cotton Candy Maker near a window as rain may cause electric shock.
23. Do not cover the appliance whilst in use. If it is covered there is a risk of fire.
24. Do not place the Cotton Candy Maker in a dishwasher.
25. Inner parts of the Cotton Candy Maker can get very hot while in use. Be cautious when handling the Cotton Candy Maker during operation.
26. Care must be taken when handling the Cotton Candy Maker after use. Do not touch hot surfaces and always allow the unit to cool completely before storing the Cotton Candy Maker.
27. Do not block the extractor head when the machine is in use.
28. Always keep jewellery, long hair, hands and face a safe distance from the extractor head as it rotates at high speeds.
29. To prevent damage to the appliance do not use alkaline cleaning agents. When cleaning, use a soft cloth and a mild detergent.
30. Keep hands away from the machine when it is in the ON position and is spinning.

SAVE THESE INSTRUCTIONS!

PARTS & ASSEMBLY

Take the unit out of the box and wipe down the unit exterior and bowl with a non-abrasive cloth or sponge before using.

To attach the Extractor Head, push down onto the stem and make sure that the grooves are properly aligned to fit over the pegs on the stem.

To attach the Bowl, carefully push the bowl down and turn counterclockwise until it locks into place. Then attach Rim to Bowl by snapping in place.

Now you are ready to enjoy tasty, fluffy cotton candy from your COTTON CANDY MAKER.





1 Clear Rim
2 Bowl
3 Extractor Head / sugar container
4 Main Body
5 On/Off Switch
6 Sugar Scoop / Stick


OPERATING INSTRUCTIONS

1. Place the unit on a flat, stable surface and insert the cord into a power outlet.
2. Turn unit to ON position and allow it to warm up for approximately 10 minutes.
3. Once the Cotton Candy Maker has warmed up, switch off the unit by pressing the **OFF** switch.
4. Carefully pour sugar (1 Tbsp.) into the sugar container on the extractor head using the scoop or alternatively you can use 2 pieces of hard candy.
5. Switch to ON position.
6. When you see the cotton candy web begin, use the stick (sugar scoop shaft) to roll and collect the cotton candy as it dispenses.
7. When all the sugar has dispensed, switch off the Cotton Candy Maker by pressing the OFF switch.
8. Repeat the above steps to make more cotton candy. Make sure the extractor head is empty before adding more sugar.
   NOTE:
   If your unit is producing very little cotton candy, your extractor head may be clogged with sugar. In this case, turn the unit off and wait for the extractor head to stop spinning and cool down completely. You will then need to clean the extractor head and remove any clogged sugar.
   NOTE: If using hard candy, make sure they are evenly placed on either side of the extractor head.
   NOTE: The unit may emit a slight burning smell when it is first being used. This is normal and will cease with continued use.
   WARNING: Failure to fully secure extractor head may result in injury.
   WARNING:
   DO NOT overfill the Extractor Head by adding more than two candies or 1 tbsp. of sugar at a time. This may clog the unit or cause the sugar to fly from the extractor head.
   WARNING:
   Make sure cotton candy webbing does not fall into the heating element as sugar is flammable. Turn off the unit and allow it to cool before removing fallen webbing from the heating element.
   NOTE: Wooden skewers or paper cones can also be used to collect the cotton candy.
   WARNING:
   Close supervision is necessary when this appliance is used by or near children. The appliance has **dangerous moving parts**, keep fingers clear of the Extractor Head!


OPERATING INSTRUCTIONS CONTINUED

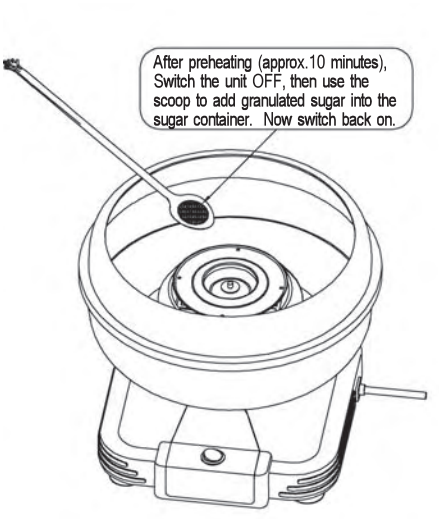

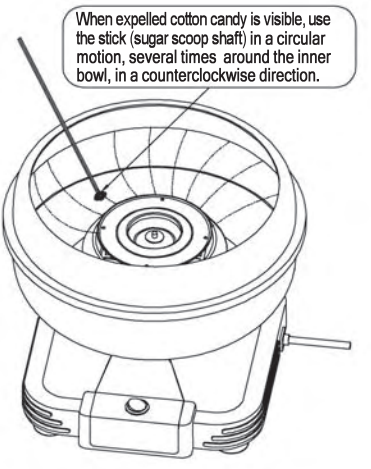

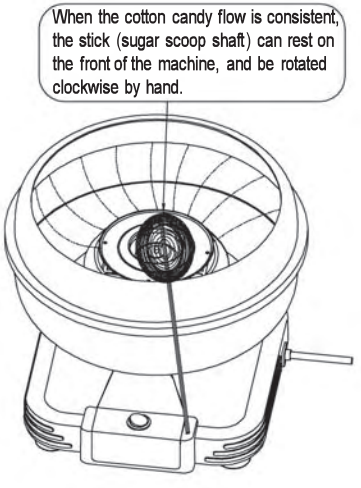

④

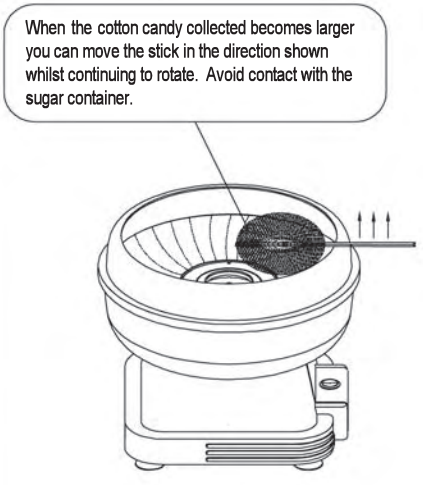

CLEANING & MAINTENANCE

1. Make sure the unit is **unplugged** and allow the unit to cool down completely before performing any cleaning.
2. After cooling, remove the Extractor Head by firmly gripping both sides and pulling straight up. UNLOCK bowl by turning clockwise and lifting. Wash both in warm water, rinse and dry.
3. Use a clean, slightly damp, non-abrasive sponge or non-abrasive cloth to wipe down the outside of the unit, then wipe with a non-abrasive towel to dry.

   NOTE:

   If it is hard to remove the leftover sugar from the extractor head, leave the extractor head to soak in warm soapy water for up to 10 minutes.

4. Store the unit in a clean and dry place, out of children's reach.
5. Do not place heavy objects on top of the Cotton Candy Maker during storage.
6. Take care with the extractor head, any impact force or damage may cause the unit to run out of balance which will result is excessive vibration and poor performance.

NOSTALGIA™

PRODUCTS

All products are trademarks of Nostalgia Products LLC.
Worldwide design & utility patented or patents pending.
© 2023 Nostalgia Products LLC.

www.nostalgiaproducts.com

(rev. 10/31/23 ES)