ICE MAKER



INSTRUCTION MANUAL

MODEL: IMB1000-GS

Content

Important Safety Instructions	1-2
Product Overview	3-4
Before The First Use	5
Using Your Ice Maker	6-7
Cleaning And Maintenance	7-8
Troubleshooting	9
Technical Parameters	10
Warranty	11

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, explosion, electric shock, or injury when using your ice maker, follow these important safety instructions:

1. Before using check that the voltage power corresponds to the one shown on the appliance nameplate.
2. Do not remove any safety, warning, or product information labels from your ice maker.
3. Plug the ice maker into an exclusive grounded power outlet. No other appliance should be plugged into the same outlet. Be sure that the plug is fully inserted into the receptacle.
4. This appliance must be grounded. It is equipped with a power cord having a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.
5. Avoid the use of an extension cord because it may overheat and cause a risk of fire. However, if it is necessary to use an extension cord:

1) Use only extension cord with grounding plug.
2) The marked rating of an extension cord must be equal to or greater than the rating of this appliance.
3) It should be positioned such that it does not drape over the counter or tabletop where it can be pulled on by children intentionally.


6. Do not operate any appliance with a damage cord or plug or after the appliance malfunction or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
7. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
8. Do not let cord hang over edge of table or counter.
9. Do not place on or near a hot gas or electric burner, or in a heated oven.
10. Place power cord in such a way it cannot be pulled on by children or cause a tripping hazard.
11. Place power cord in such a way that it is not in contact with hot surfaces.
12. The use of attachments not recommended or sold by manufacturer may cause fire, electric shock or injury.
13. Avoid direct contact with the evaporator or ice cube inner assembly to avoid injury.
14. Do not immerse any part of the product in water.


15. To disconnect, turn any control to “OFF”, then remove plug from wall outlet.
16. Do not plug or unplug product with wet hands.
17. Unplug the product before cleaning, maintaining and when not in use.
18. Do not use with water that is microbiologically unsafe or of unknown quality.
19. Do not clean your ice maker with any flammable fluids. The fumes may create a fire hazard or explosion.
20. Do not overturn the ice maker when containing water. If overturned accidentally, allow it to stand for 2 hours before reconnecting power and switching on again.
21. If the ice maker is transferred from a very cold ambient (less than 8degrees C) to a warm environment (>8degrees C), allow to thermally stabilize for several hours, allowing the unit to warm up to the room temperature before operating.
22. Never put flammable, explosive and corrosive items or liquids into the ice maker. 23. Never use the ice maker when there is flammable gas leakage.
24. Never store or use gas and other flammable articles near the ice maker to avoid hazards.
25. Unplug the ice maker before moving it to avoid damaging the refrigerating system.
26. Do not attempt to disassemble, repair, modify, or replace any part of your product. 27. This appliance is not intended for used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
28. Children should be supervised to ensure that they do not play with the appliance. 29. Close supervision is necessary when any appliance is used by or near children.
30. Do not leave the appliance unattended while in use.
31. Do not use outdoors.
32. Do not use the appliance for other than intended use.
33. Please note that the appliance uses flammable blowing gas and refrigerants, check with your local council regarding safe and environmentally friendly disposal of the appliances when it reaches end of life.


SAVE THESE INSTRUCTIONS


HOUSEHOLD USE ONLY

PRODUCT OVERVIEW

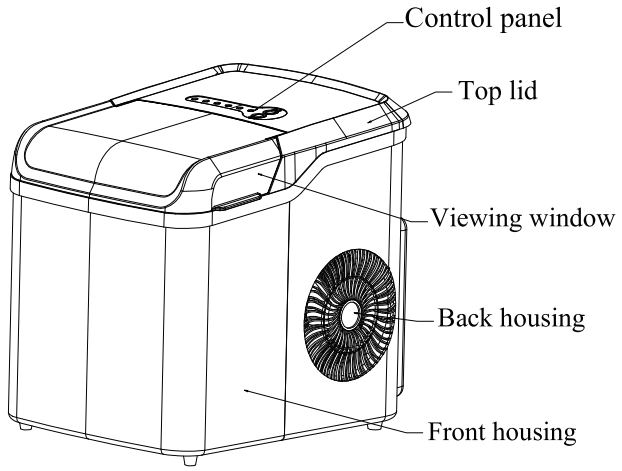

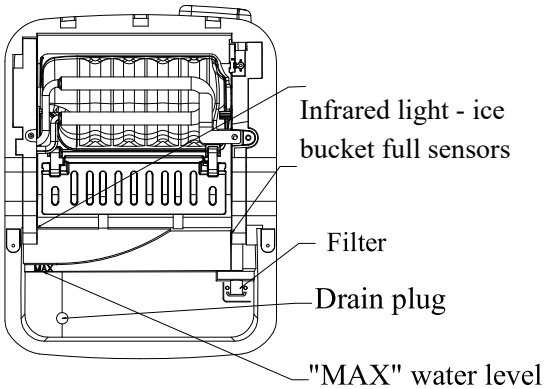


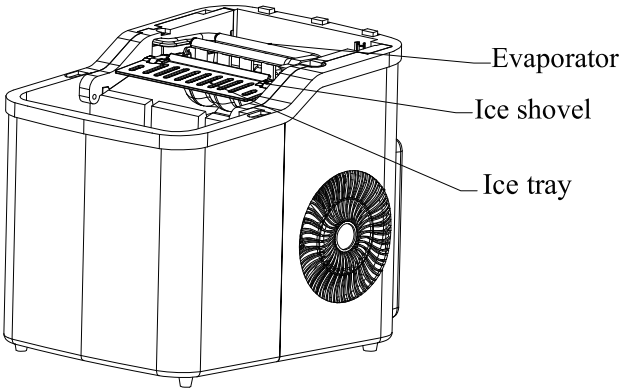

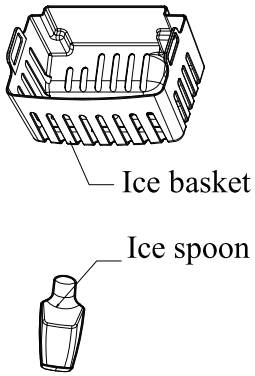

(Images are for indicative purposes only and may differ from actual product)

CONTROL PANEL

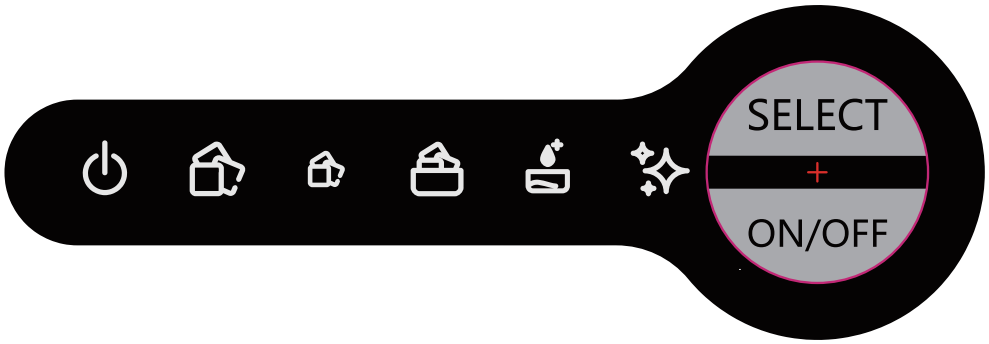

Indicators/ Controls	Function
ON/OFF	ON/OFF control buttons, start or stop the appliance.
	Standby mode: this indicator blinks; When in operation this indicator illuminates fully.
	This indicator illuminates when the ice basket is full.
	This indicator lights up when the water reservoir is out of water and requires topping up.
	The indicator lights up when the select button is used to select small ice cubes.
	The indicator lights up when the select button is used to select large ice cubes.
	The indicator lights up when the cleaning mode is selected.
SELECT	SELECT Button to choose functions “ ”, “ ” or “ ” under standby mode.

BEFORE FIRST USE

1. Unpack the appliance, then check and make sure that all the accessories including ice basket and ice scoop etc, are complete.
2. Please ensure the ice maker is level and on a stable table or support surface.
3. The incline angle of the ice maker cabinet should not exceed 45° during transportation or use. Do not turn the ice maker upside down. Doing so could cause the compressor or refrigerating system to operate incorrectly. Please allow time for the fluids in the compressor to settle after the ice maker is moved or transported. Before using the ice maker for the first time, please wait for 2 hours after the unit has been leveled and positioned on the bench.
4. The appliance must be placed on a dry surface with sufficient ventilation, away from heat sources such as ovens, heaters and corrosive gases. Leave about a 6-inch (15cm) clearance on all sides of the ice maker for proper ventilation.
5. Do not fill the water reservoir with hot water. This may damage the ice maker. It is best to fill the water reservoir with water at room temperature or lower.
6. Do not use the appliance in a very cold environment (lower than 5°C).
7. Clean the appliance by following the operation of **"CLEANING AND MAINTENANCE"** before first use.

USING YOUR ICE MAKER

1. Ensure that the drain plug at the bottom of water reservoir is securely closed (refer CLEANING AND MAINTENNCE Section).
2. Plug the ice maker into the wall outlet, the “  ” indicator blinks.

NOTE: Please allow the ice maker to rest for 30 minutes before plugging in, if it has been moved prior.

3. Open the top lid and remove the ice basket.
4. Fill the water reservoir with clean cool drinking water.

NOTE: Do not fill above the MAX water level mark.

5. Replace the ice basket and close the top lid.
6. Press “ ON/OFF ” button, and the “  ”indicator will illuminate fully. Then press ” SELECT ” button to select the ice cube size (small / large). If need to clean the appliance, press “ SELECT ” button to select “  ” function under standby mode.
7. The ice-making cycle will last approximately 7-15 minutes, depending on the ambient temperature and water temperature.
8. The ice-making cycle starts with water being pumped into the ice tray situated below the evaporator. Over the next 7-15 minutes ice forms on the evaporator. Once this has completed, the ice tray will tilt backwards and the remaining water in the ice tray is drained back into the water reservoir. The ice cubes are then dropped from the evaporator and pushed forward into the ice basket by the ice shovel. The ice tray will automatically move back into position under the evaporator and start the next cycle.
9. The “  ” indicator will activate when the ice basket is full and then the ice maker will stop the ice-making cycle automatically. Gently remove the ice from the ice basket with the ice scoop. About 8 seconds later, the ice maker will restart its ice making function automatically.

10. The “  ” indicator will light up when the water reservoir is depleted of water and the ice-making cycle will stop automatically. At that time, remove the ice basket and add water to the water reservoir, and then press “ ON/OFF ” button again to restart the ice-making cycle. The appliance will start working automatically after about 20 minutes if the operator forgets to restart the appliance after refill.

11. When you have your desired amount of ice, stop the ice making cycle by pressing the “ ON/OFF ” button and unplug the unit from the wall outlet.

12. Open the top lid and transfer the ice to a freezer.

13. Allow the ice maker to reach room temperature.

14. It is recommended to replace the water every week. Please empty the water reservoir if the ice maker is not to be used for an extended period.

CLEANING AND MAINTENANCE

To keep your ice tasting fresh and your ice maker looking great, we recommend cleaning your ice maker once per week.

1. Stop the ice-making cycle by pressing the “ ON/OFF ” button, unplug the ice maker from the wall outlet and allow it to warm up to room temperature.

2. If residual water is found in the ice tray, gently push the ice tray back so that all water drains into the water reservoir.

3. Move the appliance forward to overhang a bench or support surface (approximately 60mm) and open the drain plug to drain out excess water (see Fig.1, Fig.2 and Fig.3).

4. Check and make sure the drain plug is securely closed. Fill the water reservoir with clean water, press ‘ SELECT ’ button until the ‘  ’ indicator flashes, then press the “ ON/OFF ” key , the pump will start to pump water and keep running for 5minutes, and it will enter into standby condition after running for 5 minutes, finally, open the drain plug and empty the water.

5. Remove the ice basket.

6. Clean the ice maker interior with a soft cloth soaked with warm water and vinegar, then rinse with clean water and then drain all the water.

7. Replace the drain plug securely. Wash the ice basket and ice scoop in warm soapy water. Rinse and dry.


8. Clean the exterior of the ice maker with a soft damp cloth. Use a mild dishwashing soap, if necessary.

NOTES:


*Do not use organic solvent, boiling water, detergent, strong acid and strong alkali etc. for cleaning.

*Do not clean the evaporator.


*Please empty the water reservoir and dry it for storage if the ice maker is not to be used for an extended period.

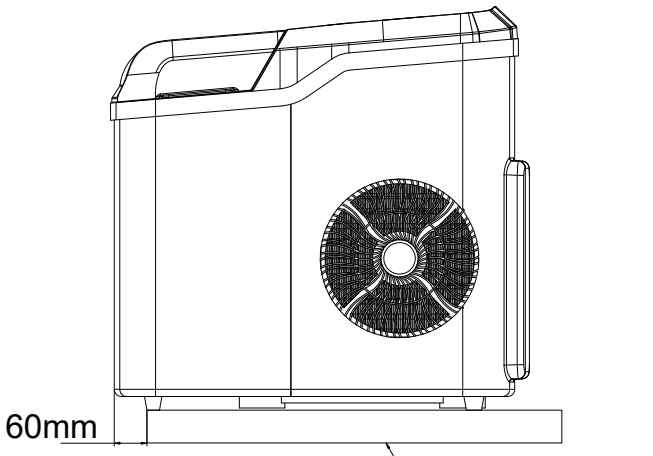

（Fig.1）

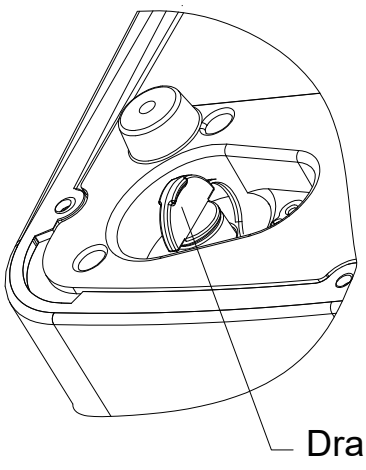

（Fig.2）

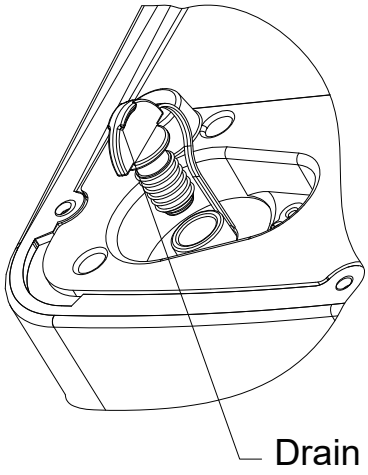

（Fig.3）

TROUBLESHOOTING

Problem	Possible causes	Solution
"  " indicator turns on	1.Low water level or lack of water 2.The water screen at the bottom of water reservoir is blocked.	1. Stop making ice, refill water and then press "ON/OFF" key to restart ice-making cycle. 2.Clean and restart.
"  " indicator lights up	1.Ice basket is full, and the infrared sensor light is blocked by the ice. 2. Infrared sensor light is not working.	1. Remove the ice from ice basket. 2. Wipe up the foreign objects on the infrared light-sensors and restart the ice maker.
The ice collects together.	Making ice takes too much time.	Stop making ice and restart the ice-making cycle after the ice melts.
	The water in the water reservoir is of too low temperature.	Fill the water reservoir with water ranges between 8℃ and 25℃.
The ice-making cycle seems normal, but no ice is produced.	The ambient temperature or water temperature is too high.	Start the ice-making cycle within an environment with an ambient temperature less than 32° C and fill the water reservoir with some cold water.
	Refrigerating system leaks	Call customer service
	Refrigerating system does not function	Call customer service
Poor ice-making result	1.Poor heat dissipation. 2.The water temperature is too high. 3.The ambient temperature is too high.	1. Leave a 6-inch clearance on all sides of the ice maker for proper ventilation. 2. Fill the water reservoir with water ranges between 8℃ and 28℃. 3. Operate the ice maker at a environment with an ambient temperature between 10℃ and 32℃.
Water pump does not work or produces noise.	1. Water pump is damaged. 2. The appliance has not been cleaned for a long time, which has resulted in the formation of mucoid substance at the water inlet of the water pump, so that the water-pumping is not smooth. There is air in the water pipe, so there will be resonance noise produced when pumping water.	1. Contact the after-sales department for replacing the water pump. 2. The appliance should be cleaned in one to two weeks, and some neutral cleaning agents (such as detergent and soapy water etc.) can be added if necessary.

TECHNICAL PARAMETERS

Model: IMB1000-GS
Applicable climate: ST/SN/N/T
Class: I
Power source: 220-240V/50Hz
Rated power:150W
Refrigerant/Refrigerant amount: R600a / 20g
Foaming agent: EPS
Net weight:6.1kg
Housing:PP
Unit size（DXWXH)：L292×W238×H282mm



living & co.

Warranty

We pride ourselves on producing a range
of quality home appliances that are both packed with features,
and completely reliable. We are so confident in our products,
we pack them up with a 2 year warranty.
Now you too can relax knowing that you are covered.
Customer Helpline NZ: 0800 422 274
This product is covered by a 2 year warranty when
Accompanied by proof of purchase.
IM Version 1.0 –July, 2025