

Bedside Cabinet

1.0hr

APPROXIMATE ASSEMBLY TIME

1 PERSON ASSEMBLY




FLOOR AREA
1M x 2M




REQUIRED ASSEMBLY SPACE


REQUIRED ASSEMBLY TOOLS



PHILLIPS SCREWDRIVER

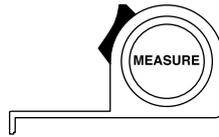


MEASURING TAPE

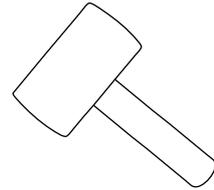

SOFT Mallet/HAMMER

ASSEMBLED DIMENSIONS

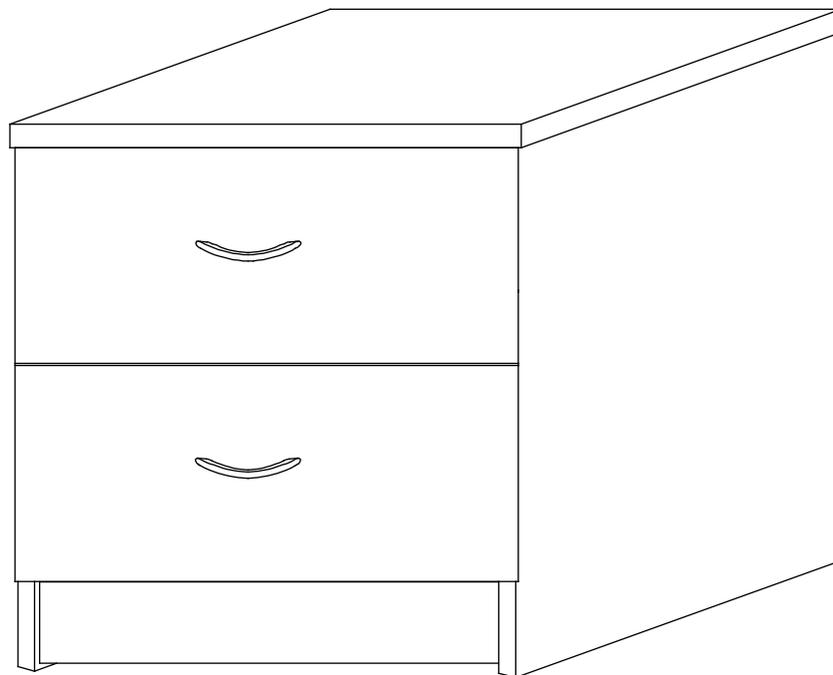

Bedside Cabinet

Tips before you start:

1. Please check that all parts are present before you start the assembly of your furniture.
2. For ease and speed of assembly, we recommend that before you commence each step of the assembly, that you identify all the parts required for that step.
3. For larger items, please ensure that you have sufficient space and people (as indicated on page 1) to assemble your product safely.
4. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily once assembled.
5. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent any damage.
6. During assembly please take care not to over-tighten any fittings, as this may damage the product.
7. Always place the product on a flat, steady and stable surface.
8. Do not stand on the product. Do not use the product as a stepladder.
9. This product is intended for indoor, household use only as it is a non-industrial product.


Care and Maintenance of your Furniture

- Please periodically check all fittings and re-tighten as necessary.
- To clean your item, please use a damp cloth and wipe clean.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or finishes to de-laminate.
- Please do not place hot items (eg. Hot drinks) directly on to the surface.
- Please do not drag and pull your furniture.

Bedside Cabinet


Tips before you start:

QUICKFIT

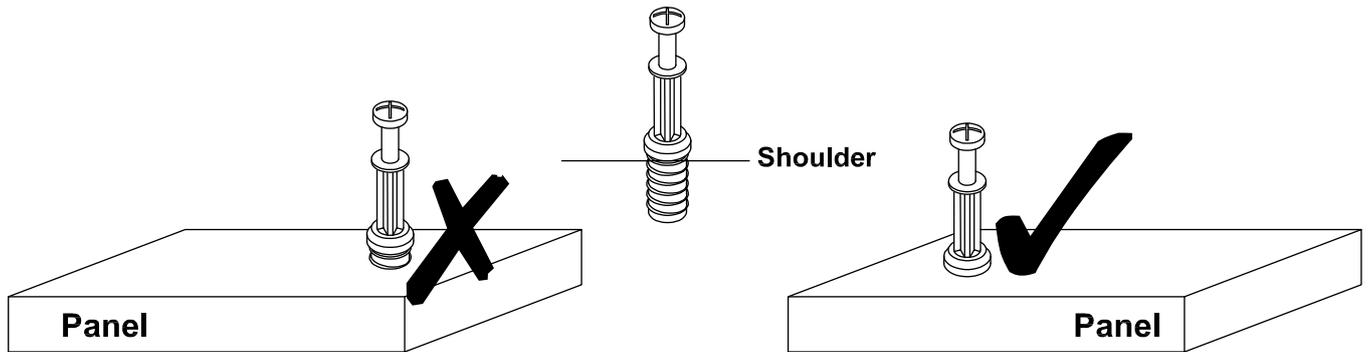

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

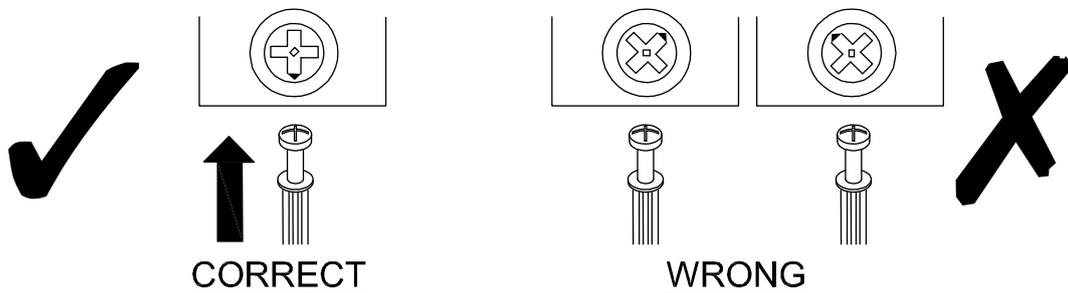

When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

Quickfit head should be in the centre of the cam lock when the two panels are joined.


Cam lock should be inserted before quickfit.

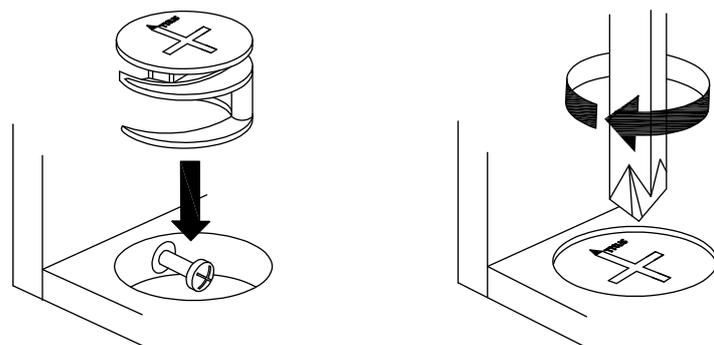








Turn cam lock clockwise to tighten.

Bedside Cabinet

HARDWARE LIST

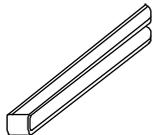						
4 x A Quickfit Screw Large 29mm	4 x B Cam Lock Large 15mm	8 x C Quickfit Screw Small 19mm	8 x D Cam Lock Small 12mm	4 x E Screw 4 x 40 mm	8 x F Screw 4 x 30 mm	4 x G Screw 4 x 28 mm
						
12 x H Screw 4 x 14 mm	8 x I Wooden Dowel	2 x J Handle	4 x K Drawer Stopper	4 x L Drawer Runner Outer	4 x M Sticker	12 x N Nail

PARTS LIST

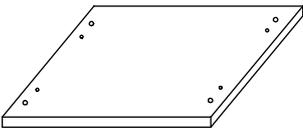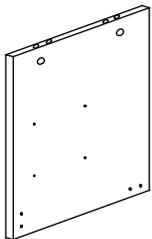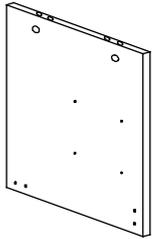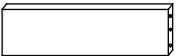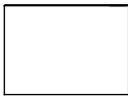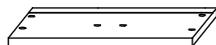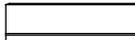							
1	1 PC	2	1 PC	3	1 PC	4	2 PCS
							
5	2 PCS	6	2 PCS	7	2 PCS	8	2 PCS
							
9	2 PCS	10	1 PC				


Bedside Cabinet

STEP 1

DRAWERS


1.1

Fix panels 7 and 8 to panel 9 using screws (F), as shown.

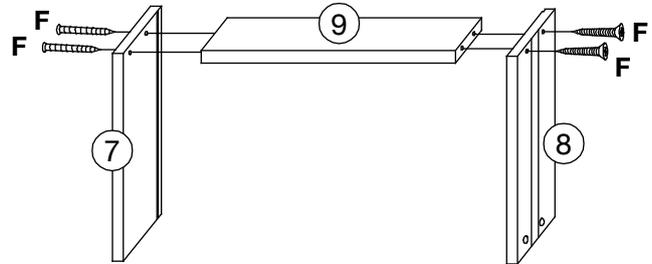

1.2


Slot base panel 5 into place between panels 7 and 8.

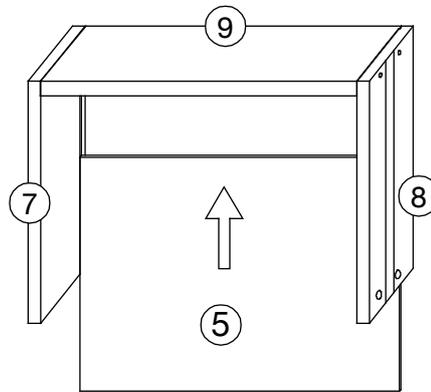

1.3

Carefully fit small quickfit screws (C) to panel 6.


Fix drawer handles (J) to panel 6 using screws (G).

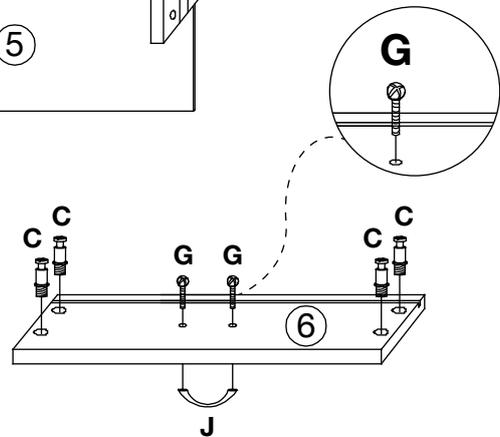

1.4

Insert small cam locks (D) to panels 7 and 8.

Fit panel 6 to assembled drawer.
Turn cam locks clockwise to tighten.

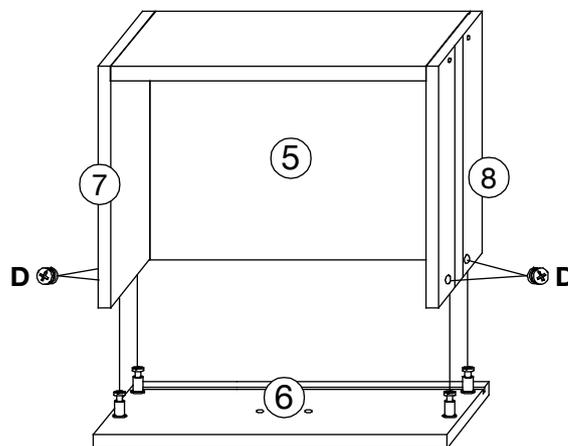


x2

Repeat Step 1 for both drawers.

Bedside Cabinet


STEP 2

Fix outer drawer runners (L) to panels 2 and 3 using screws (H), as shown.

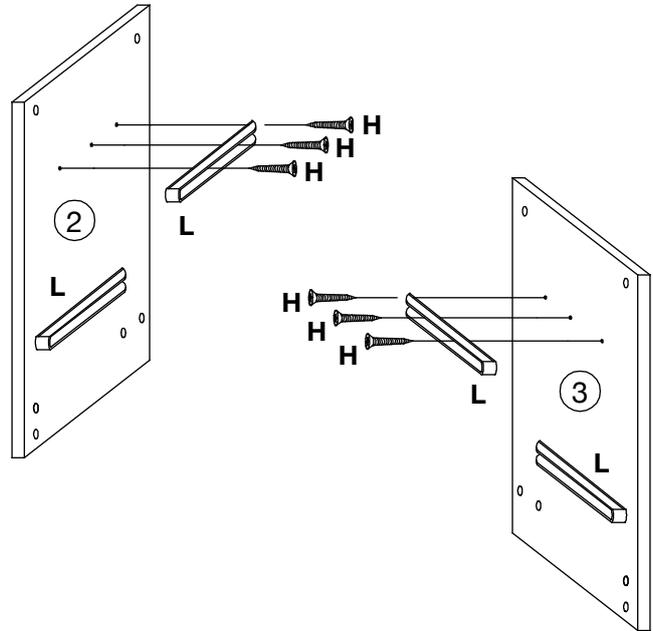

STEP 3

Fit wooden dowels (I) to panels 4, as shown.

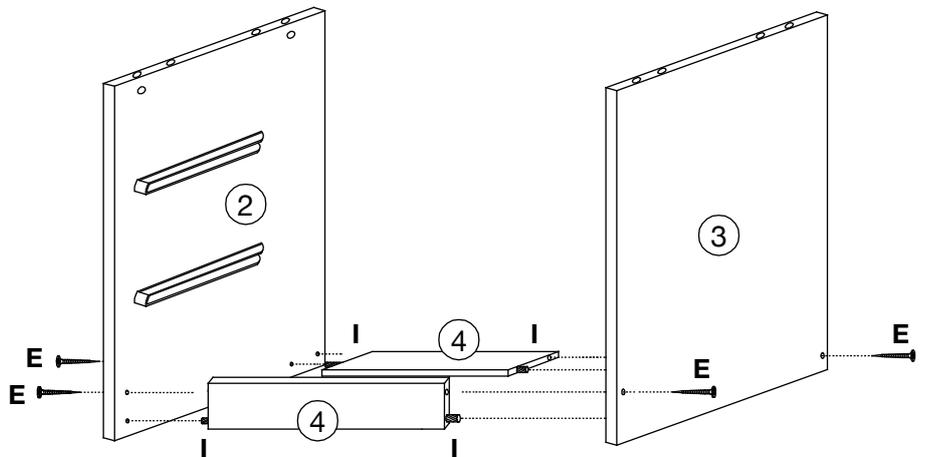


Fit panels 2 and 3 either side of panels 4, as shown.

Secure using screws (E).

Bedside Cabinet

STEP 4

Cover visible holes with stickers (M), as shown.

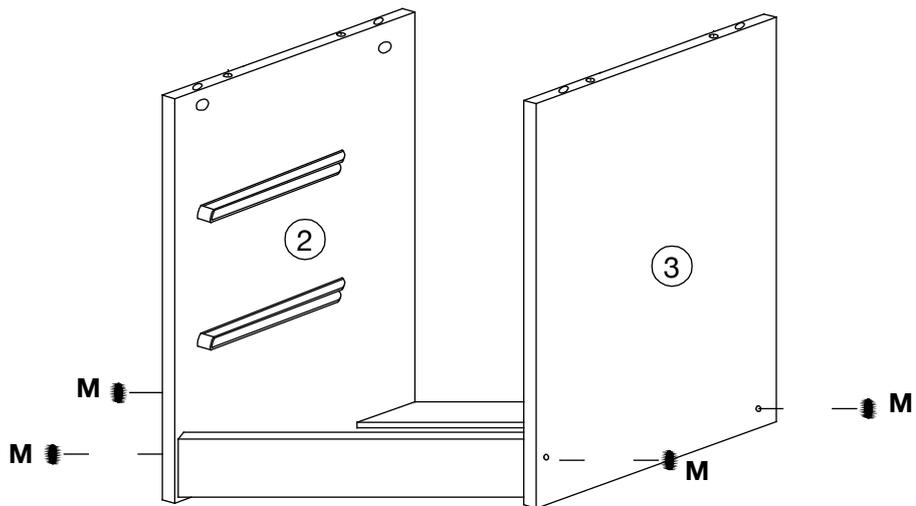


STEP 5

Carefully fit large quickfit screws (A) to top panel 1, as shown.

Fit wooden dowels (I) to panels 2 and 3, as shown.

Insert large cam locks (B) into panels 2 and 3, as shown.


Lower top panel 1 into place on top of unit.
Turn cam locks clockwise to tighten.

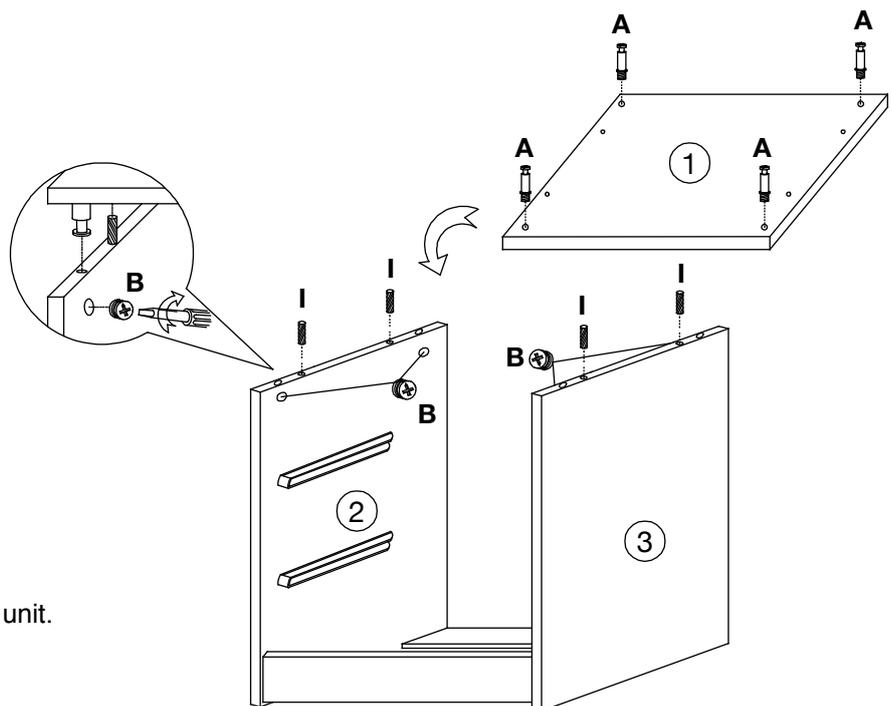

Bedside Cabinet


STEP 6

Fix back panel 10 to rear of unit using nails (N), as shown.

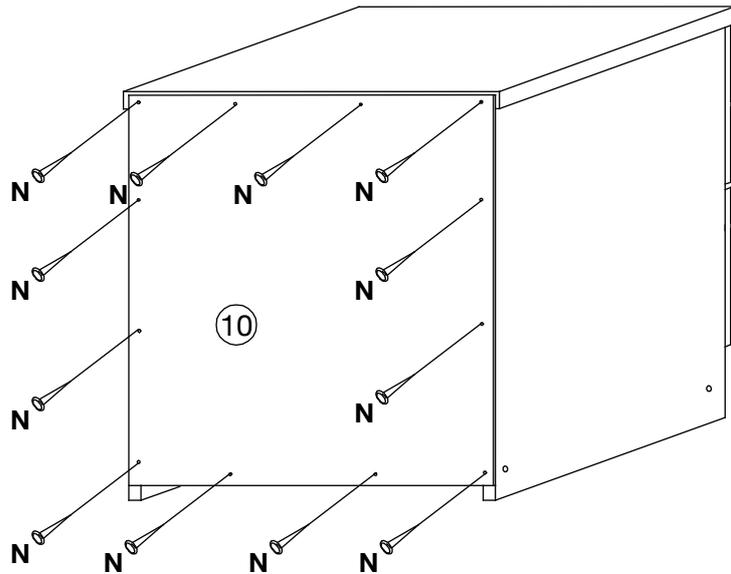

STEP 7

Insert drawers (step 1) into assembled unit.

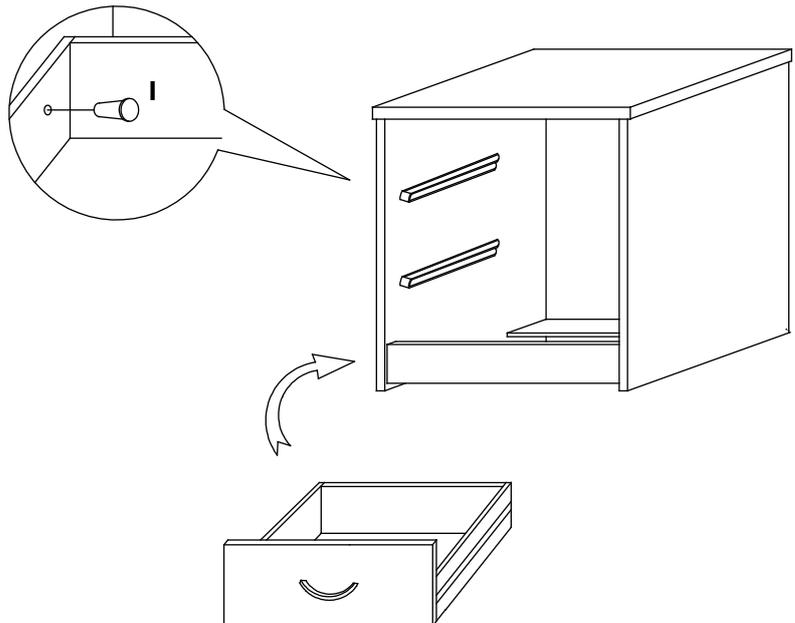

Once inserted, fit the drawer stoppers (I) from the inside of each drawer to secure.

Your Bedside Cabinet is ready for use.

Maximum recommended weight: 10kg per drawer