


LIVING & CO[®]

Tākiwira Bedside Table

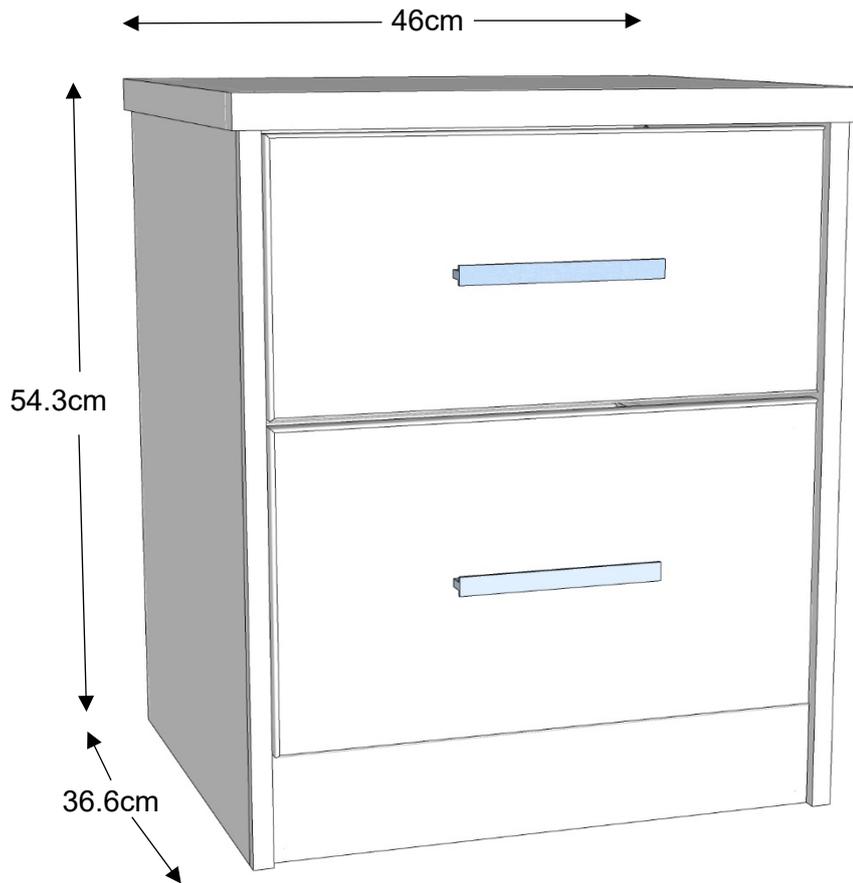


INSTRUCTION MANUAL

Maximum recommended weight 15kgs per drawer



5 YEAR WARRANTY

Assembly Details

<p>60 Min</p> <p>Approximate Assembly Time</p>	<p></p> <p>1 Person Assembly</p>	<p>Floor Area 3m x 2m</p> <p></p> <p>Required Assembly Space</p>
<p></p> <p>Tools Required</p>		

Tips before you start

1. For the protection of your furniture, we recommend that the product is placed on a protected surface during assembly to prevent damage
2. Please check that all parts are present before you start the assembly of your furniture
3. For ease and speed of assembly, we recommend that you identify all the parts required for each step before commencing with assembly
4. For larger items, please ensure that you have sufficient space (as indicated on page 1)
5. We recommend that, where possible, all items are assembled near to the area in which they will be placed in use, to avoid moving the product unnecessarily
6. During Assembly please take care not to over-tighten hardware as this may damage the product
7. Always place the product on a steady and stable surface
8. Do not use the product as a stepladder
9. This product is intended for indoor, household use only as it is a non-industrial product

Care and Maintenance

- ✓ Please periodically check all things and re-tighten as necessary
- ✓ To clean your item, please use a damp cloth and wipe clean
- ✓ Never allow any kind of liquid on your furniture
- ✓ Please do not place hot items (eg. Hot drinks) directly on to the surface

Parts List

QTY	PART	MEASUREMENTS	NOTES
1	Top	460 x 396 x 25mm	Laminate on one side.
1	LH End	518 x 390 x 15mm	Laminate on both sides.
1	RH End	518 x 390 x 15mm	Laminate on both sides.
1	Top Drawer Front	412 x 195 x 15mm	Laminate on one side.
1	Bottom Drawer Front	412 x 235 x 15mm	Laminate on one side.
1	Front Rail	418 x 80 x 15mm	Laminate on front side only.
1	Back Rail	418 x 80 x 15mm	Plain (both sides are unfinished)
2	LH Drawer Sides	340 x 160 x 12mm	Laminate on both sides.
2	RH Drawer Sides	340 x 160 x 12mm	Laminate on both sides.
2	Drawer Backs	368 x 155 x 12mm	Laminate on both sides.
2	Drawer Bottoms	378 x 339 x 4mm	Laminate on both sides.
1	Back Panel	463 x 438 x 4mm	Plain (unfinished)

Hardware List



12 x
Connecting
Bolts



8 x Large
Cams
(15mm)



8 x Large
Cams
(15mm)



8 x Drawer
Slide
Screws




8 x Small
Woodscrews



16 x Dowels



4 x Panhead
Screws



8 x 31mm
Woodscrews



2 x Metal
Drawer Slide
Sets




4 x Nail on
Glides



2 x Handles

Cam Installation & Operation Guide

The Cam and Connecting Bolt system is used to put your unit together. Below is an explanation of how this system works.

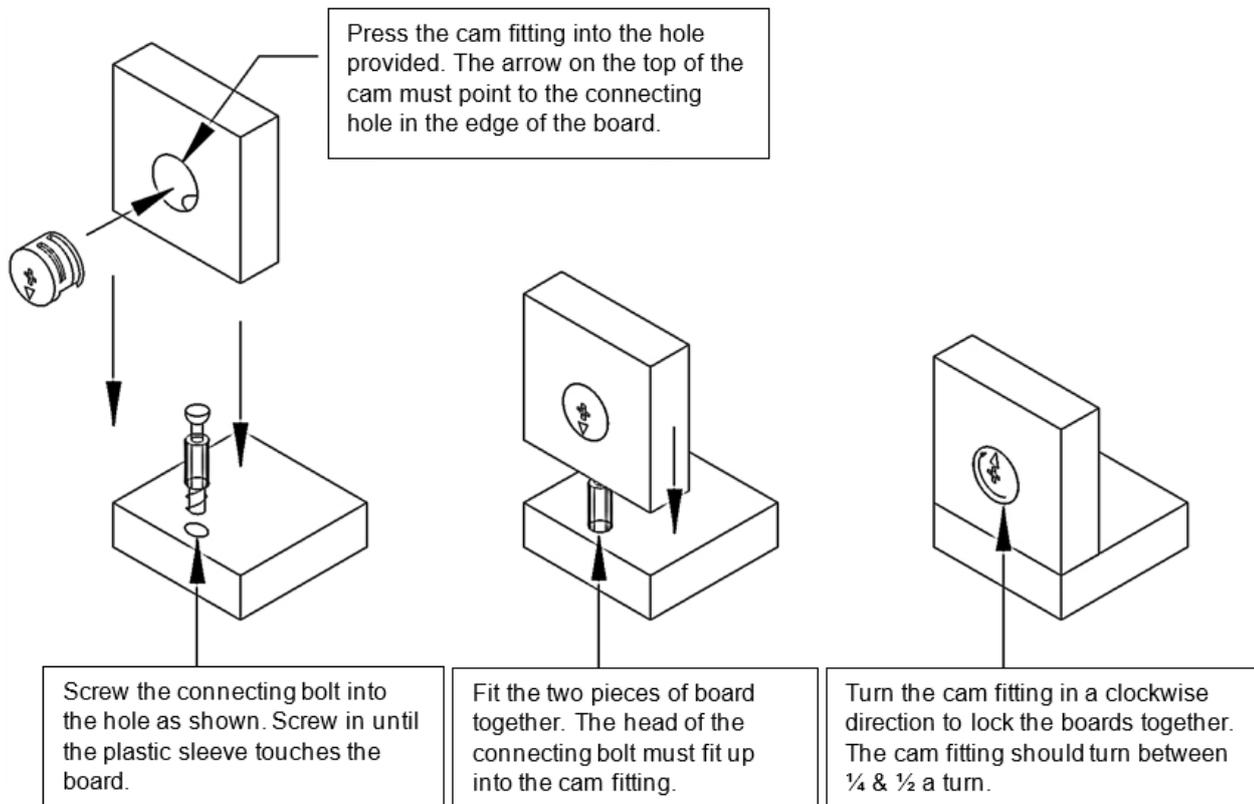

Drawer Slides Guide

Your pack will contain two sets of Metal Drawer Slides. These are bundled together with adhesive tape. The set comprises of 4 components. Undo the tape on one set at a time and separate the parts.




LEFT HAND PART (**DL**)



RIGHT HAND PART (**DR**)

The Drawer Slide components shown *above* are attached to the **drawer**. They have the letters **DL** or **DR** stamped on them to indicate left hand or right-hand components. Put these parts aside for attaching to the drawer later.

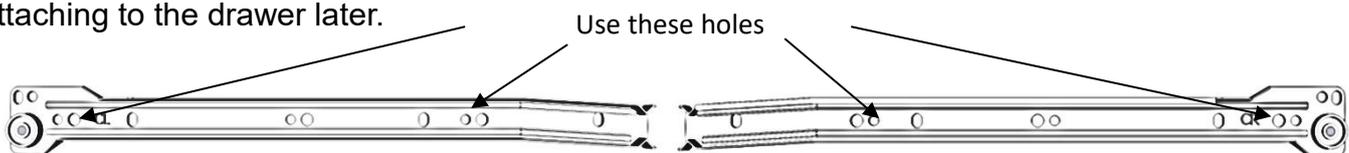


The Drawer Slide components shown *above* are to be attached to the **cabinet**. They have letters **CL** or **CR** stamped on them to indicate left hand or right-hand components. You will need these for steps 1 and 2.

Assembly


STEP 1: Top

- To begin assembly, lay the top finished side down on a clean and clear surface
- Screw four **Connecting Bolts** into the holes as shown

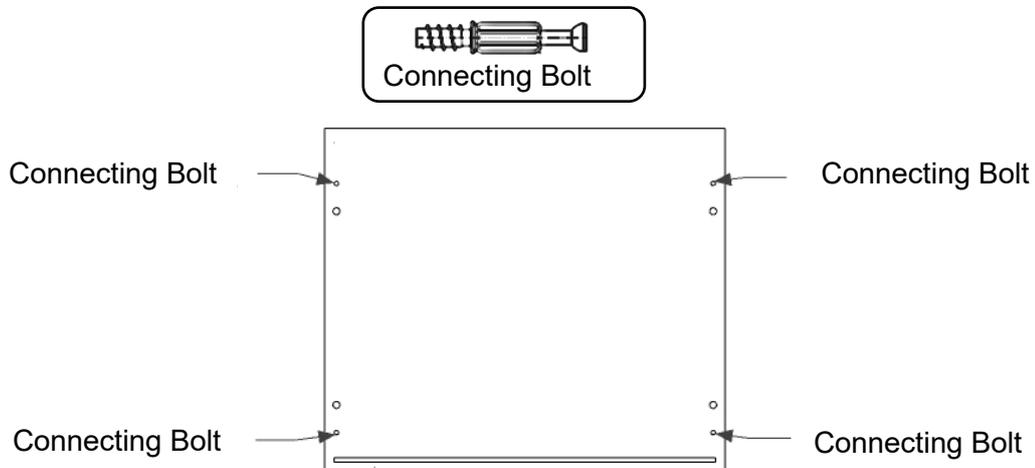


STEP 2: LH End

- Screw the **LH Cabinet Drawer Slides** into the LH End using two Drawer Slide Screws for each slide (*ensure that the end of the slide with the wheel is on the side with the finished edge*).
- Insert **two Large Cams** as shown (make sure the arrow on the top of the Cam points towards the top edge of the End).
- Push **two Dowels** into the top edge of the End
- Screw **two Connecting Bolts** into the holes as shown

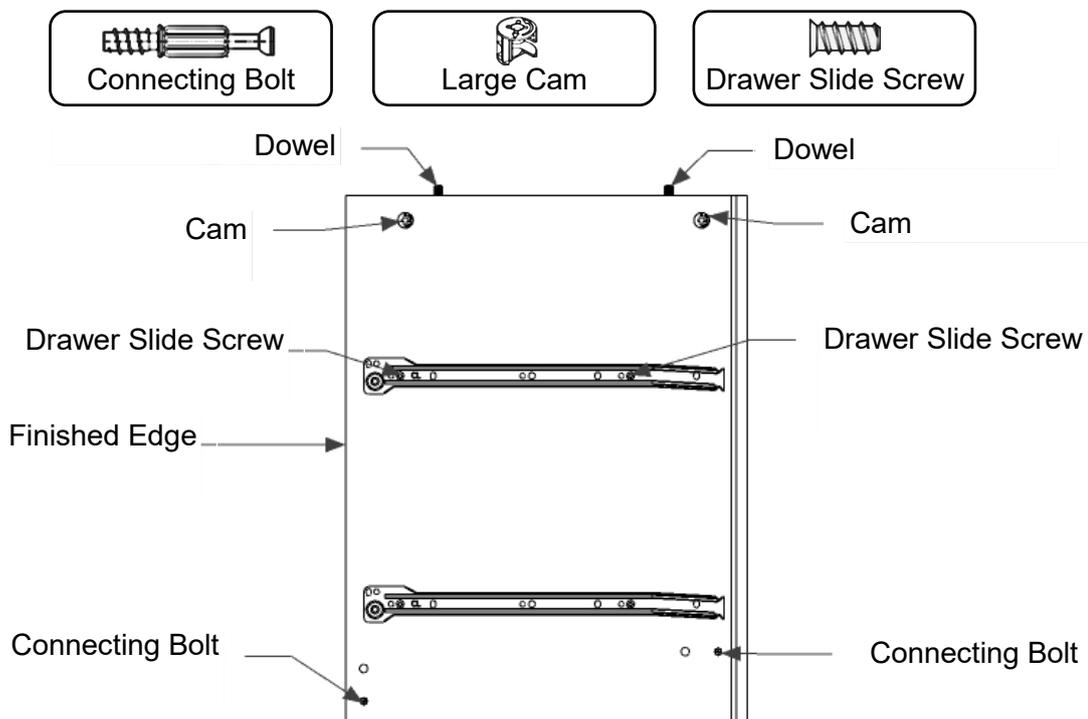


STEP 3: RH End

- Repeat the previous step with the RH End.

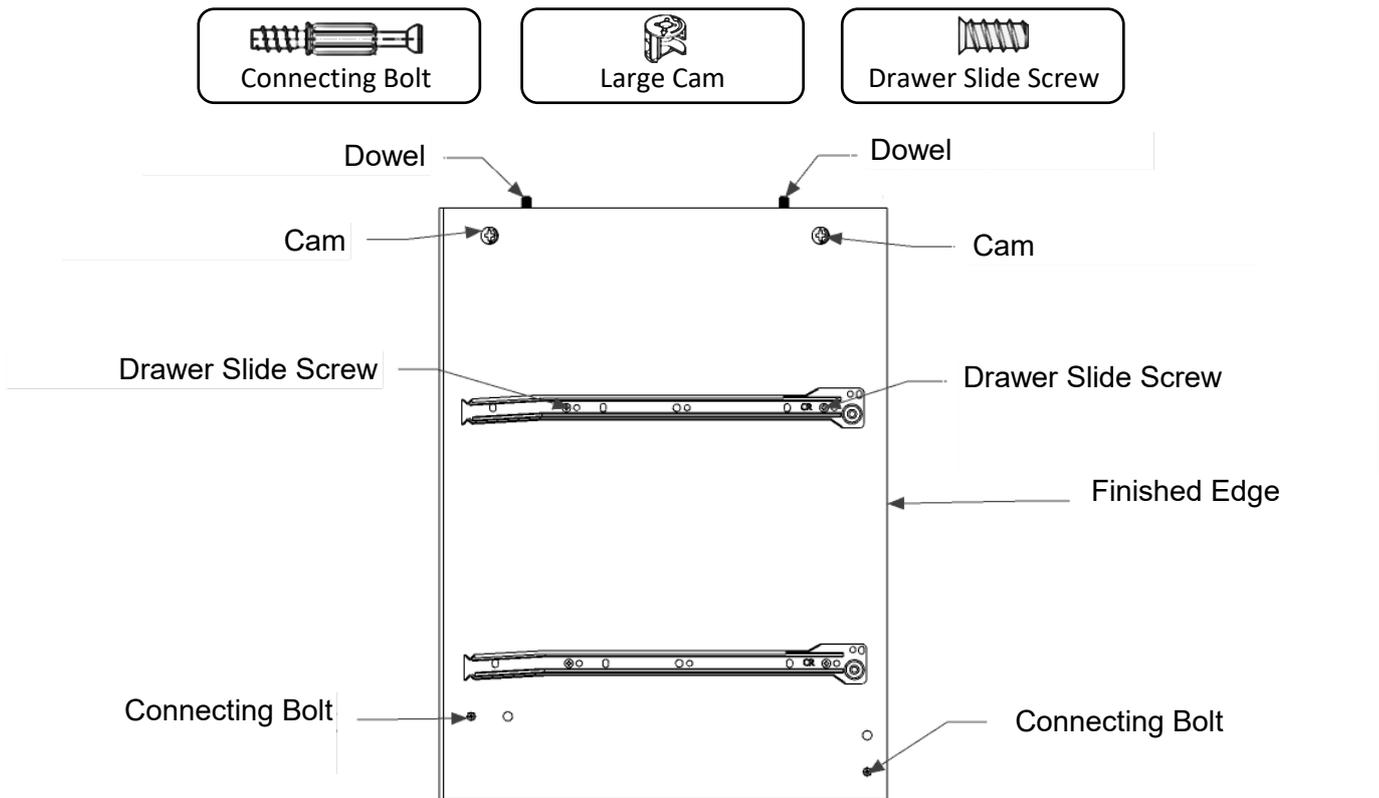


STEP 4: Rails

- Install **2 Dowels** and **2 Large Cams** into each Rail as shown (*ensure the arrow on the top of the Cam points towards the edge of the Rail with the hole in it.*)

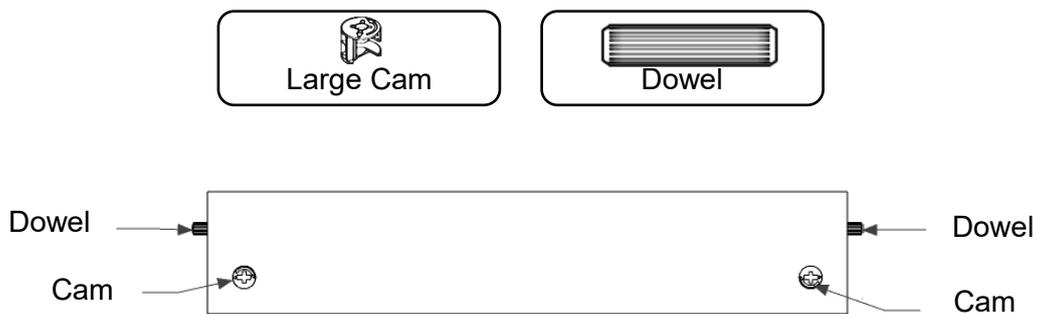


STEP 5: Attach Rails to LH End

- Fit the **Front Rail** (*the one with one finished side*) over the Connecting Bolt closest to the finished side of the End as shown (*ensure the finished side of the Rail is facing forward so the cams can't be seen once the cabinet is completed*).
- Fit the **Back Rail** over the other Connecting Bolt.
- Tighten the two Cams in a clockwise direction to lock the pieces together.

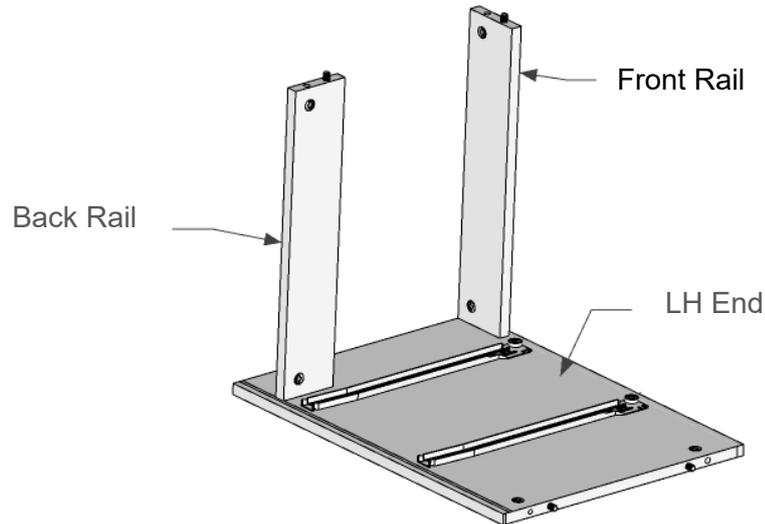


STEP 6: Attach RH End

- Fit the Connecting Bolts installed in the **RH End** into the Cams in the **Rails** as shown below.
- Tighten the remaining three Cams in the **Rails** by turning them in a clockwise direction (they should turn at least $\frac{1}{4}$ of a turn).

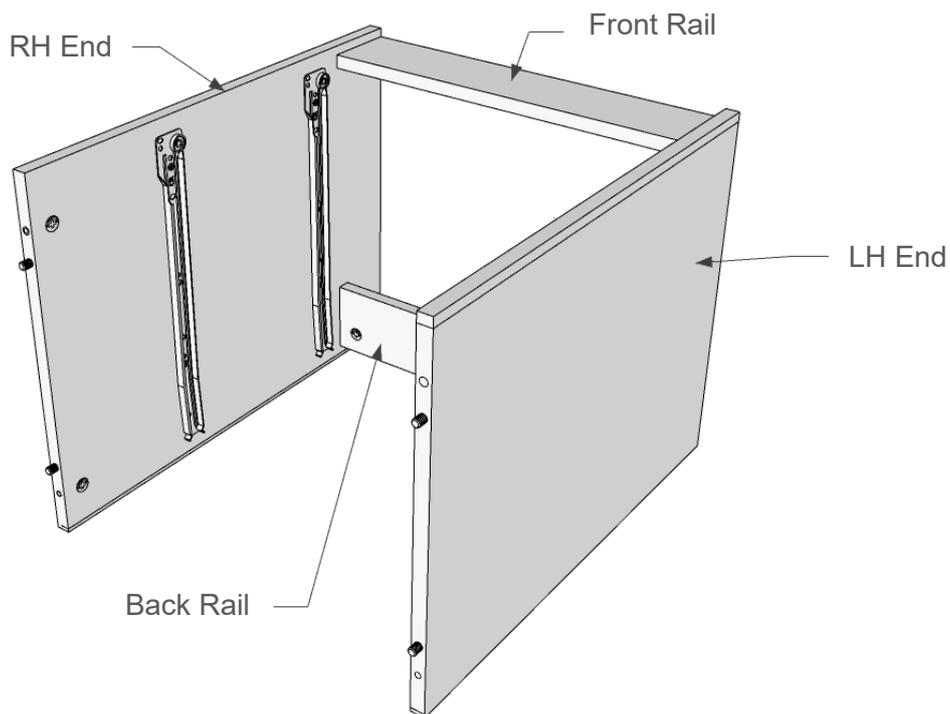


STEP 7: Attach Top and Glide Feet

- Fit the **Top** to the **Ends** by fitting the four Connecting Bolts installed in the Top into the Cams in the Ends. Tighten all four Cams to lock the **Top** to the **Ends**.
- Tap the four Nail on Glides into the bottom of the **Ends** as indicated below. Space them about 50mm in from the front and back edges.

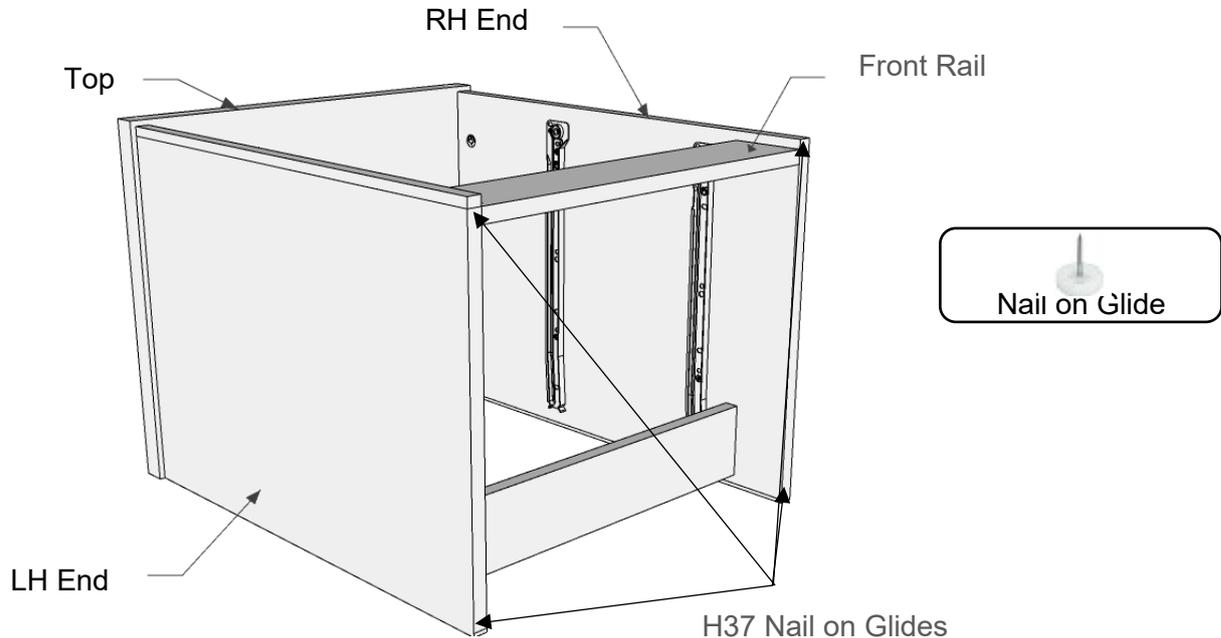


STEP 8: Back Panel


- Carefully lay the bedside on its front edge.
- Slide the **Back Panel** in place
- Using the two Panhead screws provided, secure the **Back Panel** in place. Then stand the Bedside upright.

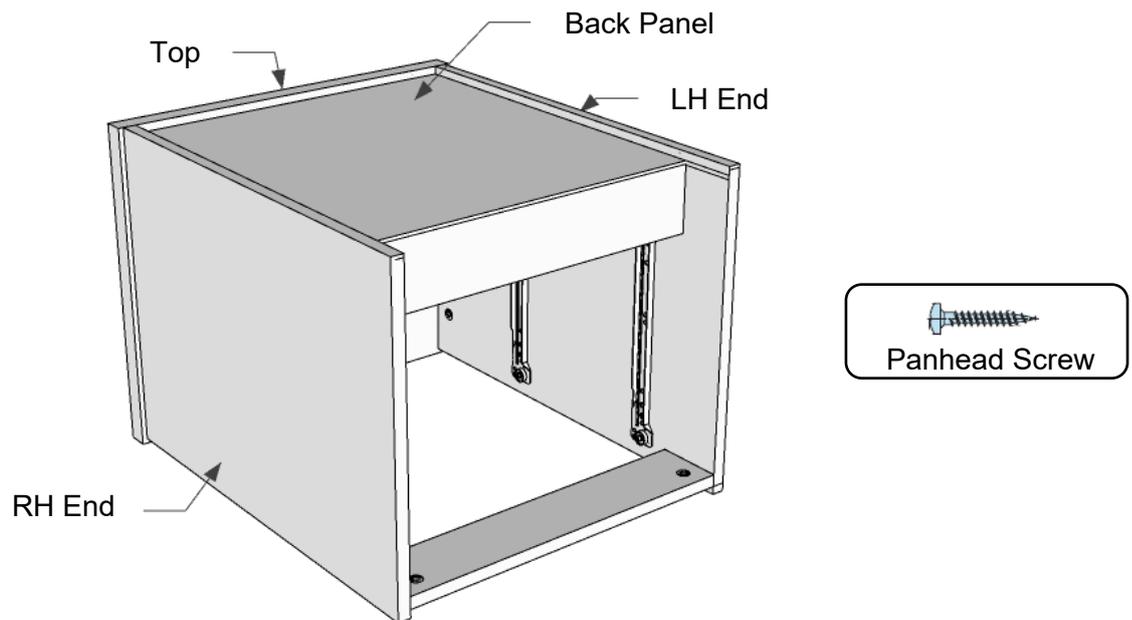


Assemble the Drawers

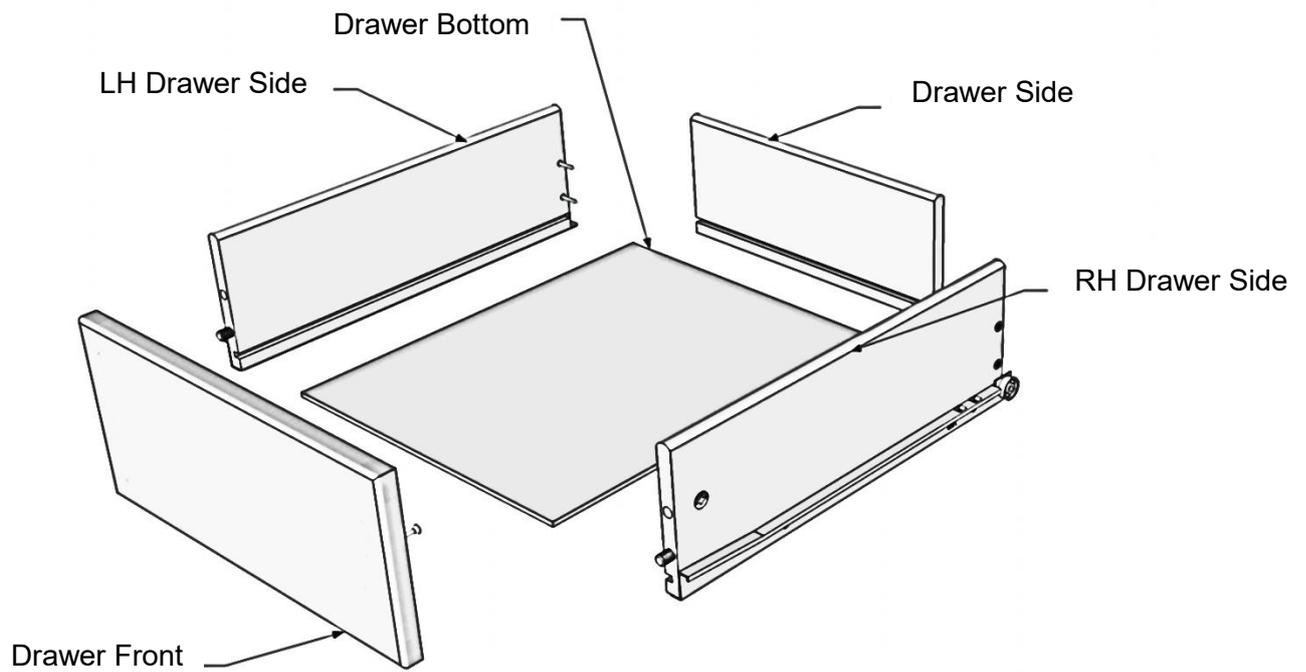

STEP 9: Install Hardware




- Install the hardware in the Drawer parts as shown below.

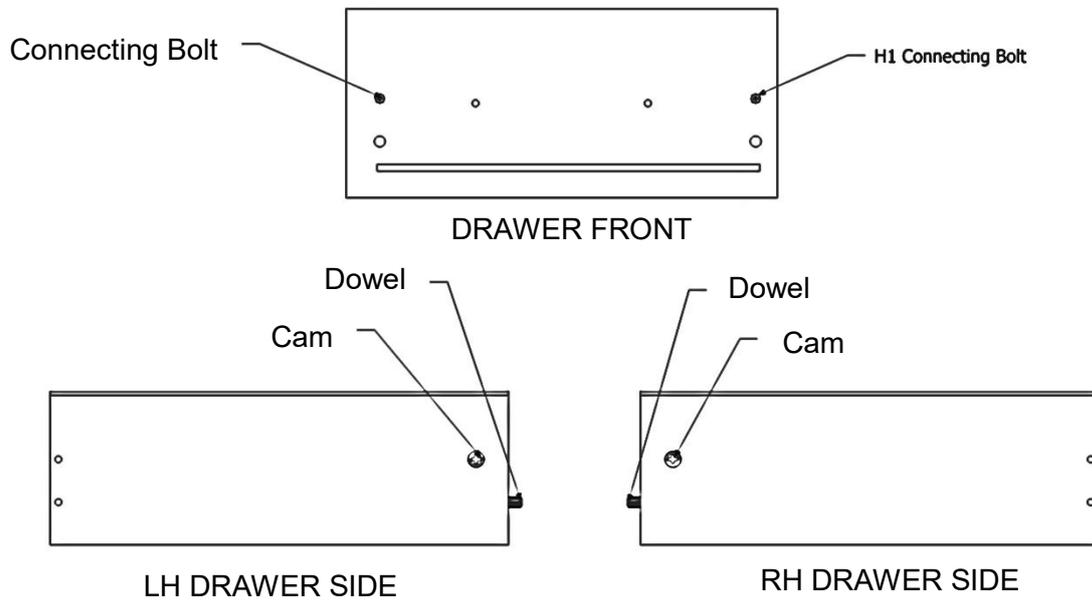

Note: Be sure that the arrow on the Small Cam points to the end of the drawer side nearest i


STEP 10: Assemble the Drawer

- Lay the Drawer Front finishes side down on a smooth, clean surface.
- Attach the **LH and RH Drawer Sides** by fitting them into place over the Connecting Bolts installed in the **Drawer Front**.
- Turn the Small Cams in a clockwise direction to lock the **Drawer Sides** in place.
- Slide the **Drawer Bottom** into place in the grooves in the **Drawer Sides** and **Drawer Front**.
- Fit the **Drawer Back** into place between the **Drawer Sides**. The groove in the **Drawer Back** will fit over the end of the **Drawer Bottom**.
- Secure the **Drawer Sides** to the **Drawer Back** with four Woodscrews as shown below.

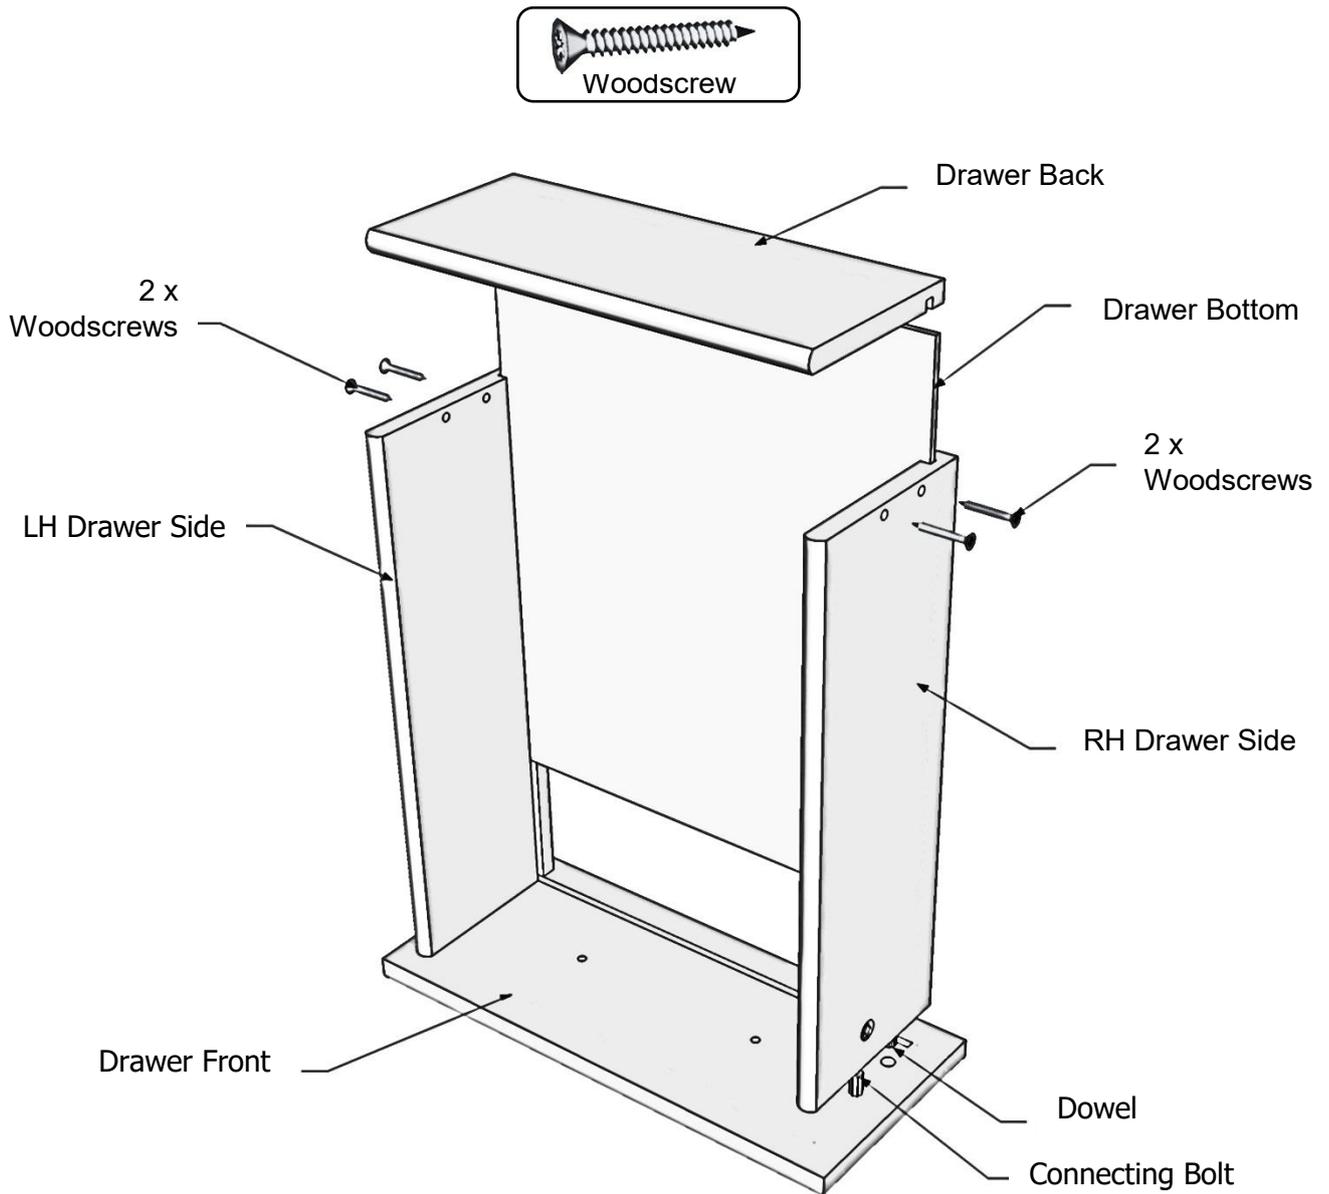


STEP 11: Attach the Drawer Slides

- Turn the drawer upside-down as shown and attached the Drawer Slides (DL and DR) with the four woodscrews as shown below. Ensure that the ends of the slides without the wheels are hard up against the back of the Drawer Front. **Each slide requires two screws.**

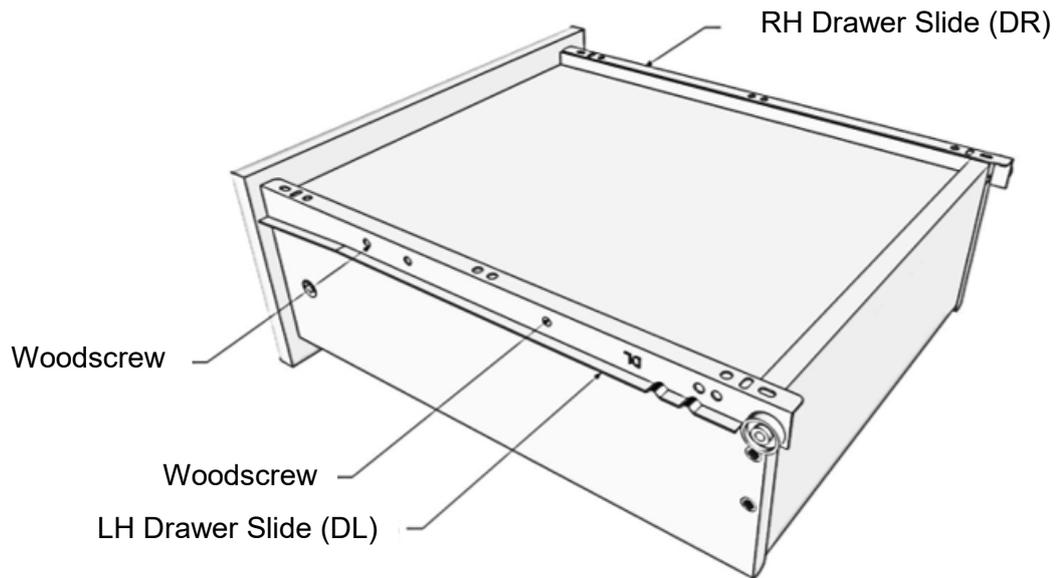


STEP 12: Attach the Handle and Insert the Drawers

- Attach the Bar Handle to the Drawer Front using the screws provided
- Fit the drawers into the Bedside. Make sure that the rollers at the back of the drawer go behind the front rollers in the cabinet and into the channel of the drawer slide. It helps to lift the front of the drawer up a little when doing this.

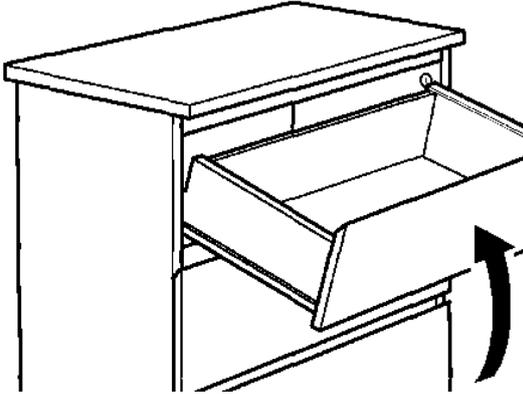

Angle the drawer slightly to ensure that the wheel at the back of the drawer slide goes behind the front wheel on the cabinet slide. Then lift the drawer up and slide it into the channel of the drawer slide.

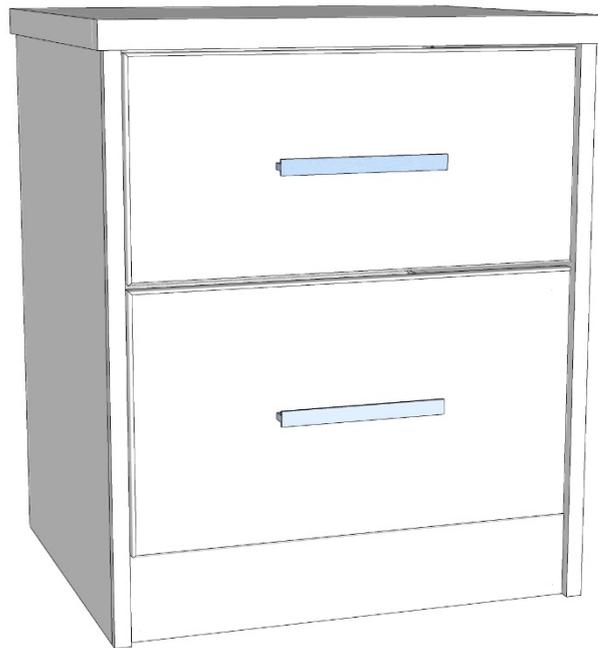

Congratulations, your Tākiwira 2 Drawer Bedside is now complete.

Thank you for supporting New Zealand Made furniture.



LIVING & CO[®]

WARRANTY

We pride ourselves on producing a range of quality products that are both packed with features and completely reliable.

We are so confident in our products, we back them up with a five-year warranty. Now you too can relax knowing that you are covered.

For parts and assistance, call the manufacturer direct on 0800 100 858. Please do not call the store you purchased the cabinet from as they will be unable to help you.

This product is covered by five-year warranty when accompanied by proof of purchase.



5 YEAR
WARRANTY