


ZEALAND OFFICE FURNITURE

Workstation

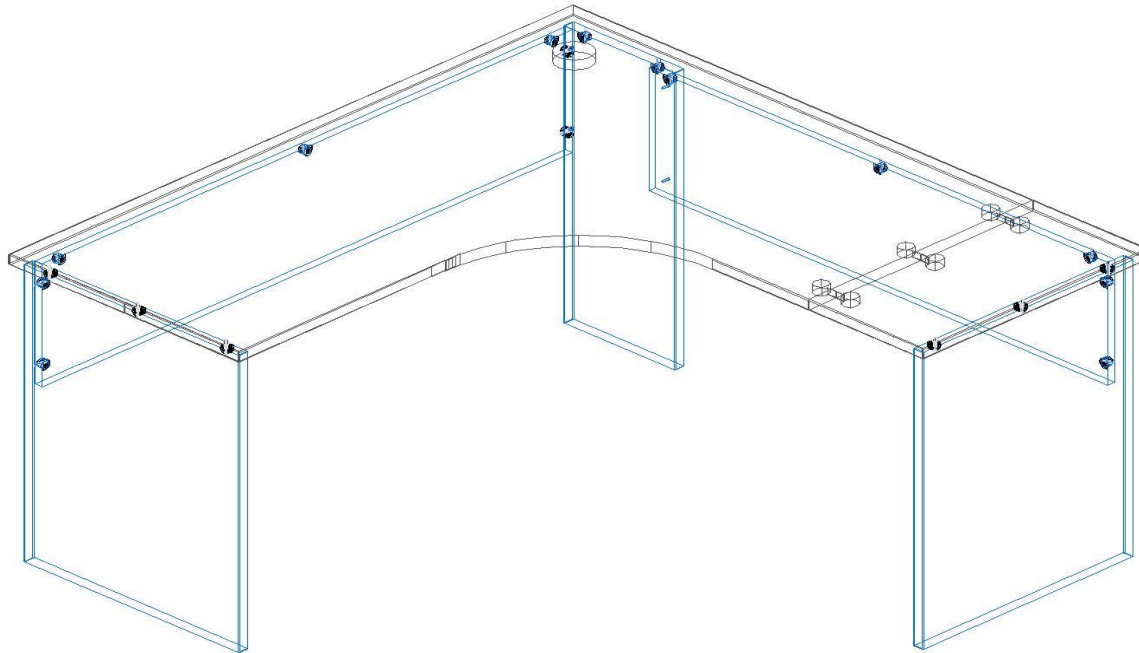

TOOLS REQUIRED

POZIDRIVE SCREW DRIVER

10MM SPANNER

| WORKSTATION COMPONENTS | QUANTITY |
|-------------------------------|----------|
| MAIN TOP | 1 |
| TOP ADD ON | 1 |
| LEFT LEG | 1 |
| RIGHT LEG | 1 |
| CENTRE LEG | 1 |
| LEFT HAND BRACE | 1 |
| RIGHT HAND BRACE | 1 |
| | |
| HARDWARE | QUANTITY |
| (PACKAGED WITH LEGS) | |
| CAMS (PRE FITTED IN FACTORY) | 20 |
| CAM BOLTS | 20 |
| SCREWS 1 1/4" | 2 |
| BENCH TOP CONNECTORS | 3 |

STEP 1

PLACE TOP PANELS FACE DOWN ON A CLEAN SURFACE SUCH AS CARPET ENSURING THERE IS NO DIRT OR GRIT THAT MAY CAUSE SCRATCHES.

STEP 2

LINE UP TOPS AND INSERT THE 3 BENCH TOP CONNECTORS, TIGHTEN CONNECTERS ENSURING THE TOPS ARE FLUSH (ADJUST WHEN UPRIGHT IF REQUIRED)

IMPORTANT NOTE:

PLEASE ENSURE THAT THE JOIN IS COMPLETELY FLUSH ON THE FRONT FACE BEFORE TIGHTENING FULLY AS ATTEMPTING TO ADJUST THIS ONCE TIGHTENED COULD CAUSE DAMAGE TO THE MELAMINE FRONT FACE.

STEP 3

USING A POZIDRIVE SCREWDRIVER INSERT 14 CAM BOLTS INTO THE 5MM DRILLED HOLES IN THE TOPS

STEP 4

USING A POZIDRIVE SCREWDRIVER INSERT 2 CAM BOLTS INTO THE 5MM DRILLED HOLES IN THE LEFT HAND LEG

STEP 5

USING A POZIDRIVE SCREWDRIVER INSERT 2 CAM BOLTS INTO THE 5MM DRILLED HOLES IN THE RIGHT HAND LEG

STEP 6

USING A POZIDRIVE SCREWDRIVER INSERT 2 CAM BOLTS INTO THE 5MM DRILLED HOLES IN THE MIDDLE LEG

STEP 7

PLACE THE LEFT HAND LEG PANEL AND CAMS ON TO THE TOP CAM BOLTS AND USING A POZIDRIVE SCREWDRIVER TIGHTEN CAMS UNTIL FULLY TIGHT

STEP 8

PLACE THE MIDDLE LEG PANEL AND CAMS ON TO THE TOP CAM BOLTS AND USING A POZIDRIVE SCREWDRIVER TIGHTEN CAMS UNTIL FULLY TIGHT

STEP 9

PLACE THE LEFT HAND LEG PANEL AND CAMS ON TO THE TOP AND LEG PANEL CAM BOLTS AND USING A POZIDRIVE SCREWDRIVER TIGHTEN CAMS UNTIL FULLY TIGHT

STEP 10

PLACE THE RIGHT HAND LEG PANEL AND CAMS ON TO THE TOP CAM BOLTS AND USING A POZIDRIVE SCREWDRIVER TIGHTEN CAMS UNTIL FULLY TIGHT

STEP 11

PLACE THE RIGHT HAND BRACE PANEL AND CAMS ON TO THE TOP AND LEG PANEL CAM BOLTS AND USING A POZIDRIVE SCREWDRIVER TIGHTEN CAMS UNTIL FULLY TIGHT

STEP 12

USING A POZIDRIVE SCREWDRIVER INSERT 2 SCREWS THROUGH THE PREDRILLED HOLES AND FASTEN SECURELY IN TO THE MIDDLE LEG UNTIL FLUSH

STEP 12

BEFORE TURNING THE WORKSTATION THE CORRECT WAY UP, PLEASE ENSURE ALL CAMS AND BENCH TOP CONNECTORS ARE FULLY TIGHTENED

STEP 13

USING A 2ND PERSON TO HELP LIFT, TURN THE WORKSTATION OVER AND PLACE IN DESIRED POSITION, **DO NOT DRAG ASSEMBLED WORKSTATION**

YOU ARE NOW READY TO ENJOY YOUR WORKSTATION. THANK YOU, WE APPRECIATE YOU SUPPORTING OUR NEW ZEALAND MADE PRODUCT