

babywise®

2 in 1 Booster Seat

INSTRUCTIONS FOR USE

GROUP II+III

Suitable for children weighing 15kg to 36kg



Notice

1. This is a "Universal" child restraint. It is approved to the EU Regulation No. 44, 04 series of amendments, for general use in vehicles and it will fit most, but not all, car seats.
2. A correct fit is likely if the vehicle manufacturer has declared in the vehicle's handbook that the vehicle is capable of accepting a Universal child restraint for this group.
3. This child restraint has been classified as "Universal" under more stringent conditions than those which applied to earlier designs which do not carry this notice.
4. If in doubt, consult either the child restraint manufacturer or the retailer.

Only suitable if the approved vehicles are fitted with 3 point safety-belts, approved to UN/ECE Regulation No. 16 or other equivalent standards.

Contents

1.	Applicability	3
2.	Safety Instructions	4
3.	Parts and interior equipment	5
4.	Usage for age (group II & III)	6
4.1	Height adjustment of head rest	6
4.2	Booster Seat with Backrest (15-36kg child)	7
4.3	Booster Seat without Backrest (22-36kg child)	7
4.4	Securing the child car seat with vehicle's belt	8
5.	Care instructions	11
5.1	Removing/ replacing the cover	11
5.2	Cleaning the cover	11
5.3	Care and maintenance	12
6.	Procedure after an accident	12

NOTES


Please read through these instructions carefully before using the child car seat for the first time. You risk endangering your child's life if you use the product incorrectly.

1. Applicability:

This child car seat is suitable for weight categories II to III (Group II, III), which means children with a body weight between 15kg and 36kg.

Mass Group II: 15kg - 25kg
Mass Group III: 22kg - 36kg


- Only suitable if the approved vehicles are fitted with 3 point safety-belts, approved to UN/ECE Regulation No. 16 or other equivalent standards.

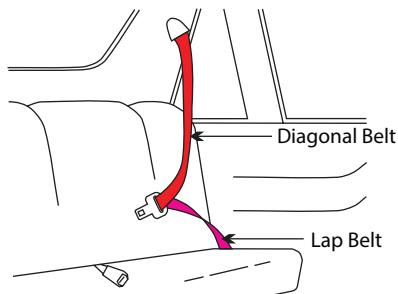

WARNING

! Important! Please read all instructions in this manual and in the vehicle owner's manual related to child safety seats carefully and understand them. Install and use the child safety seat as described in the instruction manual. Failure to do this could result in serious injury or death of your child. The instructions shall be retrained with the child restraint for the future use.


- ! DO NOT** remove any labels on the child safety seat. Important information is contained on the labels.
- ! DO NOT** use a child safety seat with damaged or missing parts.
- ! DO NOT** use damaged or frayed harness straps or vehicle belt.
- ! DO NOT** modify or attempt to modify the child safety seat in any way.
- ! DO NOT** take apart or attempt to take apart this child safety seat except as instructed in this manual.
- ! DO NOT** use a child safety seat that has been in a crash. A crash can cause damage to the child safety seat that you cannot see.
- ! NO NOT** use a second-hand child seat or child seat whose history you do not know. The rigid items and plastic parts of a child restraint must be so located and installed that they are not liable, during everyday use of the vehicle to become trapped by a movable seat or in a door of the vehicle.
- ! DO NOT** use on the vehicle seats that face the sides or rear of the vehicle (1a,1b). Use the child safety seat only on the vehicle seats that face forward. According to accident statistics, children are safer when properly restrained in the rear seating positions than in the front seating positions (1c,1d).

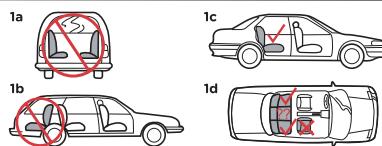


? Optional: Only suitable for the seat with 3 point belt. Can not be used on seat with 2 point lap belt.

! DO NOT USE in any configuration not shown in the instructions.
! NEVER use this child safety seat with 2 point vehicle belts.
! DO NOT use belt routing methods not shown in these instructions.
! DO NOT use any load bearing contact points other than those described in the instructions and marked in the child restraint.
! DO NOT allow children to play with or adjust the child safety seat. Always check the tightness of the restraint and the harness before each use. The straps holding the restraint to the vehicle should be tight, that any straps restraining the child should be adjusted to the child's body, and that straps should not be twisted.
! DO NOT use this child safety seat in a passenger seat with an active airbag unless the vehicle manufacturer confirms that it is safe.
! This child restraint should be securely belted in the vehicle even when not in use. In a crash or sudden stop, an unsecured child safety seat may injure other occupants. Make sure to properly secure any loose objects, such as luggage or books, in your car as they may cause injuries in the event of an accident.
! NEVER leave your child unattended in a car even for a short time.
! NEVER take your child out of the child safety seat when the vehicle is moving.
! This child safety seat is designed to be used only in vehicles; do not use outside of vehicles.
! Make sure that any lap strap is worn low down, so that the child pelvis is firmly engaged
! NEVER use this child safety seat without the car seat cover.
! HOT ! Cover the child safety seat when left in direct sunlight. Parts of a child safety seat may become too hot for the child's skin. Always check surfaces before placing a child in the child seat.

3. Parts and interior equipment

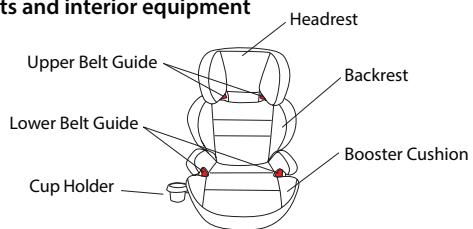

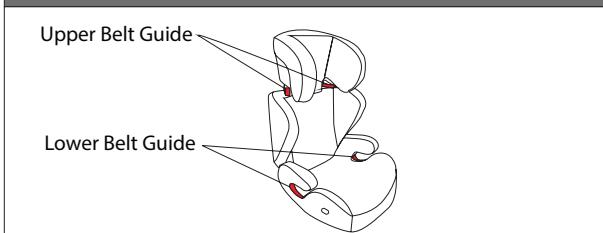

On the underside of the seat base, there is a clip in cup. This may be popped out for use. It can be snapped into the rectangular socket on either side of the seat for use.

4. Usage for Groups II and III

Only the 3-point vehicle belt system can be used to buckle up the child car seat.

4.1 Height adjustment of head rest

- Regularly check whether the headrest is set optimally to your child.
- The height of the headrest is set optimally to the size of your child when their head rests comfortably in the middle of the headrest.

Step 1: Hold the seat portion firmly and adjust the height of the headrest with another hand by pulling up the handle on the rear of the headrest (Fig 1.)

Step 2: Release the headrest at the proper position. Please check the headrest is clicked correctly into a locking positon.

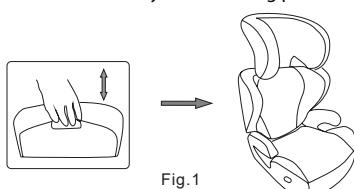


Fig.1

Checklist Before Use

4.2 Booster Seat with Backrest (15-36kg child)

Inspect

child restraint free of damage

Verify Child within Size Range

Weight between 15kg and 36kg

Height eyes below top of backrest

Install Booster Forward-Facing in Safe Location in Vehicle

vehicle seats that face front of vehicle only

child facing front of vehicle

compatible vehicle seat belts

Secure Child Properly in Booster

correct vehicle belt fit (across shoulder and lap)

Vehicle seat belt not twisted

Vehicle lap belt under arm rests

Vehicle shoulder belt under arm rest and pass through shoulder belt guide.



4.3 Booster Seat without Backrest (22-36kg child)

Inspect

child restraint free of damage

Verify Child within Size Range

Weight between 22kg and 36kg

Height eyes below top of vehicle seat back or head rest

Install Booster Forward-Facing in Safe Location in Vehicle

vehicle seats that face front of vehicle only

child facing front of vehicle

compatible vehicle seat belts

Secure Child Properly in Booster

correct vehicle belt fit (across shoulder and lap)

Vehicle Shoulder Belt Positioning Clip used

Vehicle belt not twisted

Vehicle lap belt under arm rests

Vehicle shoulder belt under arm rest



4.4 Securing the child car seat with 3-point vehicle seat belt in booster with back

The vehicle's 3-point belt system may only be used to buckle up children of Groups II and III (15kg - 36kg).

Step 1: Place the child safety seat on the vehicle's seat ensuring it is firmly pressed against the car seat backrest (Fig 2.)

Step 2. Seat your child in the child car seat (Fig 3)



Fig. 2



Fig. 3

Step 3: Pull out the 3-point safety belt of the vehicle and place the lap belt through the Lower Belt Guide (Fig 4.)

Draw the seat belt across the child, and place both the lap and diagonal belts through the Lower Belt Guide on the opposite side (Fig 5.)

Lower the waist belt onto the child's pelvis and check to make sure the safety belt is not twisted. Fasten the safety belt into the buckle of the vehicle (Fig 6.)

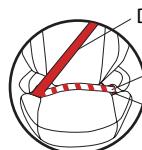


Fig. 4

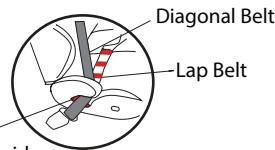


Fig. 5

Step 4: Place the diagonal belt through the Upper Belt Guide (red hook) at the side of the headrest and ensure it is fully retained by the hook. Check and make sure the belt is not twisted (Fig 7.) Please make sure the position of the safety-belt is not near the throat to avoid any risk of strangling.

- The correct location of the adult safety-belt buckle relative to the child car seat is as shown in Fig 6.



Fig 6.

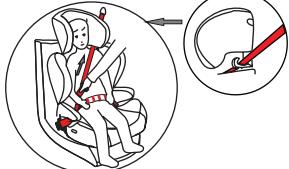


Fig 7.

This seat can also be used with the base only. Remove the backrest and use as a plain booster.

WARNING! Only use for children weighing 22 - 36kg.

WARNING! Child height must be no less than 125cm.

Before use:

Inspect

- child restraint free of damage

Verify Child within Size Range

- weight between 22kg and 36kg
- child height must be 125cm minimum

Install Booster Forward-Facing in Safe Location in Vehicle

- vehicle seats that face front of vehicle only
- child facing front of vehicle
- compatible 3-point vehicle seat belts

Secure Child Properly in Booster 22-36kg

- correct vehicle belt fit (across shoulder and lap)
- vehicle belt not twisted
- vehicle lap belt under arm rests
- vehicle shoulder belt over arm rest

Installation in vehicle


Step 1: Hold the seat portion firmly, and push the back of the car seat to the horizontal position. (Fig 8.) Lift the back off the hinge and put aside.

Step 2: Put the booster on a forward facing-facing vehicle seat.

Step 3: Have child sit on booster seat so their back contacts vehicle seat from shoulders to bottom.

Step 4: Position vehicle belt over child. Make sure the vehicle lap belt passes underneath both armrests of the booster seat, and the vehicle shoulder belt passes over the armrest on the side where the seat belt is buckled (9a). Check that the vehicle belt is not twisted and then buckle it.

Step 5: The vehicle belt must pass over the centre of the child's shoulder (9b).

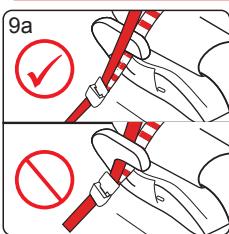

5. Daily Caring Instructions

5.1 To remove the cover

Step 1: Hold the seat portion firmly, and push the back of the car seat to the horizontal position (Fig 8).

Step 2: Unhook and disconnect the seat and back.

Step 3: Unsnap the studs at the bottom rear of the back cover and pull the cover off towards the front.

Step 4: Remove the headrest cover by unsnapping the stud at the bottom front and pulling the back edge of the cover up over the top.

Step 5: Remove the seat cover by unfastening the velcro strap across the back, pull the cover out from behind the red sockets and red belt guides at both sides, and then pulling it off towards the front.

- To replace the covers, proceed in reverse order.


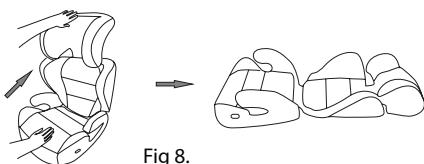


Fig 8.

5.2 Cleaning the cover

Use only neutral detergent and warm water to wash. Do not wash by machine. Spin-drying and tumble-drying are not recommended.

THIS COVER SHOULD BE HAND WASHED



5.3 Care and maintenance

It is necessary to check the functions and components of the child car seat periodically according to these instructions in order to avoid any accidents.

Make sure you have checked the safety buckle is firmly locked by pulling on the safety belt.

Avoiding storing the child car seat in damp or cold locations for long periods.

6. Procedure after accident

The child car seat must be replaced when it has been subject to violent stresses in an accident. Do not continue to use, as there may be hidden damage or weaknesses caused by the accident.

Manufactured for:
The Warehouse Ltd,
26 The Warehouse Way
Northcote, Auckland 0627
0800 422 274

Model: YKO-961