

evenflo®

sutton™

BOOSTER SEAT
Model: CS906F

Usage


up to 36kg
9M-12Y



9-36kg



ECE R44/04

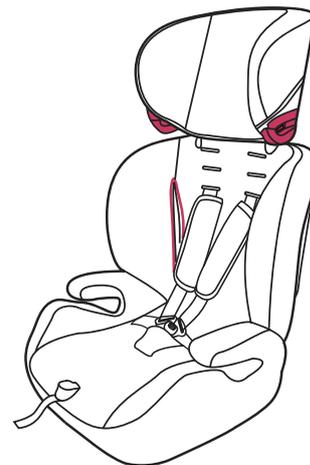

WARNING:

Read all instructions before using this child restraint.
Keep instructions for future use. If these instructions are not followed, the safety of a child may be severely endangered.

©2017 Evenflo Company, Inc

www.evenflo.com
1801 Commerce Drive, Piqua, OH 45356
© 2017 Evenflo Company, Inc.

NOTICE

- This is a “Universal” child restraint. It is approved to Regulation No. 44, 04 series of amendments, for general use in vehicles and it will fit most, but not all, car seats.
- A correct fit is likely if the vehicle manufacturer has declared in the vehicle handbook that the vehicle is capable of accepting a “Universal” child restraint for this age group.
- This child restraint has been classified as “Universal” under more stringent conditions than those which applied to earlier designs which do not carry this notice.
- If in doubt, consult either the child restraint manufacturer or the retailer.
- Only suitable if the approved vehicles are fitted with 3-point safety belt, approved to UN/ECE Regulation No. 16 or other equivalent standards.


! WARNING

! Important! Please read all instructions in this manual and in the vehicle owner’s manual related to child safety seats carefully and understand them. Install and use the child safety seat as described in the instruction manual. Failure to do this could result in serious injury or death of your child. The instructions shall be retained with the child restraint for the future use.

- ! DO NOT remove any labels on the child safety seat. Important information is contained on the labels.
- ! DO NOT use a child safety seat with damaged or missing parts.
- ! DO NOT use damaged or frayed harness straps or vehicle belt.
- ! DO NOT modify or attempt to modify the child safety seat in any way.
- ! DO NOT take apart or attempt to take apart this child safety seat except as instructed in this manual.
- ! DO NOT use a child safety seat that has been in a crash. A crash can cause damage to the child safety seat that you cannot see.

! WARNING

- ! DO NOT replace the child seat cover or harness with any other than the ones we recommend as these parts are integral to the child safety seat’s performance.
- ! NO NOT use a second-hand child seat or child seat whose history you do not know. The rigid items and plastic parts of a child restraint must be so located and installed that they are not liable, during everyday use of the vehicle to become trapped by a movable seat or in a door of the vehicle.
- ! DO NOT use on the vehicle seats that face the sides or rear of the vehicle (1a,1b). Use the child safety seat only on the vehicle seats that face forward. According to accident statistics, children are safer when properly restrained in the rear seating positions than in the front seating positions (1c,1d).

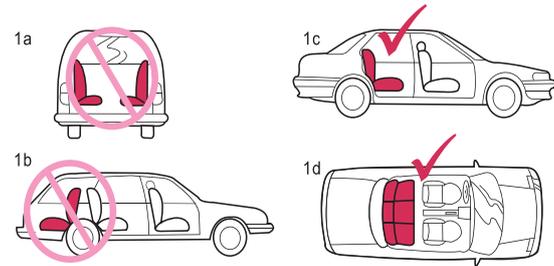

- ! DO NOT USE in any configuration not shown in the instructions.
- ! NEVER use this child safety seat with 2 point vehicle belts.
- ! DO NOT use belt routing methods not shown in these instructions.
- ! DO NOT use any load bearing contact points other than those described in the instructions and marked in the child restraint.
- ! DO NOT allow children to play with or adjust the child safety seat. Always check the tightness of the restraint and the harness before each use. The straps holding the restraint to the vehicle should be

tight, that any straps restraining the child (harness) should be adjusted to the child's body, and that straps should not be twisted.

WARNING

- ! DO NOT use this child safety seat in a passenger seat with an active airbag unless the vehicle manufacturer confirms that it is safe.
- ! This child restraint should be securely belted in the vehicle even when not in use. In a crash or sudden stop, an unsecured child safety seat may injure other occupants. Make sure to properly secure any loose objects, such as luggage or books, in your car as they may cause injuries in the event of an accident.
- ! NEVER leave your child unattended in a car even for a short time.
- ! NEVER take your child out of the child safety seat when the vehicle is moving.
- ! This child safety seat is designed to be used only in vehicles; do not use outside of vehicles.
- ! Make sure that any lap strap is worn low down, so that the child pelvis is firmly engaged
- ! NEVER use this child safety seat without the car seat cover.
- ! HOT! Cover the child safety seat when left in direct sunlight. Parts of a child safety seat may become too hot for the child's skin. Always check surfaces before placing a child in the child seat.

Checklist Before Use

Child Restraint with Harness (Child's Weight: 9-18kg)

Inspect

__ child restraint free of damage

Verify Child within Size Range

__ Weight between 9kg and 18kg

__ Height shoulders at or below top slots in backrest

Install Child Restraint Forward-Facing in Safe Location in Vehicle

__ vehicle seats that face front of vehicle only

__ child facing front of vehicle

__ compatible vehicle seat belts

__ belt path followed

__ tight against vehicle seat

Secure Child Properly in Child Restraint


__ correct shoulder strap height

(at or above shoulders)

__ Harness not twisted

__ Harness low across hips

__ Harness secure and tight

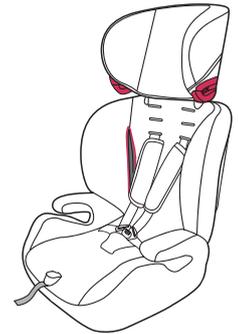

Booster Seat with Backrest (Child's Weight: 15-36kg)

Inspect

child restraint free of damage

Verify Child within Size Range

Weight between 15kg and 36kg

Height eyes below top of backrest

Install Booster Forward-Facing in Safe Location in Vehicle

vehicle seats that face front of vehicle only

child facing front of vehicle

compatible vehicle seat belts

Checklist Before Use

Secure Child Properly in Booster


correct vehicle belt fit

(across shoulder and lap)

Vehicle seat belt not twisted

Vehicle lap belt under arm rests

Vehicle shoulder belt under arm rest
and pass through shoulder belt guide.

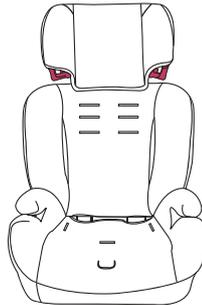

Booster Seat without Backrest (Child's Weight: 22-36kg)

Inspect

child restraint free of damage

Verify Child within Size Range

Weight between 22kg and 36kg

Height eyes below top of vehicle seat back or head rest

Install Booster Forward-Facing in Safe Location in Vehicle

vehicle seats that face front of vehicle only

child facing front of vehicle

compatible vehicle seat belts

Secure Child Properly in Booster

correct vehicle belt fit


(across shoulder and lap)

Vehicle Shoulder Belt Positioning
Clip used



Vehicle belt not twisted

Vehicle lap belt under arm rests


Vehicle shoulder belt under arm rest

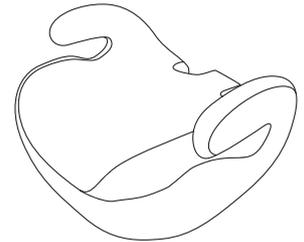

PARTS LIST

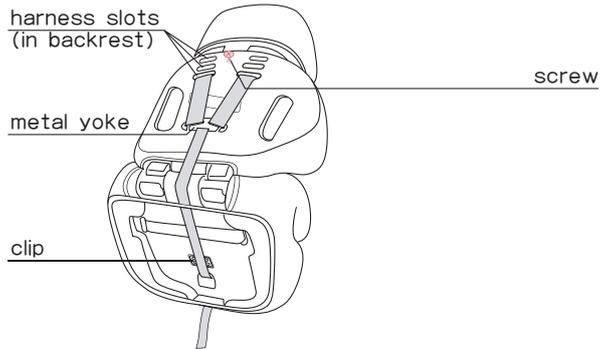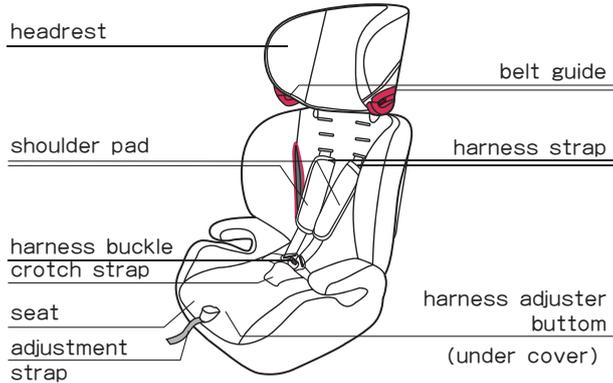


SETUP

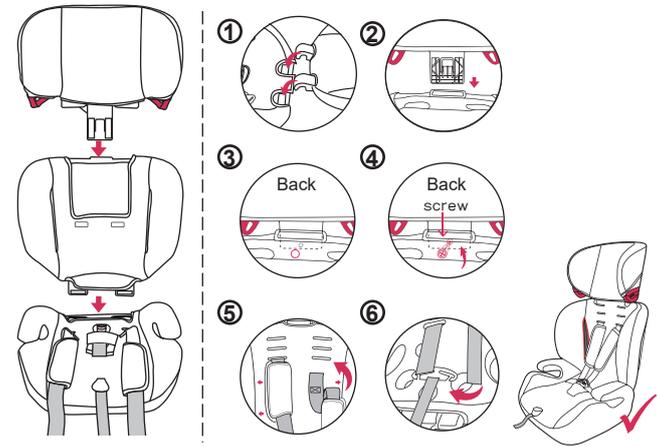

■ Make sure the backrest is properly installed to the booster seat. **Only use the armrests to carry the child seat. Do not place a child in the seat when carrying.**

HARNESS POSITIONING

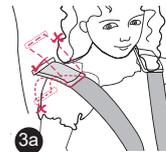


Position the height of harness according to the child's height. The harness straps should be level with or just above the child's shoulders (3a). Do not use the child restraint with the harness if the child's shoulders are above the highest slots in the backrest or if the child's weight exceeds 18kg.

ADJUSTING HARNESS HEIGHT

- Remove the harness strap loops from the yoke (3b).
- Pull the harness straps through the backrest (3c).
- Reinsert the harness straps through proper slots (3d). Make sure both straps are at the same level and are not twisted.
- Reassemble the harness strap loops on the yoke (3e). Pull to make sure the harness straps are securely installed.
- Secure the shoulder pad straps behind the backrest, pull the shoulder pads to make sure the shoulder straps are fastened firmly. (3f)
- To increase the length of the harness, press the harness adjuster button located under the cover in front center of booster seat, and at the same time pull both harness straps (3g).

ADJUSTING HEADREST

According to the child's size, adjust the headrest (5b).

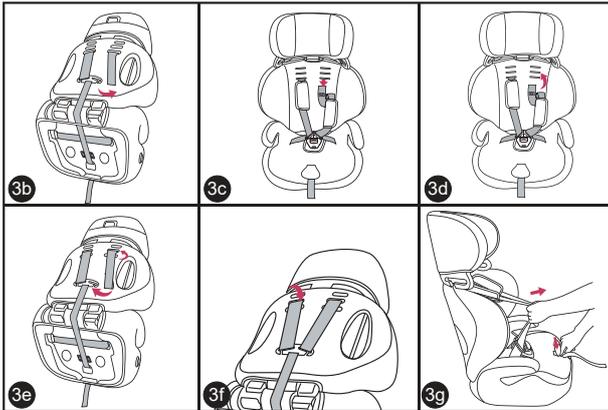

CHILD RESTRAINT WITH HARNESS

(Child's Weight: 9-18kg)

The child seat **MUST** be used with a 3-point vehicle seat belt when used as a child restraint with harness.


1. Put the child restraint onto a forward-facing vehicle seat (4a).
2. Route the vehicle belt latch plate (4b,4c) from the front of the child restraint towards the back through the slot of the front of the backrest .
3. Pull the adult belt from the retractor, thread one end through behind the arm rest, then insert the adult belt from the back slot; another upper end of adult belt goes following the routing area, and then pull it out of the back slot; then rout the belt over the back to another side, and then pull the adult belt out of another belt slot; make sure the upper piece of adult belt put pass through the belt guide part, and the lower piece of adult belt go under the arm rest, finally buckle, adjust the adult belt(4d).

⚠ WARNING

- ! DO NOT use 2 point vehicle belts to install this child seat.
- ! ONLY install this child restraint on forward-facing vehicle seats.
- ! DO NOT route the vehicle belt using any other path when using this child seat with the harness. For assistance contact your retailer or child restraint manufacturer.

CHILD RESTRAINT WITH HARNESS

(Child's Weight: 9-18kg)

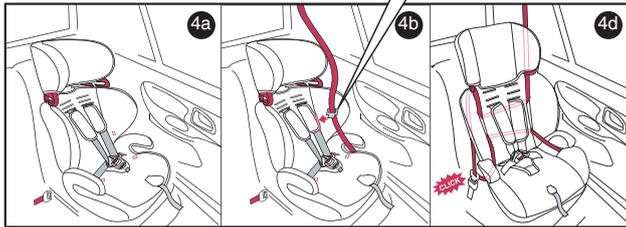


4. Pull the vehicle belt as shown to remove all the slack (4e).
5. Apply pressure to the child restraint with your full body weight and pull the vehicle belt tight following the steps in 4f. Make sure the child restraint is tightly installed. There should be little or no movement. If the child restraint is loose, repeat this step.
6. Verify that the vehicle buckle does not interfere with the armrest or side of the booster seat (4g). If it does, move the child restraint to another vehicle seating position.
7. Push the red button to release the harness buckle, move the harness straps to the side and place the child in the child restraint. Then place harness straps on the child's shoulders (4h).
8. Make sure that the harness is not twisted and lies over the center of the child's shoulders (4h). Combine the buckle tongues to form one tongue (4i) and insert into the harness buckle (4j). You will hear a click.
9. Pull the harness adjuster strap until the harness straps are tight against the child (4k).

Adjusting headrest

⚠ WARNING

- ! MAKE sure the lap sections of the harness rest as low as possible over the child's hips.
- ! DO NOT use the child restraint with the harness if the child's shoulders are above the highest slots in the backrest or if the child's weight exceeds 18kg.

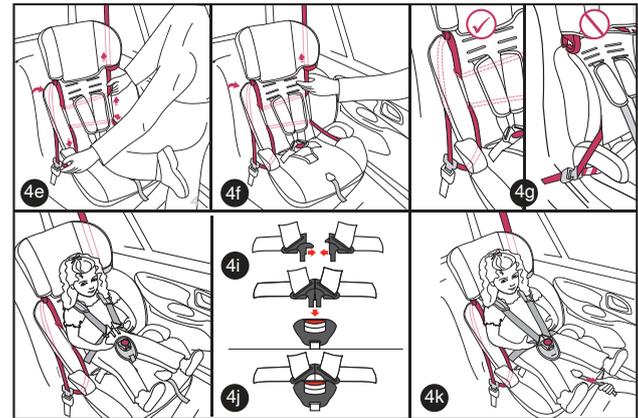

BOOSTER SEAT WITH BACKREST

(Child's Weight: 15-36kg)

The child seat **MUST** be used with a 3 point vehicle seat belt when used as a booster. The harness will need to be removed.

To Remove the Harness


- 1.To remove the harness, remove the harness shoulder strap loops from the metal yoke (3b).
 - 2.Pull the harness through the backrest (3c).
 - 3.Remove the shoulder pads and the buckle tongues by sliding them off of the harness straps. Pull on one end of the strap and remove from booster seat.
 - 4.Press the harness adjuster button and pull the metal yoke until the harness adjustment strap is out of the harness adjuster. Store with harness.
 - 5.To remove the harness buckle, locate the metal plate attached to crotch strap under booster seat.
 - 6.Rotate the metal plate and push through booster seat and cover. Store all harness components for future use.
- To install the harness, please reverse these steps.

To Install Child Restraint

1. Put the child seat on a forward-facing vehicle seat. (5a)
2. The headrest height can be adjusted by pulling out the adjustment button and at the same time pushing the headrest up and down. Make sure the headrest is locked into place. (5b)
3. Have the child sit on the booster seat so their back contacts the backrest from shoulders to bottom. (5c)
4. Position the vehicle belt over the child. Make sure the vehicle lap belt passes under both armrests of the booster seat, and the vehicle shoulder belt passes under the armrest on the side where the seat belt is buckled and through the upper belt guide. Check that the vehicle belt is not twisted and then buckle it. (5c)

BOOSTER SEAT WITH BACKREST


(Child's Weight: 15-36kg)

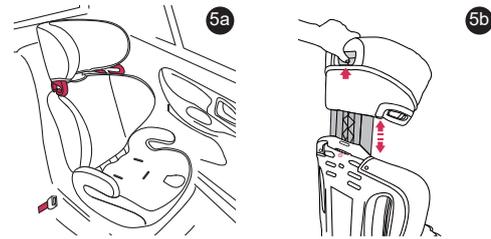

5. Adjust the headrest to fit the child, so the vehicle belt passes over the center of the child's shoulder. (5b)

To remove the backrest

One hand hold the seat base, and the other hand push the backrest strongly. (5d)

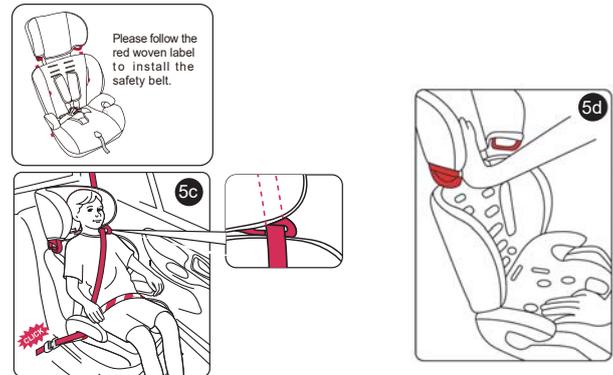

BOOSTER SEAT WITH BACKREST

WARNING

- ! MAKE sure the lap section of the vehicle belt rests as low as possible over the child's hips and that the shoulder section of the vehicle belt is positioned over the center of the child's shoulder.
 - ! VERIFY that the vehicle buckle does not interfere with the armrest or side of the booster seat . If it does, move the child seat to another vehicle seating position.
 - ! DO NOT route the vehicle belt using any other path when using this child seat .
- For assistance contact child seat manufacturer.
- ! DO NOT use 2 point vehicle belts to install this child seat.
 - ! ONLY install this child seat on forward-facing vehicle seats.

BOOSTER SEAT WITHOUT BACKREST

(Child's Weight: 22-36kg)

The child seat MUST be used with a 3-point vehicle seat belt when used as a booster.

1. Remove the backrest from the seat.
2. Put the booster on a forward-facing vehicle seat.
3. Have child sit on booster seat so their back contacts vehicle seat from shoulders to bottom.
4. Position vehicle belt over child .Make sure the vehicle lap belt passes underneath both armrests of the booster seat, and the vehicle shoulder belt passes under the armrest on the side where the seat belt is buckled (6b). Check that the vehicle belt is not twisted and then buckle it. Contact the child restraint manufacturer if in doubt about this point.
5. The vehicle belt passes over the center of the child's shoulder (6b).




WARNING

- ! MAKE sure the lap section of the vehicle belt rests as low as possible over the child's hips and that the shoulder section of the vehicle belt is positioned over the center of the child's shoulder. If the child's eyes are above the vehicle seat back (if no headrest exists) or the top of the vehicle headrest, then the child is too large to use this child seat.
- ! VERIFY that the vehicle buckle does not interfere with the armrest or side of the booster seat (4h). If it does, move the child seat to another vehicle seating position.
- ! DO NOT route the vehicle belt using any other path when using this child seat. For assistance contact child seat manufacturer, or your retailer.
- ! DO NOT use 2 point vehicle belts to install this child seat.
- ! ONLY install this child seat on forward-facing vehicle seats.

REMOVING THE COVER

1. Remove the harness and harness buckle and detach the backrest from the seat. Please refer to previous sections.
2. Remove the headrest cover. (7a,7b)
3. Remove the backrest cover. (7c)
4. Remove the cushion cover. (7d)

To install the cover, please reverse the above steps.

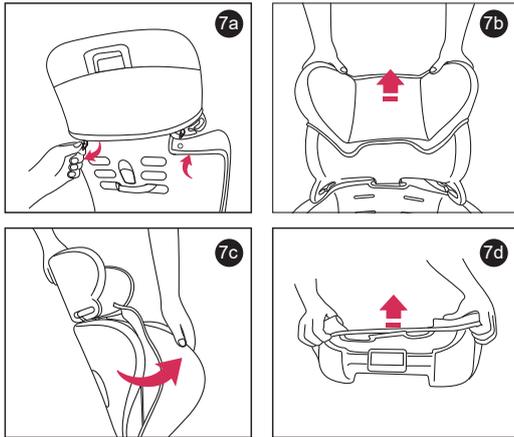

CARE AND MAINTENANCE

Periodically inspect your child seat for worn or damaged parts. If damaged parts are found, replace the child seat.

COVER

The fabric parts can be cleaned according to the instructions on the washing label.

BUCKLE

Food, drink, or other debris may collect inside the harness buckle which can affect proper function. Wash in warm water until clean. Be sure you can hear an audible click to make sure the buckle is working properly.

HARNESS and PLASTIC SEAT SHELL

Wipe clean using warm water and mild soap.

WARRANTY

The warranty period starts from the date of purchase and is valid for a period of 12 months. The warranty is only applicable to material and production defects. The date of purchase can only be proven with the original sales receipt. This warranty is only applicable to the original owner and is not transferable. The warranty is only applicable to products that have not been adapted by the user. In the case of any defects, the owner is required to return the product to retailer.

The manufacturer is not liable for any damages other than those products supplied or manufactured by Goodbaby.